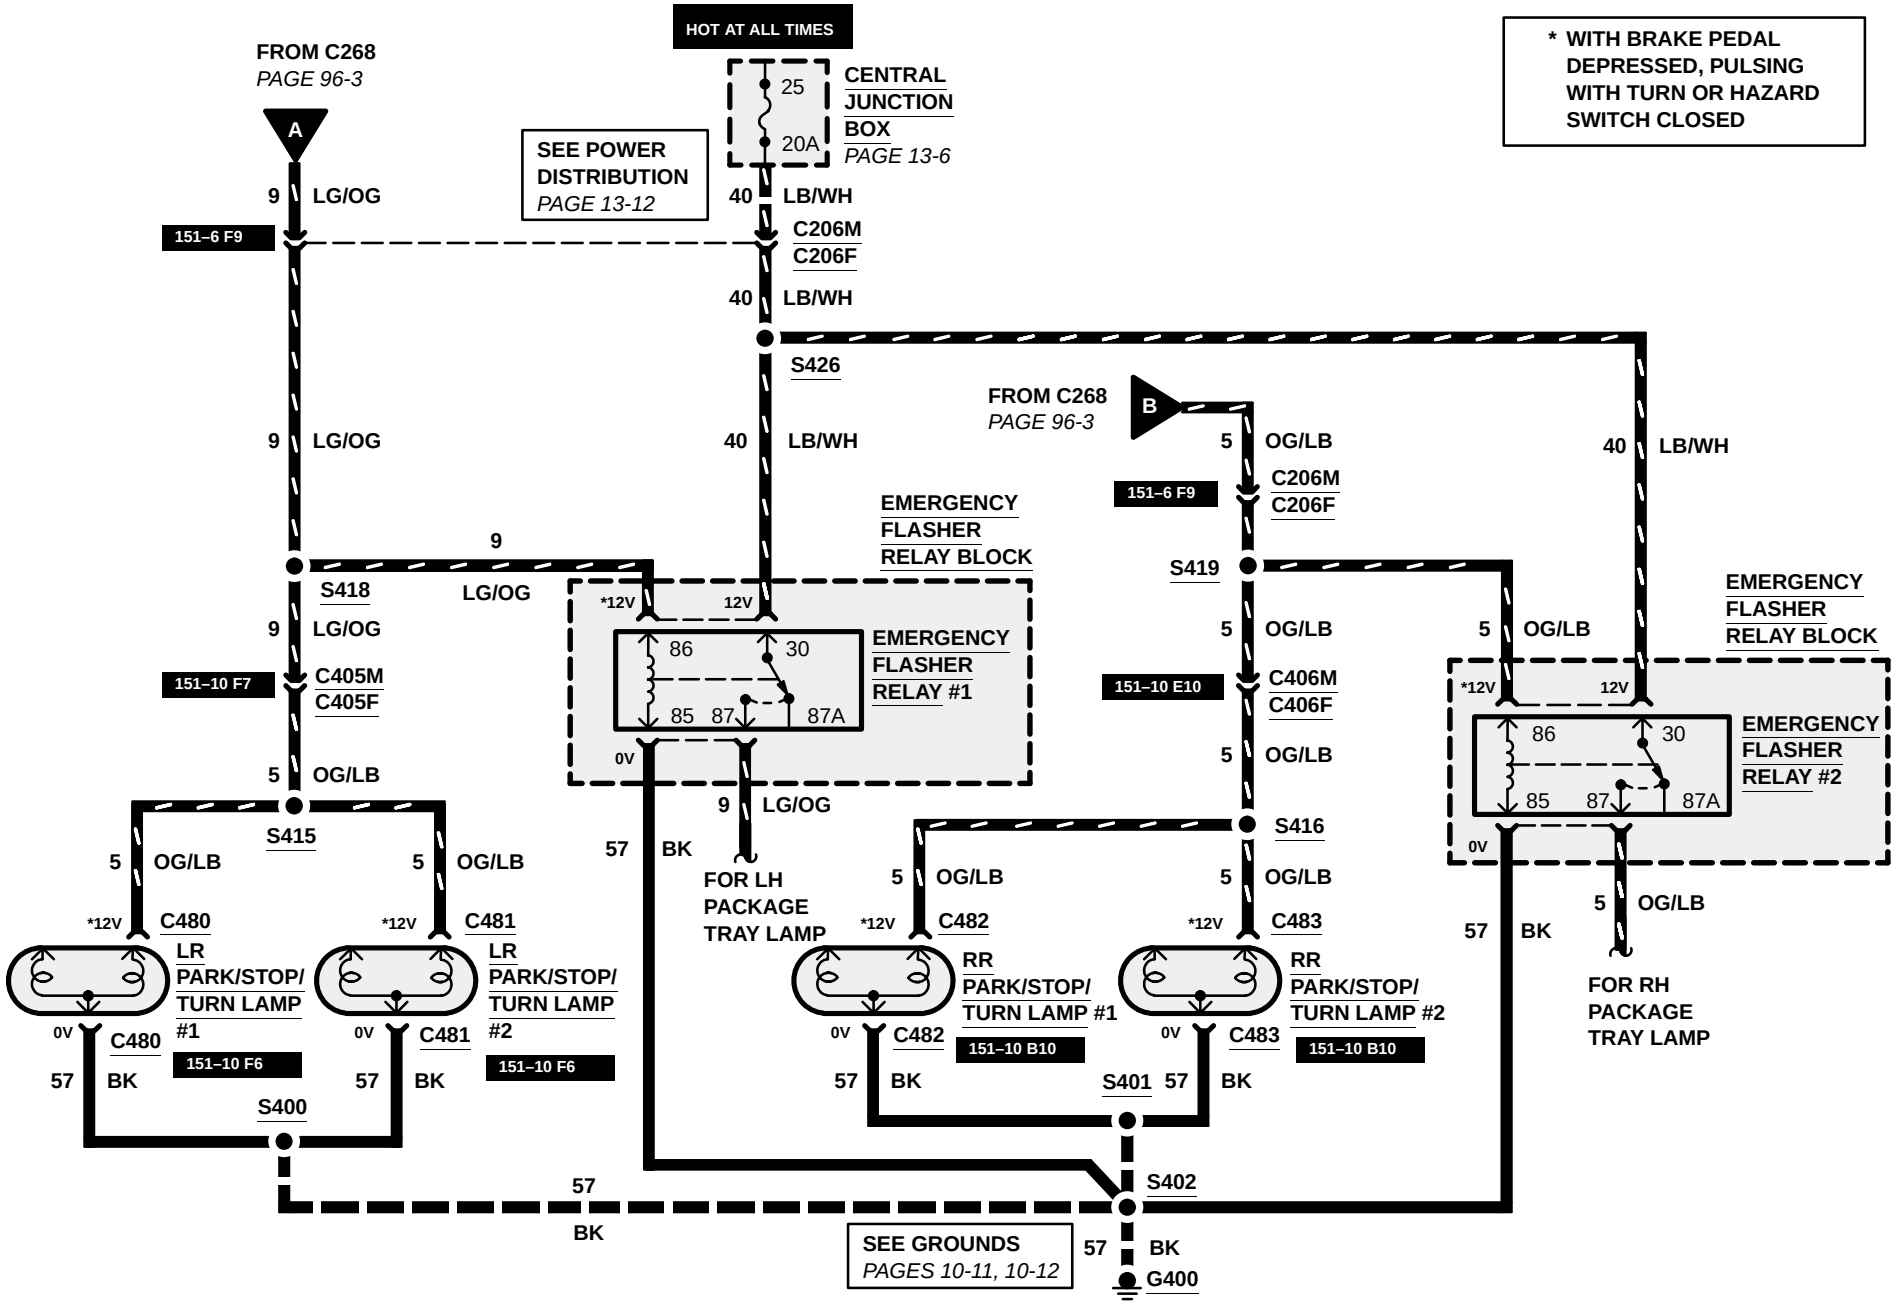
HOT AT ALL TIMES
FROM C268
PAGE 96-3
A
SEE POWER DISTRIBUTION
PAGE 13-12
25
20A
CENTRAL JUNCTION BOX
PAGE 13-6
* WITH BRAKE PEDAL DEPRESSED, PULSING WITH TURN OR HAZARD SWITCH CLOSED
9 LG/OG
151–6 F9
40 LB/WH
C206M
C206F
40 LB/WH
S426
9 LG/OG
40 LB/WH
FROM C268
PAGE 96-3
B
5 OG/LB
151–6 F9
C206M
C206F
40 LB/WH
EMERGENCY FLASHER RELAY BLOCK
9
S418
LG/OG
*12V
12V
86
30
85
87
87A
EMERGENCY FLASHER RELAY #1
S419
9 LG/OG
151–10 F7
C405M
C405F
5 OG/LB
151–10 E10
C406M
C406F
5 OG/LB
0V
5 OG/LB
EMERGENCY FLASHER RELAY BLOCK
EMERGENCY FLASHER RELAY #2
9 LG/OG
S415
S416
57 BK
FOR LH PACKAGE TRAY LAMP
5 OG/LB
5 OG/LB
*12V
C480
LR PARK/STOP/ TURN LAMP #1
C481
LR PARK/STOP/ TURN LAMP #2
C482
RR PARK/STOP/ TURN LAMP #1
C483
RR PARK/STOP/ TURN LAMP #2
0V
C480
57 BK
151–10 F6
C481
57 BK
151–10 F6
C482
57 BK
151–10 B10
C483
57 BK
151–10 B10
S401
S400
57 BK
S402
57 BK
FOR RH PACKAGE TRAY LAMP
SEE GROUNDS
PAGES 10-11, 10-12
57 BK
G400