C425

14A344

A201
Trailer tow control unit

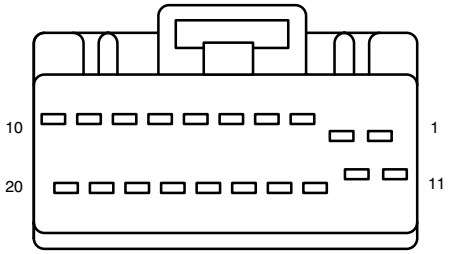

F20017

Pin	Circuit	Circuit function
1	30S-ND16A (RD/BU)	Voltage supplied at all times (not overload protected), Switched
2	87-ND29 (BN/BU)	Trailer: Tail, License, Side, Clearance and I.D.
3	–	not used
4	88-ND28 (YE)	Trailer: Left Turn and Stop if Independent Stop not provided
5	–	not used
6	–	not used
7	–	not used
8	–	not used
9	31S-ND18 (BK/YE)	Ground, Switched
10	31S-ND19 (BK/BU)	Ground, Switched

Pin	Circuit	Circuit function
11	30S-ND16B (RD/BU)	Voltage supplied at all times (not overload protected), Switched
12	31-ND16 (BK)	Ground
13	–	not used
14	96-ND31 (GN/BU)	Trailer: Right Turn and Stop if Independent Stop not provided
15	–	not used
16	–	not used
17	–	not used
18	–	not used
19	31S-ND22 (BK/WH)	Ground, Switched
20	31S-ND21 (BK/OG)	Ground, Switched

C426

9L468

B16
Wheel speed sensor, right rear

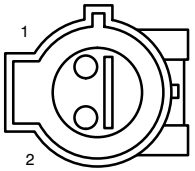

F02085

Pin	Circuit	Circuit function
1	7-CF40 (YE/GN)	Voltage DC supplied at all times (sensor)
2	8-CF40 (WH/GN)	Sensor signal