C456 (GN)

14A488

N255
Liftgate door lock switch

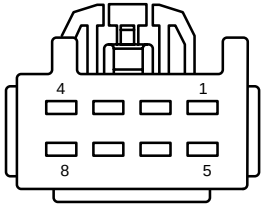

F08217

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	120 (PK/LG)	Door unlock relay, control
4	1205 (BK)	Ground
5	14 (BN)	Power, Exterior lamps
6	–	not used
7	119 (PK/YE)	Door lock relay, control
8	–	not used

C457

14A583

M245
Liftgate lock actuator

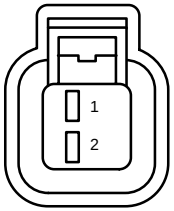

F02069

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	118 (PK/OG)	Door unlock, output
	77 (DB/YE)	

C461

13A409

E109
Reversing lamp, right (13411)

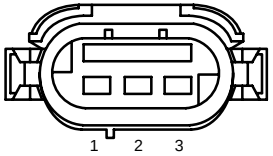

F03099

Pin	Circuit	Circuit function
1	1205 (BK)	Ground
2	–	not used
3	140 (BK/PK)	Voltage supplied in reverse

C462

14A583

E35
License plate lamp, right



F02073

Pin	Circuit	Circuit function
1	109 (VT/WH)	Power, Exterior lamps
2	1205 (BK)	Ground