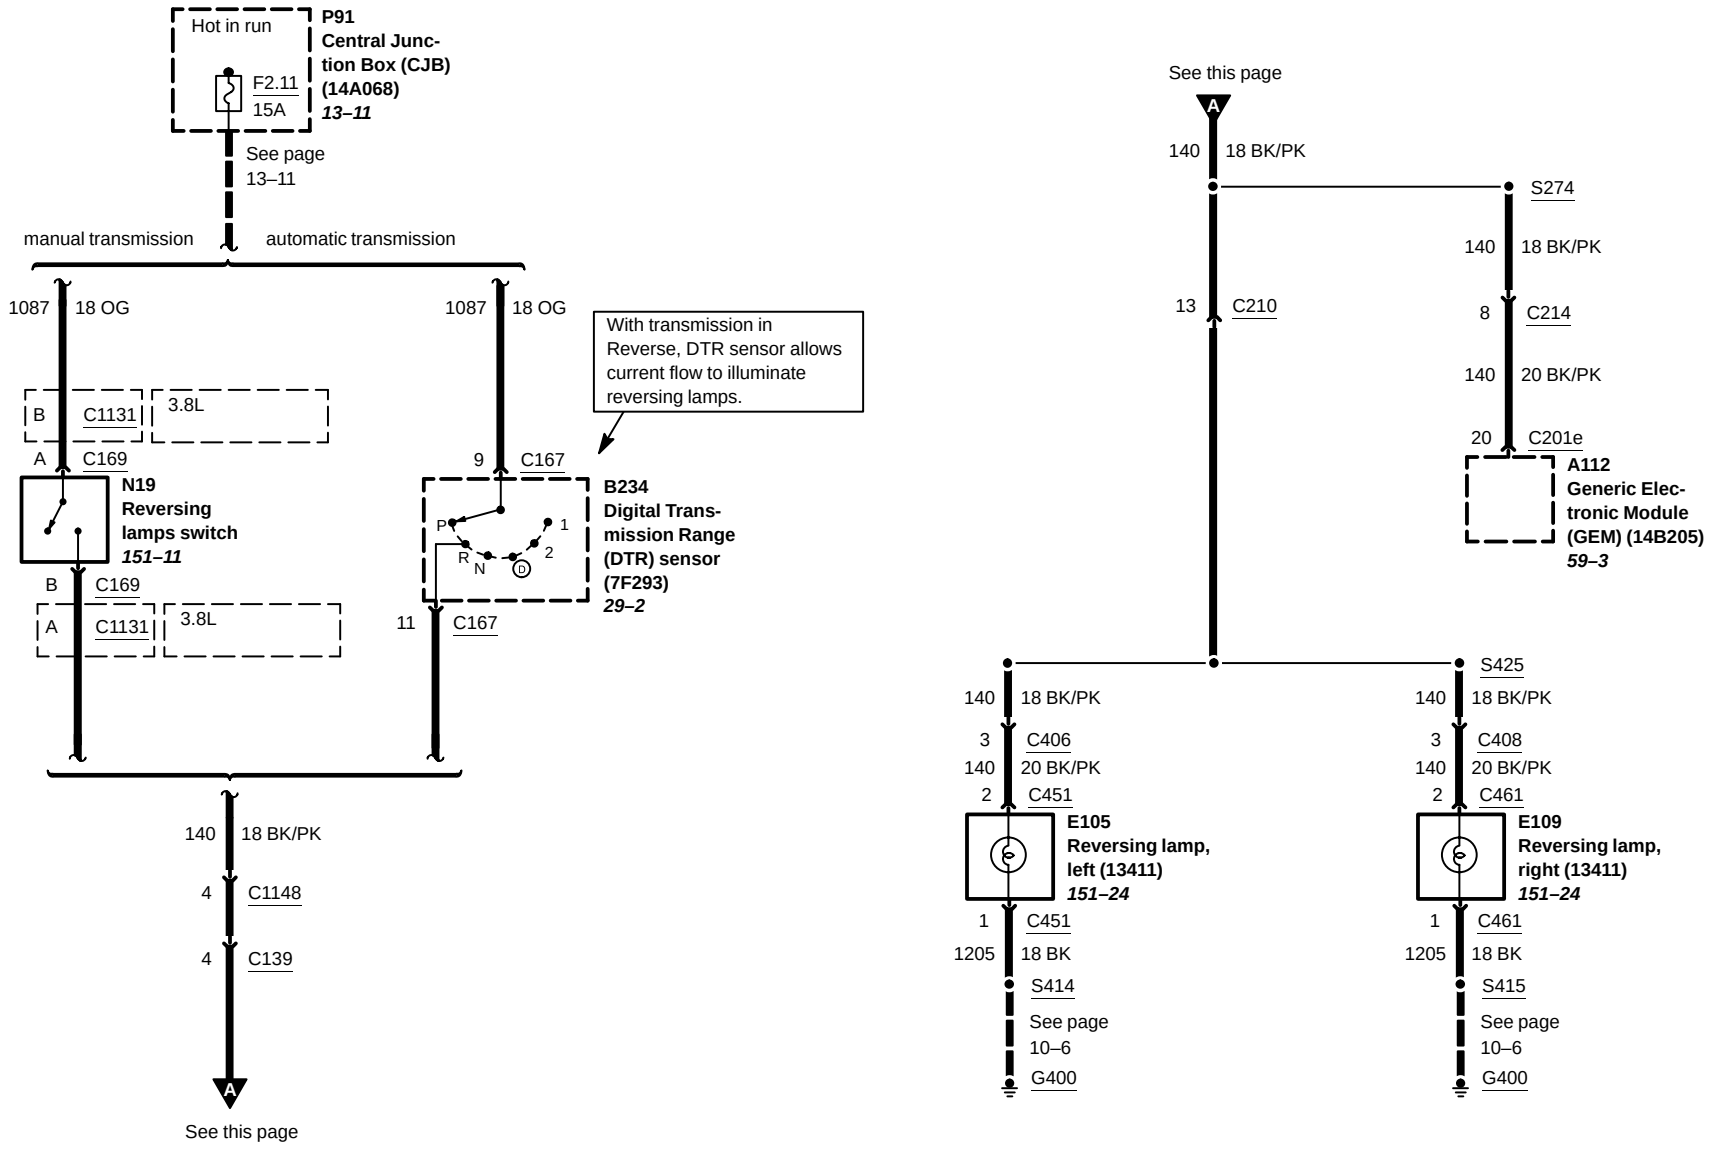
Hot in run
F2.11
15A
P91
Central Junction Box (CJB)
(14A068)
13–11
See page
13–11
manual transmission
automatic transmission
1087
18 OG
1087
18 OG
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
B
C1131
3.8L
A
C169
N19
Reversing lamps switch
151–11
B
C169
A
C1131
3.8L
9
C167
P
R
N
D
1
2
B234
Digital Transmission Range (DTR) sensor
(7F293)
29–2
11
C167
140
18 BK/PK
4
C1148
4
C139
A
See this page
See this page
A
140
18 BK/PK
13
C210
S274
140
18 BK/PK
8
C214
140
20 BK/PK
20
C201e
A112
Generic Electronic Module (GEM) (14B205)
59–3
140
18 BK/PK
3
C406
140
20 BK/PK
2
C451
E105
Reversing lamp, left (13411)
151–24
1
C451
1205
18 BK
S414
See page
10–6
G400
S425
140
18 BK/PK
3
C408
140
20 BK/PK
2
C461
E109
Reversing lamp, right (13411)
151–24
1
C461
1205
18 BK
S415
See page
10–6
G400