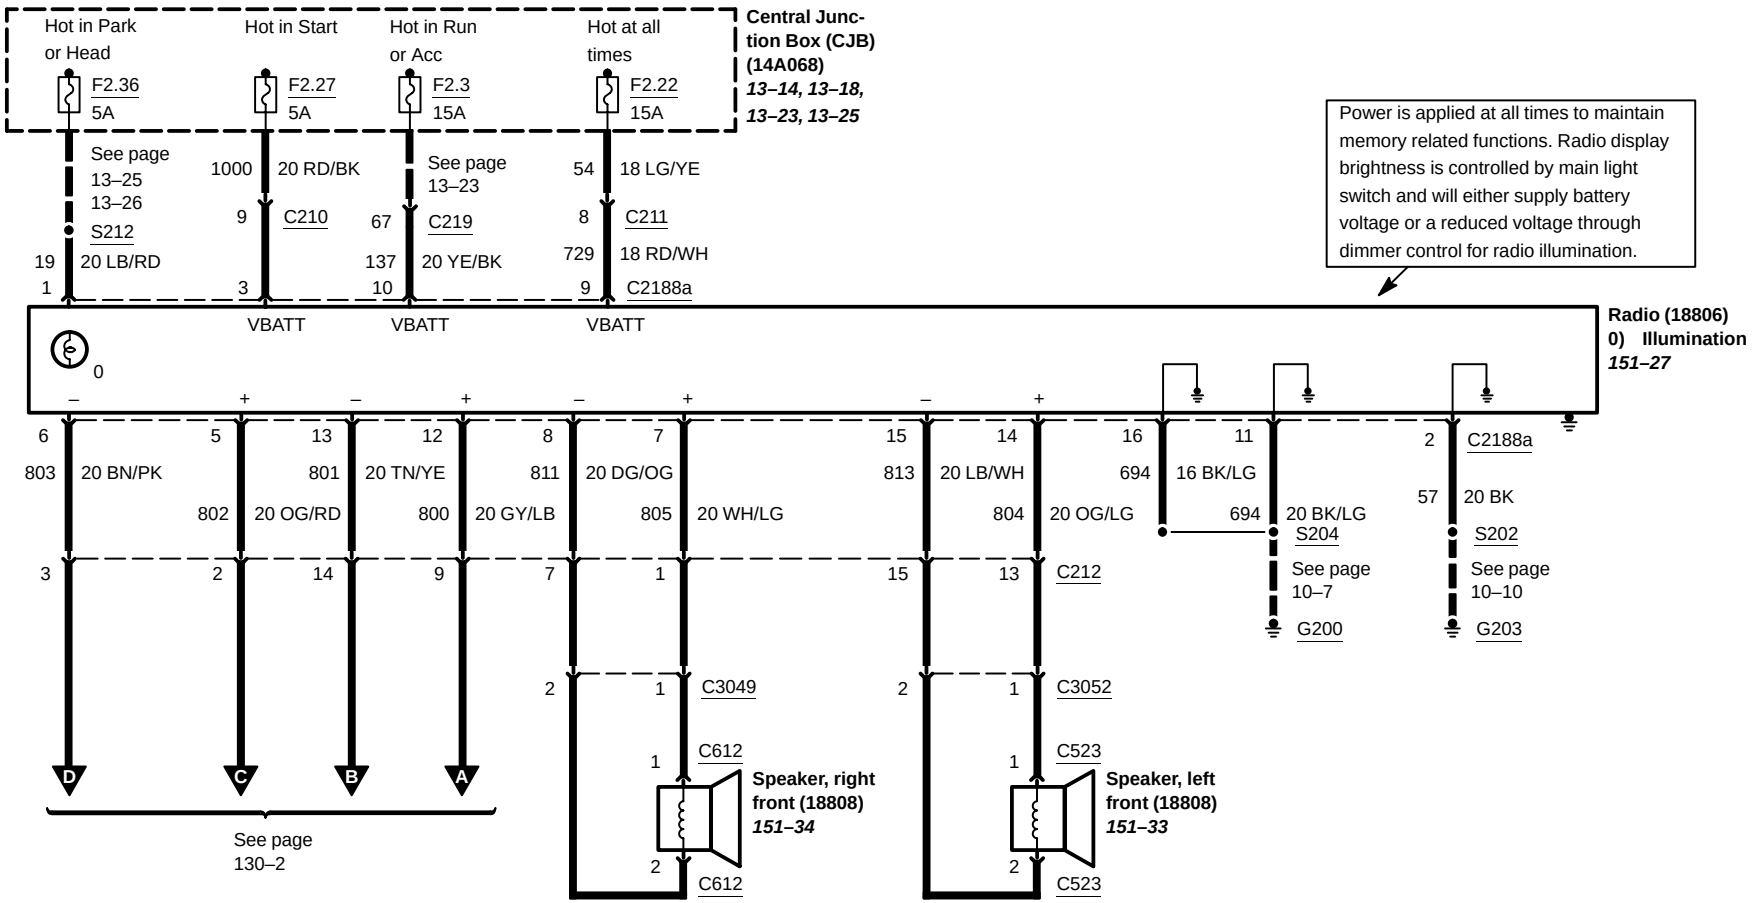
Hot in Park or Head
F2.36 5A
Hot in Start
F2.27 5A
Hot in Run or Acc
F2.3 15A
Hot at all times
F2.22 15A
Central Junction Box (CJB) (14A068)
13–14, 13–18, 13–23, 13–25
See page 13–25 13–26
S212
19 20 LB/RD
1
1000 20 RD/BK
9 C210
3
VBATT
See page 13–23
67 C219
137 20 YE/BK
10
VBATT
54 18 LG/YE
8 C211
729 18 RD/WH
9 C2188a
VBATT
Power is applied at all times to maintain memory related functions. Radio display brightness is controlled by main light switch and will either supply battery voltage or a reduced voltage through dimmer control for radio illumination.
Radio (18806) 0) Illumination
151–27
0
6 803 20 BN/PK 3
5 802 20 OG/RD 2
13 801 20 TN/YE 14
12 800 20 GY/LB 9
8 811 20 DG/OG 7
7 805 20 WH/LG 1
15 813 20 LB/WH 15
14 804 20 OG/LG 13 C212
16 694 16 BK/LG
11 694 20 BK/LG S204
See page 10–7
G200
2 C2188a
57 20 BK S202
See page 10–10
G203
2 1 C3049
1 C612
2 C612
Speaker, right front (18808)
151–34
2 1 C3052
1 C523
2 C523
Speaker, left front (18808)
151–33
D C B A
See page 130–2