C604

*with crew cab

14A005

Window adjust switch, passenger side

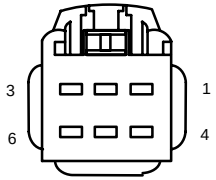

F06148

Pin	Circuit	Circuit function
1	313 (WH/YE)	Window switch, feed, right front, Up
2	334 (RD/YE)	Window motor, feed, Down
3	*193 (YE/LG)	switched power
3	400 (LB/BK)	
4	–	not used
5	333 (YE/RD)	Window motor, feed, Up
6	314 (TN/LB)	Window switch, feed, right front, Down

C605 (GN)

14A005

Door lock switch, passenger side (14028)

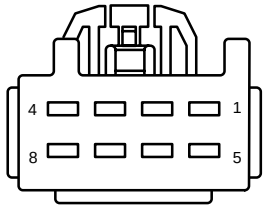

F08193

Pin	Circuit	Circuit function
1	57 (BK)	Illumination Ground
2	120 (PK/LG)	Unlock Switch Circuit – without remote keyless entry
2	–	not used – with remote keyless entry
3	118 (PK/OG)	Unlock Switch Circuit – without remote keyless entry
3	1210 (BK/WH)	Unlock Switch Circuit – with remote keyless entry
4	116 (RD/BK)	Voltage supplied at all times (overload protected) – without remote keyless entry
4	57 (BK)	Ground – with remote keyless entry
5	194 (PK)	Switch illumination
6	–	not used
7	117 (PK/BK)	Lock Switch Circuit – without remote keyless entry
7	1211 (WH/RD)	Lock Switch Circuit – with remote keyless entry
8	119 (PK/YE)	Lock Switch Circuit – without remote keyless entry
8	–	not used – with remote keyless entry

C606

14A005

Door entry lamp, right front (13776)

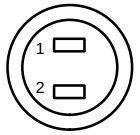

F02063

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	53 (BK/LB)	Interior lamp relay, switched power, output