F23007

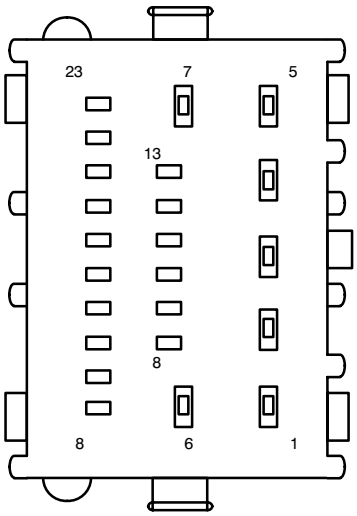

C104

14401

A112
Generic Electronic
Module (GEM)

Pin	Circuit	Circuit Function
1	91-DK20 (BK/RD)	Ground
2	49S-LG22 (BU/YE)	Pulsed power feed (overload protected), switched
3	49S-LG15 (BU/BK)	Pulsed power feed (overload protected), switched
4	8-KA19 (WH/BK)	Sensor signal
5	32-KA6 (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-KA6A (WH/BK)	Switched between: Battery voltage, Ground or Open
	32-KA6 (WH/VT)	Switched between: Battery voltage, Ground or Open (Plus for: front down, open, mirror leftward, unlock, on)
6	–	not used
7	–	not used
8	30S-TA31A (RD/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	15S-AA72 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	31S-GL15 (BK/OG)	Ground, switched
11	31S-GL6A (BK/OG)	Ground (power return), switched
12	15S-AA17 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected), switched
13	31S-HB9 (BK/WH)	Ground, switched
14	29S-LE18 (OG/YE)	Voltage supplied at all times (overload protected), switched
15	31S-TA32 (BK/WH)	Ground, switched
16	8-EE9 (WH/GN)	Sensor signal
17	91S-LG1 (BK/YE)	Ground, switched
18	91S-JA13A (BK/RD)	Ground, switched
	91S-JA13 (BK/RD)	Ground, switched
19	91S-LG2 (BK/BU)	Ground, switched
20	31S-HB22 (BK/GN)	Ground, switched
21	31S-GL16 (BK/BU)	Ground, switched
	31S-GL9 (BK/YE)	Ground, switched
22	31S-GL9 (BK/YE)	Ground, switched
	31S-GL16 (BK/BU)	Ground, switched
23	91S-LG8 (BK/OG)	Ground, switched