Seat adjust switch, driver side front (14A701)

Schematic

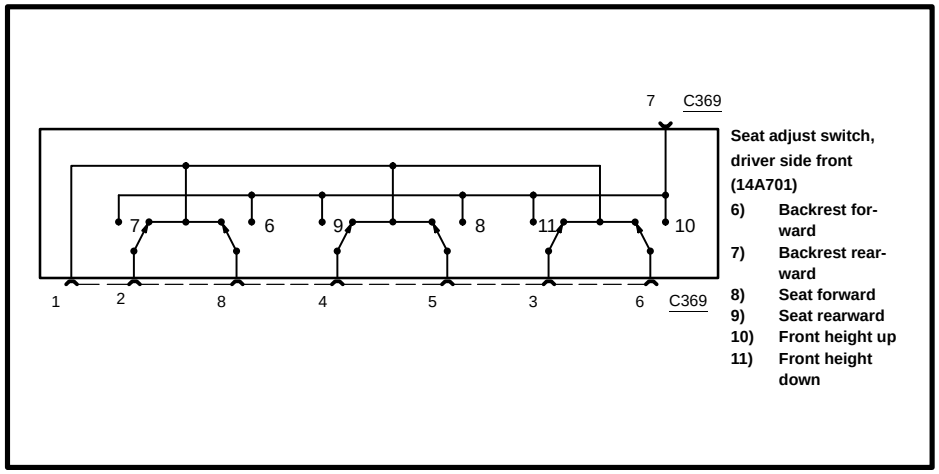

Terminals

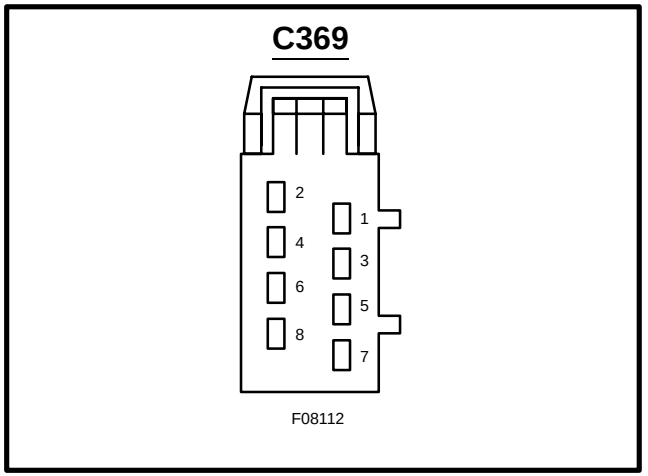

Component testing procedure

Circuit to test	Connect self–powered test light or ohmmeter to terminals	Move switch to these positions	A good switch will indicate
Forward/Rearward circuit	7 and 5	Forward	Closed circuit
	3 and 1	Forward	Closed circuit
	7 and 3	Rearward	Closed circuit
	5 and 1	Rearward	Closed circuit
Front up/down circuit	7 and 2	Up	Closed circuit
	8 and 1	Up	Closed circuit
	7 and 8	Down	Closed circuit
	2 and 1	Down	Closed circuit
Rear up/down circuit	7 and 4	Up	Closed circuit
	6 and 1	Up	Closed circuit
	7 and 6	Down	Closed circuit
	4 and 1	Down	Closed circuit