C278

14401

N82
Brake pedal position switch (13480)



F05167

Pin	Circuit	Circuit function
1	574 (BK/PK)	Ground
2	810 (RD/LG)	Brake pedal position switch (13480), input
3	1001 (WH/YE)	Voltage supplied at all times (overload protected)
4	511 (LG)	Brake pedal position switch (13480), to stoplamps
5	10 (LG/RD)	Voltage supplied at all times (overload protected)

C279

14401

N405
Transmission control switch

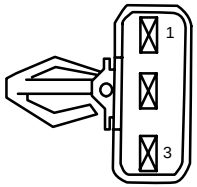

F03249

Pin	Circuit	Circuit function
1	224 (TN/WH)	PCM, to transmission overdrive cancel switch
2	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
3	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)

C282

14401

N316
Inertia Fuel Shutoff (IFS) switch (9D362)



F03032

Pin	Circuit	Circuit function
1	–	not used
2	787 (PK/BK)	Fuel pump, Power
3	238 (DG/YE)	Fuel pump relay, switched power, output

C286

14401

B72
Sunload sensor (19E663)



F02431

Pin	Circuit	Circuit function
1	468 (BN)	Sunload sensor (19E663), signal
2	470 (PK/BK)	signal, return

C287

14401

B202
Autolamp sensor

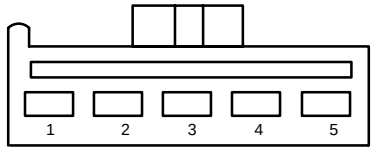

F05135

Pin	Circuit	Circuit function
1	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
2	57 (BK)	Ground
3	7 (LG/YE)	autolamps, control
4	1525 (LG/RD)	autolamps, signal
5	–	not used