C520 (WH)

14631

Exterior rear view mirror, driver side (17682)

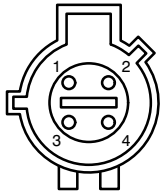

F04075

Pin	Circuit	Circuit function
1	541 (DB)	Up/Down mirror movement
2	945 (YE/BK)	Mirror motor, feed
3	540 (RD)	Right/Left mirror movement
4	–	not used

C521 (WH)

14631

Exterior rear view mirror, driver side (17682)

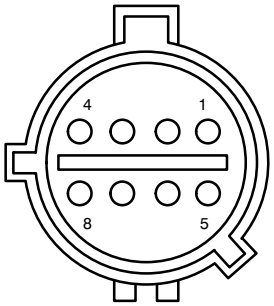

F08052

Pin	Circuit	Circuit function
1	541 (DB)	Up/Down mirror movement
2	540 (RD)	Right/Left mirror movement
3	–	not used
4	–	not used
5	945 (YE/BK)	Mirror motor, feed
6	57 (BK)	Ground
7	55 (BK/PK)	Cargo lamp, output
8	–	not used

C523 (BK)

14631

Speaker, left front (18808)

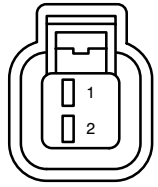

F02069

Pin	Circuit	Circuit function
1	804 (OG/LG)	Speaker, left front (18808) +
2	813 (LB/WH)	Speaker, left front (18808) –

C524 (GY)

14631

Power window motor, driver side front (23395)



F02073

Pin	Circuit	Circuit function
1	992 (WH/BK)	Master window adjust switch (14529), feed, Up
2	903 (RD)	Window motor, feed, Down

C525 (GY)

14631

Door lock actuator, driver side (218A42)

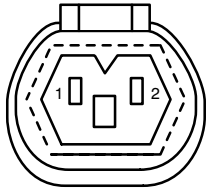

F02227

Pin	Circuit	Circuit function
1	117 (PK/BK)	Door lock, output
2	163 (RD/OG)	Driver door unlock relay, switched power
	118 (PK/OG)	Door unlock, output