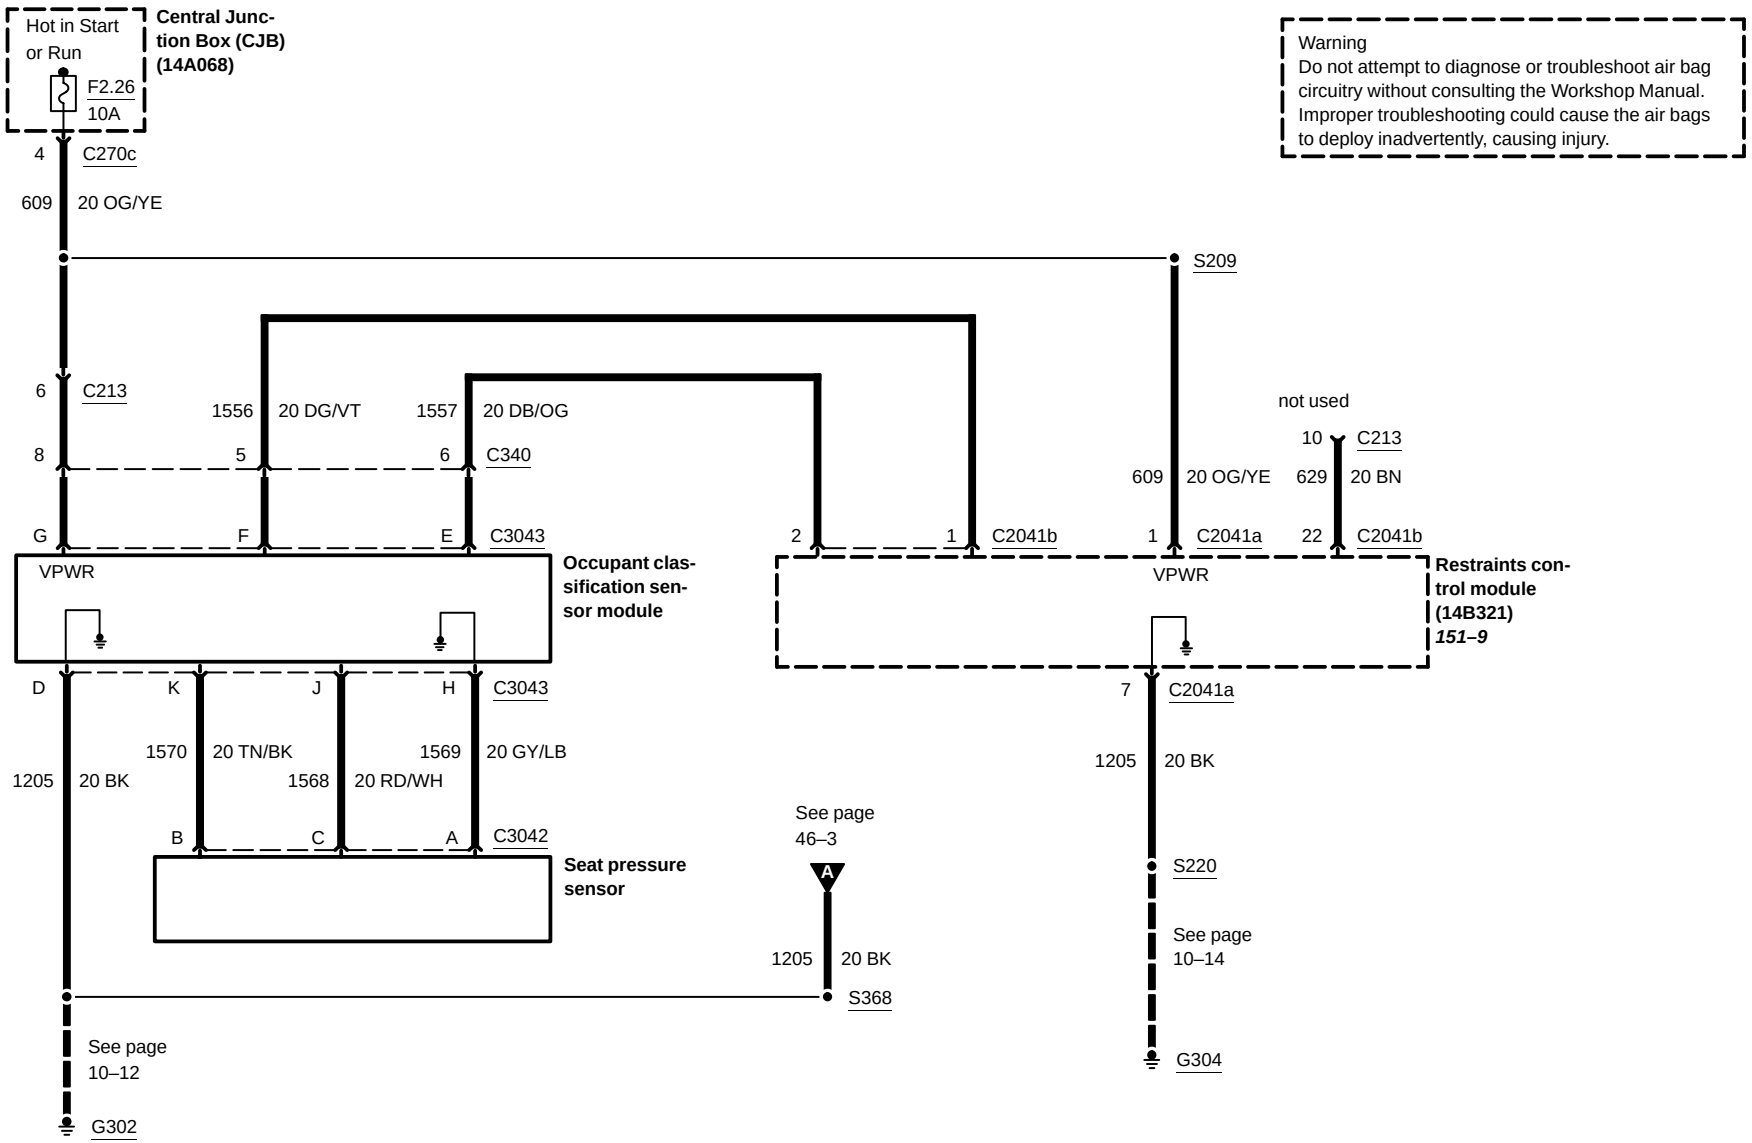
Hot in Start or Run
F2.26
10A
Central Junction Box (CJB) (14A068)
4
C270c
609
20 OG/YE
Warning
Do not attempt to diagnose or troubleshoot air bag circuitry without consulting the Workshop Manual. Improper troubleshooting could cause the air bags to deploy inadvertently, causing injury.
S209
6
C213
8
1556
20 DG/VT
5
1557
20 DB/OG
6
C340
G
F
E
C3043
VPWR
Occupant classification sensor module
2
1
C2041b
609
20 OG/YE
1
C2041a
not used
10
C213
629
20 BN
22
C2041b
VPWR
Restraints control module (14B321)
151–9
D
K
J
H
C3043
1205
20 BK
1570
20 TN/BK
1568
20 RD/WH
1569
20 GY/LB
B
C
A
C3042
Seat pressure sensor
See page 46–3
A
1205
20 BK
S368
7
C2041a
1205
20 BK
S220
See page 10–14
G304
See page 10–12
G302