## C1174 (BK)

### 12A581

Injector Driver Module (IDM)

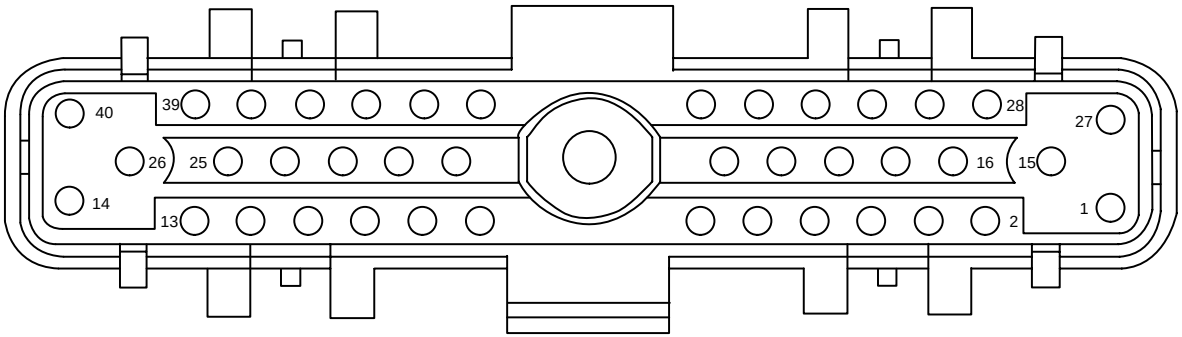


F40013

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 359 (GY/RD) | signal, return |
| 3 | – | not used |
| 4 | 818 (GY/WH) | Injector Driver Module (IDM) power relay, to, Powertrain Control Module (PCM) (12A650) |
| 5 | – | not used |
| 6 | 555 (TN) | Fuel injector 1, control |
| 7 | 558 (BN/LB) | Fuel injector 4, control |
| 8 | 559 (TN/BK) | Fuel injector 5, control |
| 9 | 562 (LB) | Fuel injector 8, control |
| 10 | – | not used |
| 11 | – | not used |
| 12 | – | not used |
| 13 | – | not used |
| 14 | 876 (DG/LG) | Power, input |
| 15 | – | not used |
| 16 | 817 (YE/LB) | cylinder identification, signal, output |
| 17 | 821 (BN/OG) | fuel delivery command, signal, output |
| 18 | 48 (BK) | Shield |
| 19 | 560 (LG/OG) | Fuel injector 6, control |
| 20 | 561 (TN/RD) | Fuel injector 7, control |

| Pin | Circuit | Circuit function |
|---|---|---|
| 21 | 557 (BN/YE) | Fuel injector 3, control |
| 22 | 556 (WH) | Fuel injector 2, control |
| 23 | 878 (PK/YE) | Voltage in Run (overload protected) |
| 24 | 1087 (OG) | Voltage in Run (overload protected) |
| 25 | – | not used |
| 26 | 570 (BK/WH) | Ground |
| 27 | – | not used |
| 28 | – | not used |
| 29 | – | not used |
| 30 | – | not used |
| 31 | – | not used |
| 32 | – | not used |
| 33 | – | not used |
| 34 | – | not used |
| 35 | – | not used |
| 36 | – | not used |
| 37 | – | not used |
| 38 | – | not used |
| 39 | – | not used |
| 40 | – | not used |