C974

15A404

Roof marker lamp, right

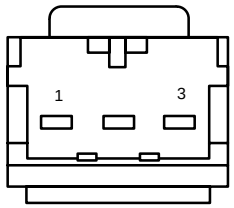

F03235

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	–	not used
3	14 (BN)	Power, Exterior lamps

C976 (WH)

14334

Video display, left

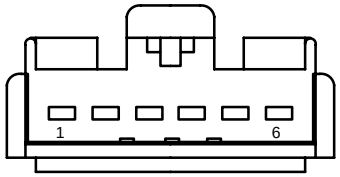

F06086

Pin	Circuit	Circuit function
1	137 (YE/BK)	Voltage in Run or Accessory (overload protected)
2	–	not used
3	57 (BK)	Ground
4	48 (BK)	Shield
5	1540 (DG)	video, input, from, Rear Seat Entertainment (RSE) module +
6	1541 (DB)	video, input, from, Rear Seat Entertainment (RSE) module –

C977 (WH)

14334

Video display, right

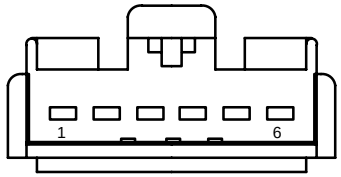

F06086

Pin	Circuit	Circuit function
1	137 (YE/BK)	Voltage in Run or Accessory (overload protected)
2	–	not used
3	57 (BK)	Ground
4	48 (BK)	Shield
5	1540 (DG)	video, input, from, Rear Seat Entertainment (RSE) module +
6	1541 (DB)	video, input, from, Rear Seat Entertainment (RSE) module –

C981 (WH)

14334

Interior lamp

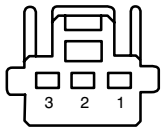

F03299

Pin	Circuit	Circuit Function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground
3	54 (LG/YE)	Voltage supplied at all times (overload protected)