C327

14A699

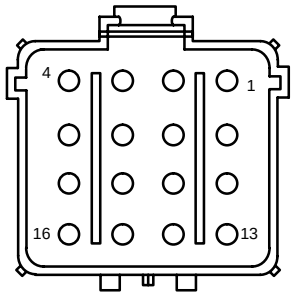

F16034

(1) 461 (OG)
(2) 581 (RD)
(3) 1048 (LB/WH)
(4) 1557 (DB/OG)
(5) 490 (RD)
(6) 676 (PK/OG)
(7) 579 (BK/OG)
(8) 1556 (DG/VT)

14A005

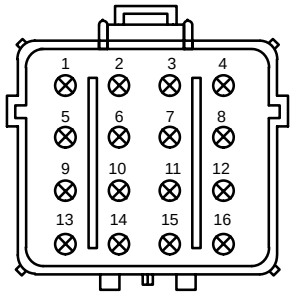

F16087

(9) 1514 (DR/BK)
(10) 298 (VT/OG)
(11) 580 (BN)
(12) 57 (BK)
(13) 919 (GY/BK)
(14) 918 (GY)
(15) NOT USED
(16) 1558 (TN/BK)

C329

14A699

A223
Heated seat module, passenger side front



F14043

Pin	Circuit	Circuit function
1	581 (RD)	Seat heater switch, driver side, to, Heated seat module, driver side front
2	461 (OG)	PCM, to starter motor relay
3	579 (BK/OG)	Heated seats
4	580 (BN)	Heated seats
5	1060 (BK/LB)	Seat cushion heater, passenger side, Sensor, feed
6	1061 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
7	1048 (LB/WH)	Heated seats
8	1064 (YE/LB)	Seat cushion heater, passenger side, heater, feed
9	1066 (GY/LB)	Seat back heater, passenger side, feed
10	1062 (BN/LB)	Seat cushion heater, passenger side, Sensor, return
11	1063 (OG/LB)	Heated seat module, passenger side front
12	1067 (VT/LB)	Seat back heater, passenger side, heater, return
13	1065 (YE/LB)	Seat cushion heater, passenger side, heater, feed
14	57 (BK)	Ground

C328

14A699

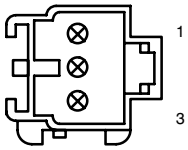

F03062

14A005

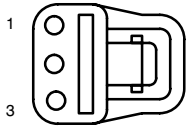

F03035

(1) 1257 (WH/LB)
(2)
(3) 1258 (RD)