C243 (BK)

14401

CD changer
(18D806)

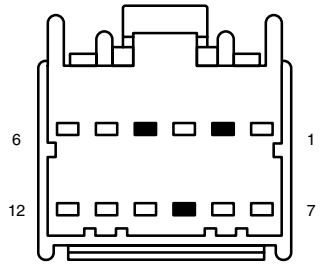

F12103

Pin	Circuit	Circuit function
1	832 (LB/PK)	Audio corporate protocol A
2	–	not used
3	694 (BK/LG)	Ground
4	–	not used
5	856 (VT)	CD changer (18D806), output to Rear Integrated Control Panel (RICP) (19980) – Left +
6	690 (GY)	CD changer (18D806), output to Rear Integrated Control Panel (RICP) (19980) – Right +
7	833 (TN)	Audio corporate protocol B
8	1068 (LG/BK)	Audio System ON (ASYSON)
9	720 (RD/YE)	Voltage supplied at all times (overload protected)
10	48 (BK)	Shield
11	798 (LG/RD)	CD changer (18D806), output to Rear Integrated Control Panel (RICP) (19980) – Left –
12	799 (OG/BK)	CD changer (18D806), output to Rear Integrated Control Panel (RICP) (19980) – Right –

C245 (BK)

14401

Yaw velocity sensor

4X2

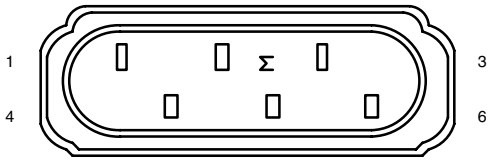

F06126

4X4

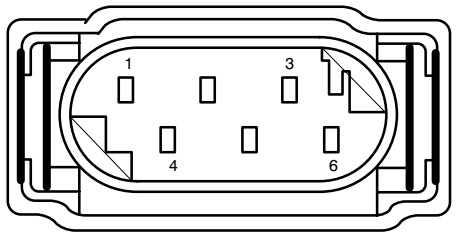

F06299

Pin	Circuit	Circuit function
1	1879 (PK/BK)	CAN2 –
2	1878 (WH/BK)	CAN2 +
3	1574 (DB)	Sensor, Power
4	–	not used
5	1571 (BK)	Sensor signal return (reference/ground)
6	–	not used