G22 -15

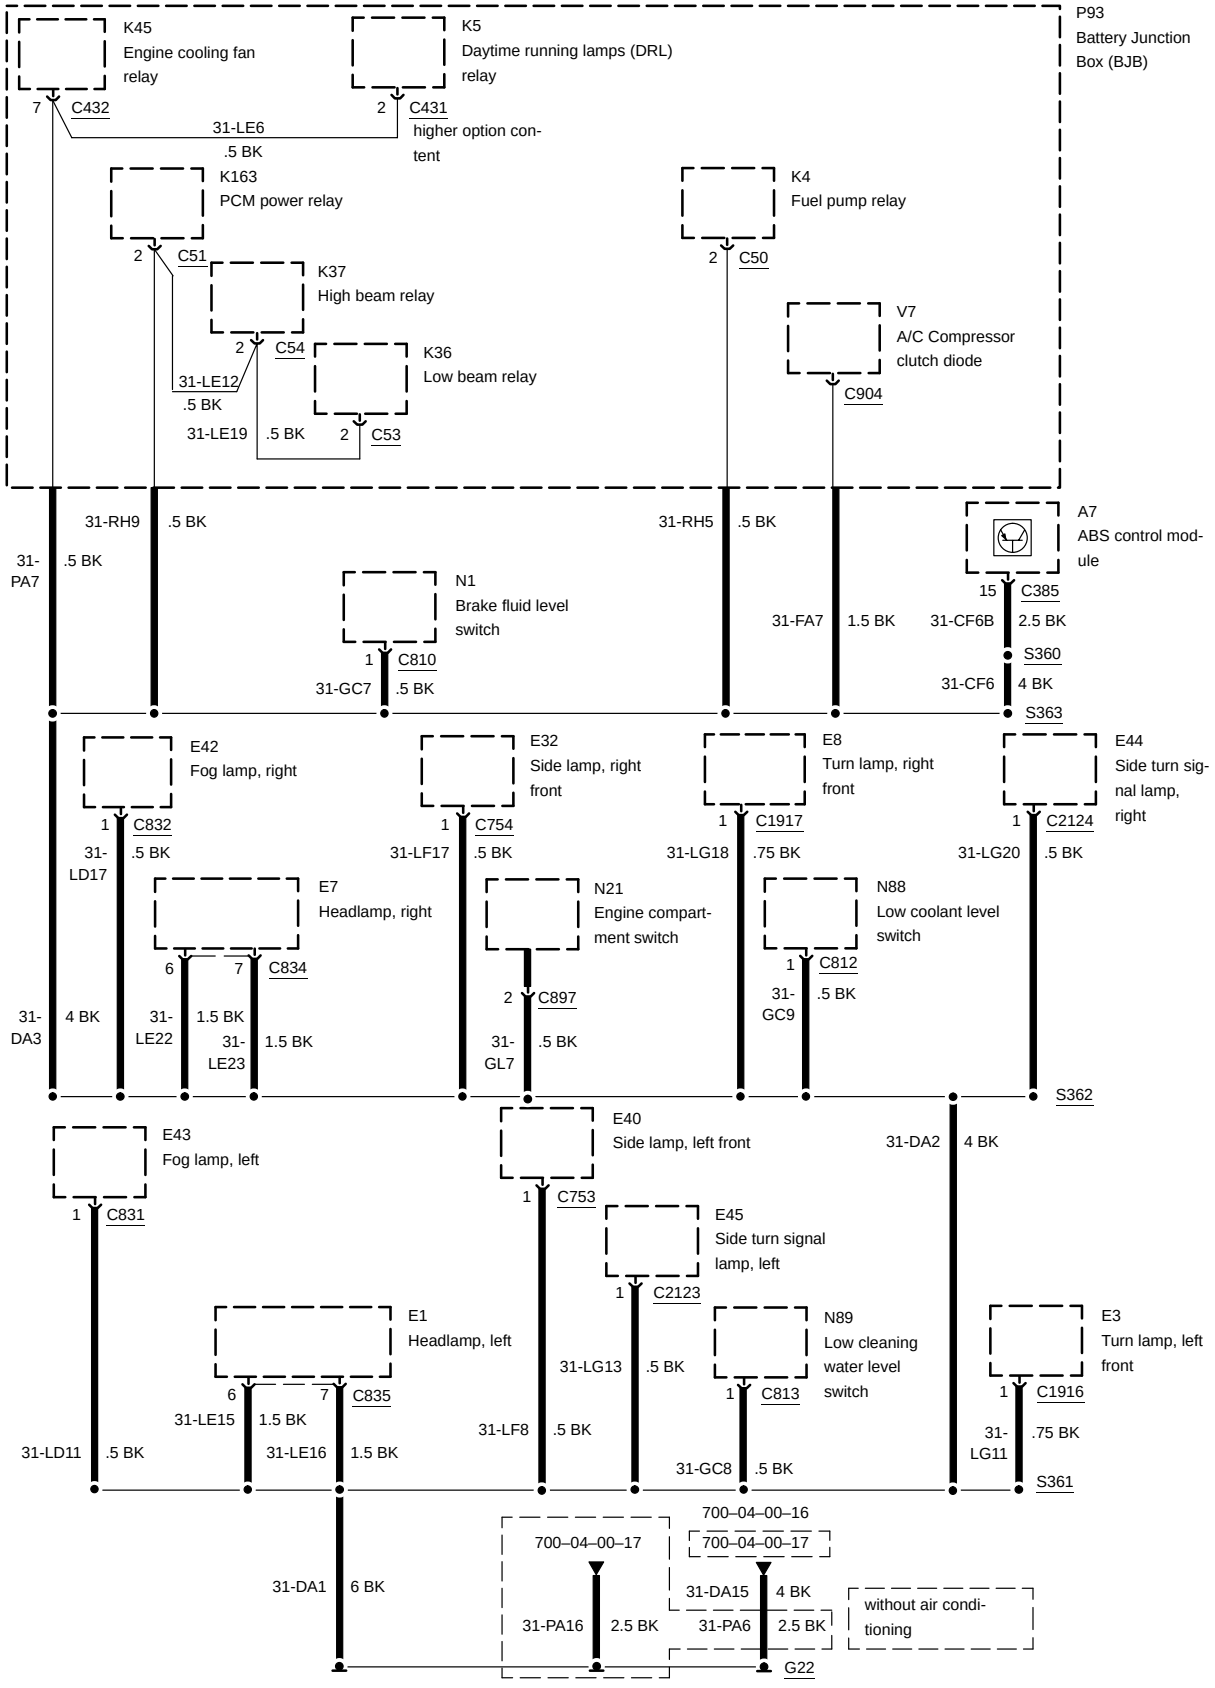
P93
Battery Junction Box (BJB)
K45
Engine cooling fan relay
K5
Daytime running lamps (DRL) relay
7 C432
2 C431
higher option content
31-LE6 .5 BK
K163
PCM power relay
K4
Fuel pump relay
2 C51
2 C50
K37
High beam relay
V7
A/C Compressor clutch diode
2 C54
K36
Low beam relay
C904
31-LE12 .5 BK
31-LE19 .5 BK
2 C53
A7
ABS control module
31-RH9 .5 BK
31-RH5 .5 BK
31-PA7 .5 BK
N1
Brake fluid level switch
15 C385
31-FA7 1.5 BK
31-CF6B 2.5 BK
1 C810
31-GC7 .5 BK
S360
31-CF6 4 BK
S363
E42
Fog lamp, right
E32
Side lamp, right front
E8
Turn lamp, right front
E44
Side turn signal lamp, right
1 C832
1 C754
1 C1917
1 C2124
31-LD17 .5 BK
31-LF17 .5 BK
31-LG18 .75 BK
31-LG20 .5 BK
E7
Headlamp, right
N21
Engine compartment switch
N88
Low coolant level switch
6 7 C834
2 C897
1 C812
31-DA3 4 BK
31-LE22 1.5 BK
31-LE23 1.5 BK
31-GL7 .5 BK
31-GC9 .5 BK
S362
E43
Fog lamp, left
E40
Side lamp, left front
31-DA2 4 BK
1 C831
1 C753
E45
Side turn signal lamp, left
1 C2123
E1
Headlamp, left
N89
Low cleaning water level switch
E3
Turn lamp, left front
6 7 C835
1 C813
1 C1916
31-LE15 1.5 BK
31-LG13 .5 BK
31-LF8 .5 BK
31-LG11 .75 BK
31-LD11 .5 BK
31-LE16 1.5 BK
31-GC8 .5 BK
S361
700–04–00–16
700–04–00–17
700–04–00–17
31-DA1 6 BK
31-DA15 4 BK
31-PA16 2.5 BK
31-PA6 2.5 BK
without air conditioning
G22