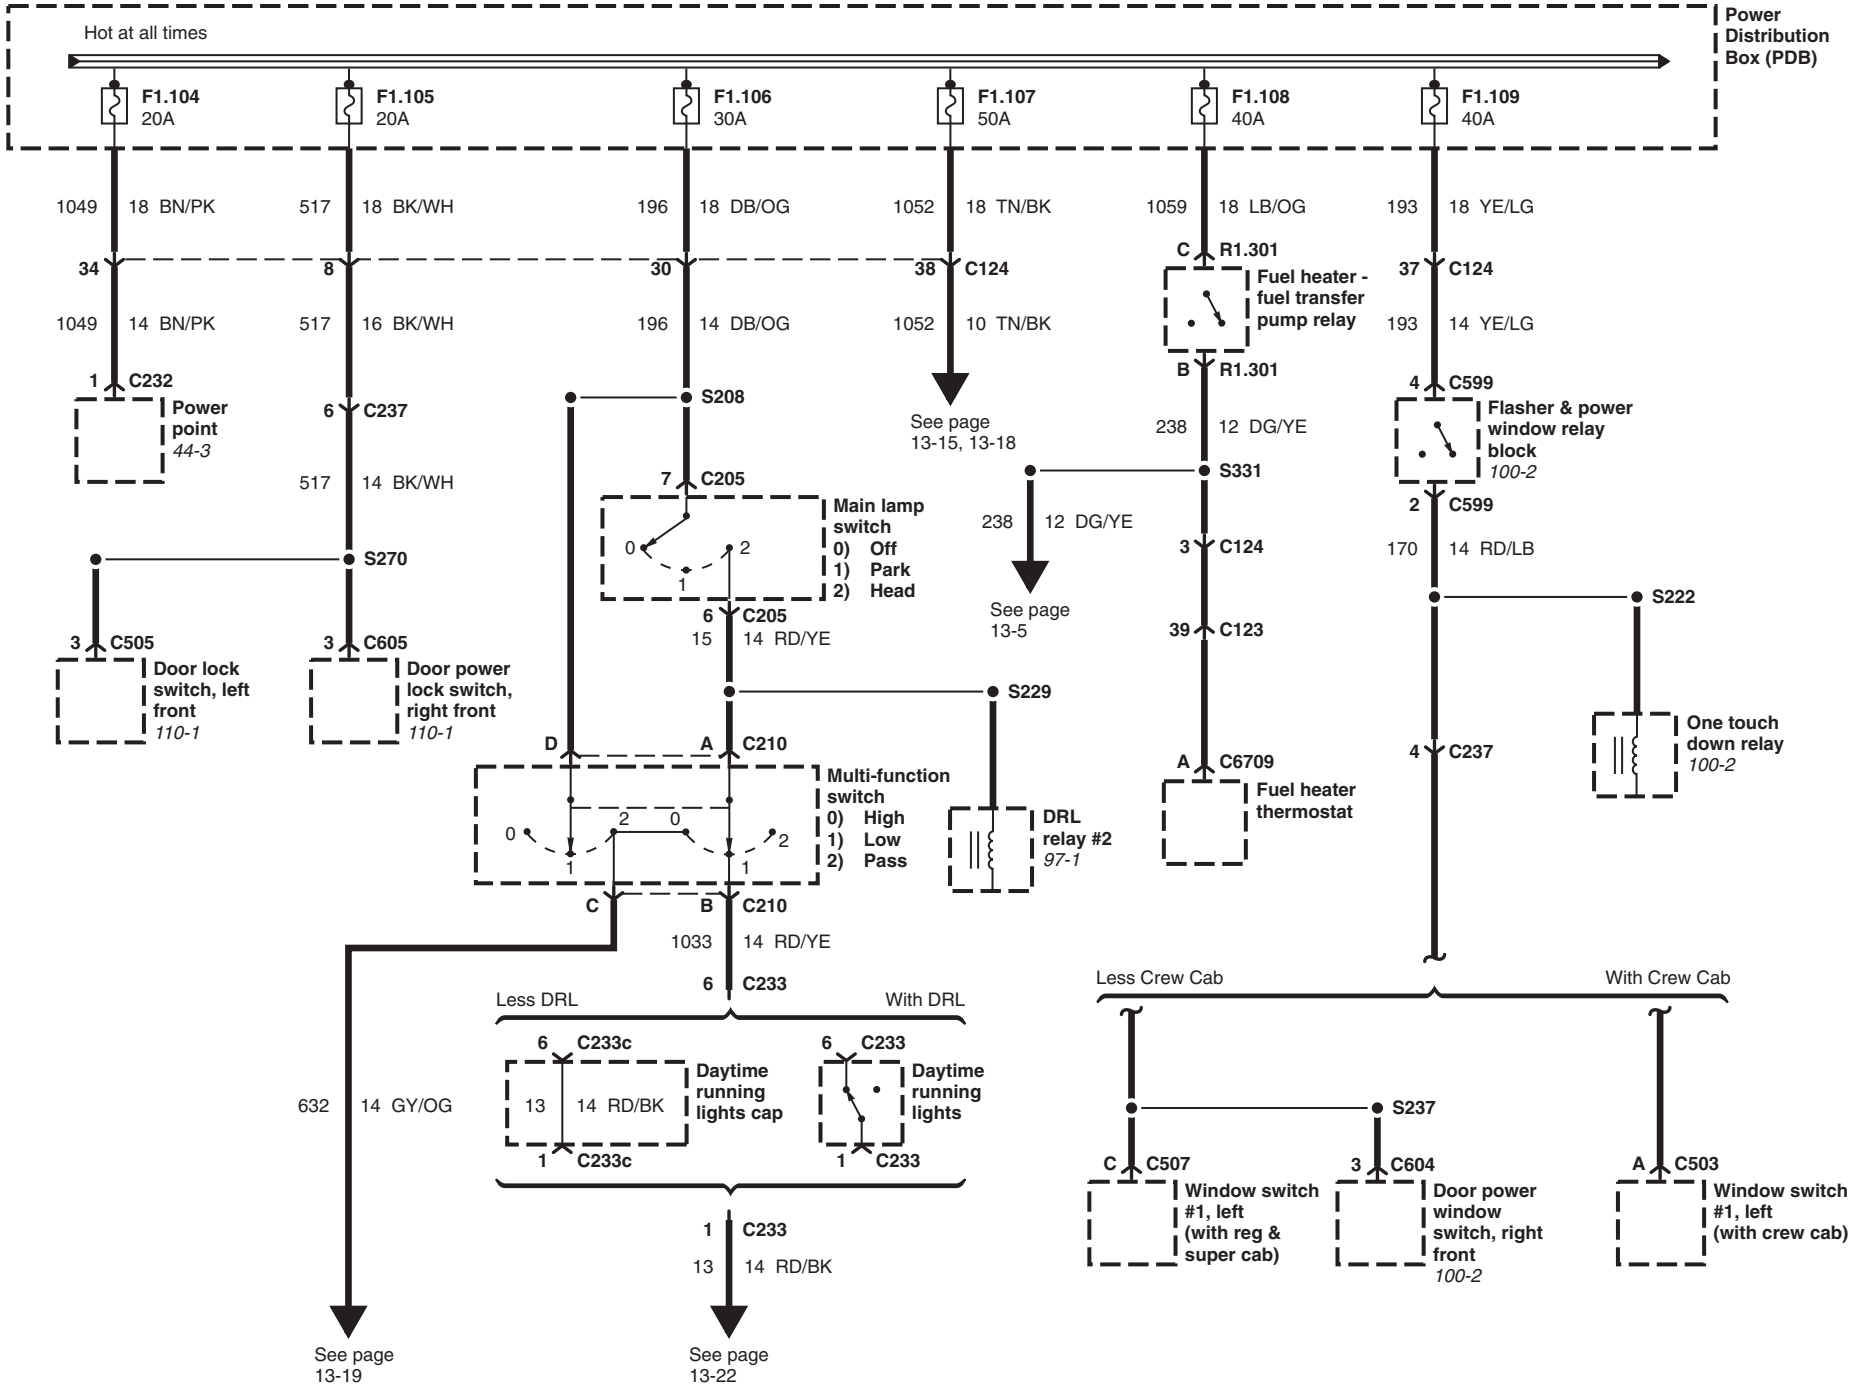
Hot at all times
Power Distribution Box (PDB)
F1.104 20A
F1.105 20A
F1.106 30A
F1.107 50A
F1.108 40A
F1.109 40A
1049 18 BN/PK
517 18 BK/WH
196 18 DB/OG
1052 18 TN/BK
1059 18 LB/OG
193 18 YE/LG
34
8
30
38 C124
C R1.301
37 C124
1049 14 BN/PK
517 16 BK/WH
196 14 DB/OG
1052 10 TN/BK
Fuel heater - fuel transfer pump relay
193 14 YE/LG
B R1.301
1 C232
Power point 44-3
6 C237
S208
See page 13-15, 13-18
238 12 DG/YE
S331
4 C599
Flasher & power window relay block 100-2
517 14 BK/WH
7 C205
Main lamp switch 0) Off 1) Park 2) Head
2 C599
3 C124
170 14 RD/LB
S270
6 C205
15 14 RD/YE
See page 13-5
S222
3 C505
Door lock switch, left front 110-1
3 C605
Door power lock switch, right front 110-1
S229
39 C123
One touch down relay 100-2
D A C210
Multi-function switch 0) High 1) Low 2) Pass
A C6709
Fuel heater thermostat
4 C237
DRL relay #2 97-1
C B C210
1033 14 RD/YE
6 C233
Less DRL
With DRL
Less Crew Cab
With Crew Cab
6 C233c
13 14 RD/BK
1 C233c
Daytime running lights cap
6 C233
1 C233
Daytime running lights
632 14 GY/OG
S237
C C507
Window switch #1, left (with reg & super cab)
3 C604
Door power window switch, right front 100-2
A C503
Window switch #1, left (with crew cab)
1 C233
13 14 RD/BK
See page 13-19
See page 13-22