AUXILIARY AIR CONDITIONING JUMPER HARNESS INSTALLATION

AFFECTED VEHICLES: **CERTAIN 1999-2001 MODEL YEAR WINDSTARS EQUIPPED WITH AUXILIARY AIR CONDITIONING**

OVERVIEW

This procedure details the installation of a jumper harness between the auxiliary blower motor relay module and the auxiliary blower motor resistor pack. **Please note that there are distinct differences in the procedure between the four-door and three-door versions.**

INSPECTION

1. Open the liftgate and look through the left quarter trim panel to verify that the auxiliary blower motor wire harness has a white-colored wrapping.
   - If the white wrapping is present, the vehicle does not need to be repaired.
   - If the white wrapping is not present or not visible, use a flashlight to verify that the auxiliary blower motor electrical connector has a black wire installed to the left of the connector locking tab. There will be an orange wire with a red tracer to the right of the locking tab. See Figure 1.
   - If the black wire is present, the vehicle does not need to be repaired.
   - If the black wire is not present, the vehicle must be repaired.

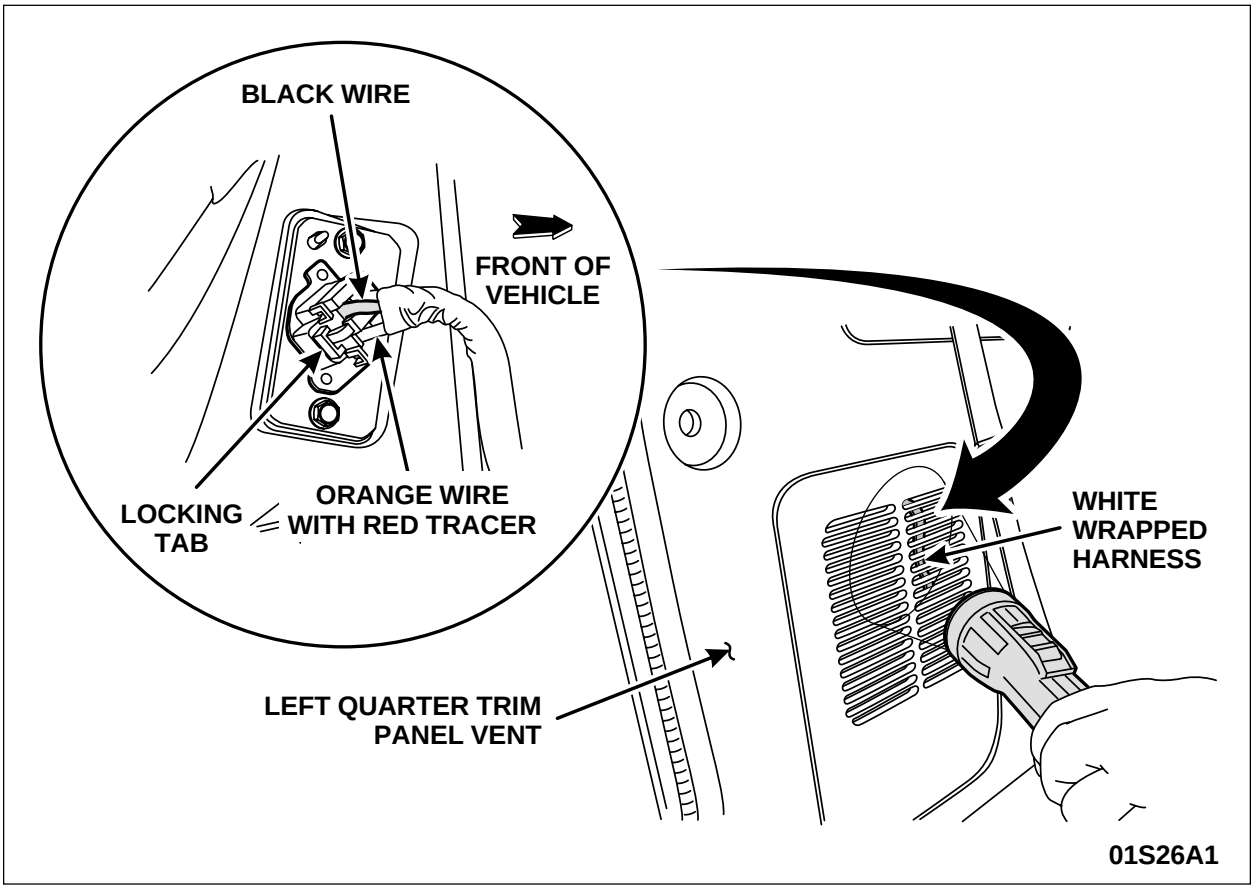


FIGURE 1

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

REMOVAL

1. Install a memory saver, then disconnect battery negative cable.
2. NOTE: On four-door models, fold the second row left seat (or bench seat, if equipped) forward for easier access to the C-pillar and quarter trim panel.

   Remove the rear bench seat assembly and the liftgate scuff plate.
3. On three-door models, remove the second row seat assembly (bench or captain's chairs).
4. On four-door models, remove left side sliding door scuff plate.
5. On four-door models, lift the left side C-pillar safety belt guide cover and remove the safety belt guide nut.
6. On four-door models, remove the upper C-pillar trim panel.
7. Lift the left side D-pillar safety belt guide cover and use safety belt bolt bit T77L-2100-A, or equivalent, to remove the safety belt guide bolt.
8. Remove any pushpin fastener(s) or screw(s) that secure the D-pillar trim panel.
9. Remove the D-pillar trim panel.
10. Remove the two (2) quarter trim panel screws by the liftgate.
11. Remove the pushpin retainer by the C-pillar (four-door model only), then the two (2) pushpin retainers by the floor. Then remove the quarter trim panel from the vehicle.
12. Remove the relay module located above the blower motor. See Figure 2.

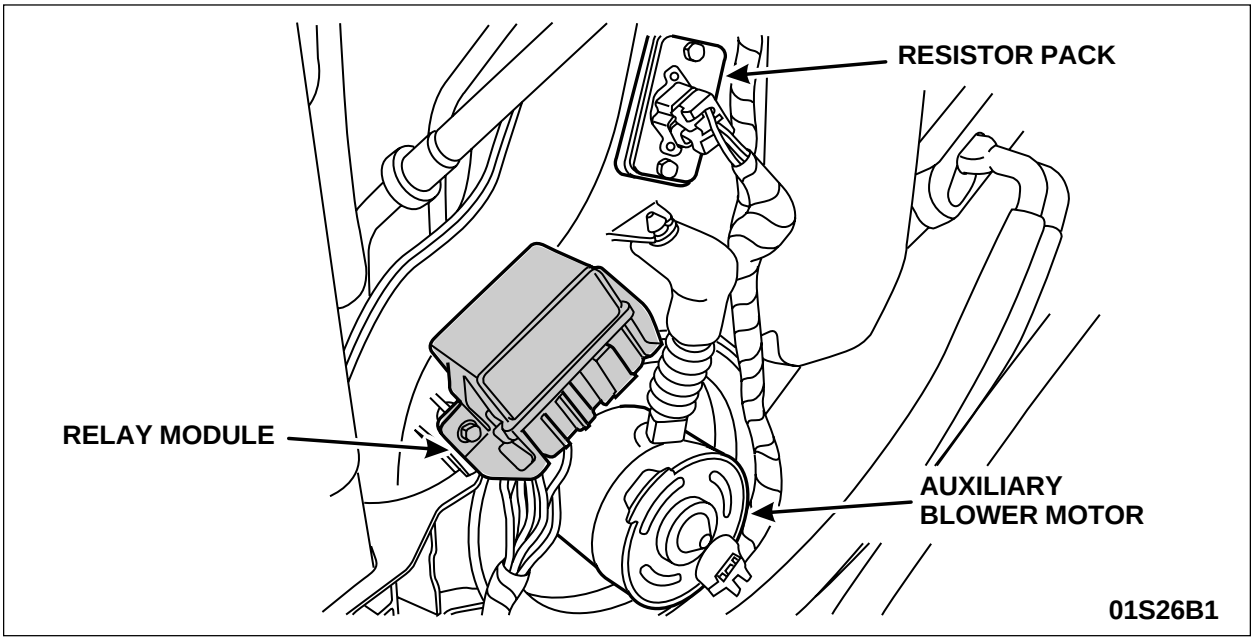


FIGURE 2

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

13. Remove the relay module cover and both relays from the module. Then remove the relay module locking wedge. See Figure 3.
14. Remove the black wire and terminal from the relay module using a small screwdriver, or similar pick tool, to depress the terminal locking tab. See Figure 3.

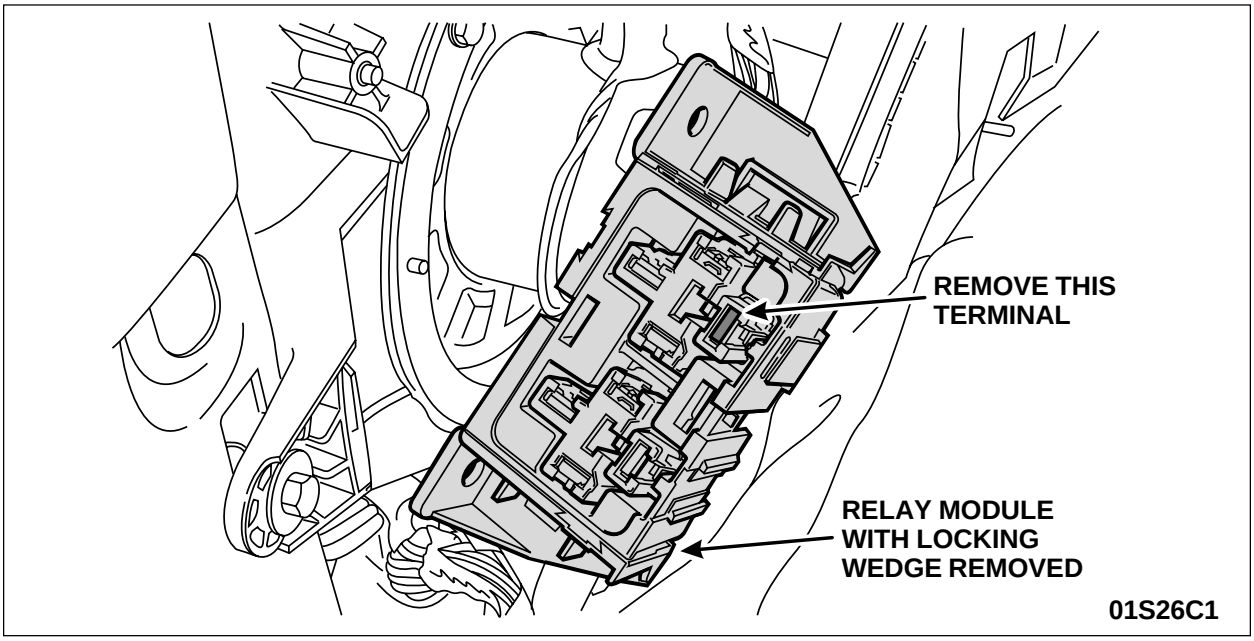


FIGURE 3

15. Cut the terminal end off the black wire, wrap the wire end with electrical tape to insulate the wire, and then tape the wire to the harness.

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

16. Disconnect the auxiliary blower motor resistor pack connector, and remove the locking wedge from the connector. See Figure 4.

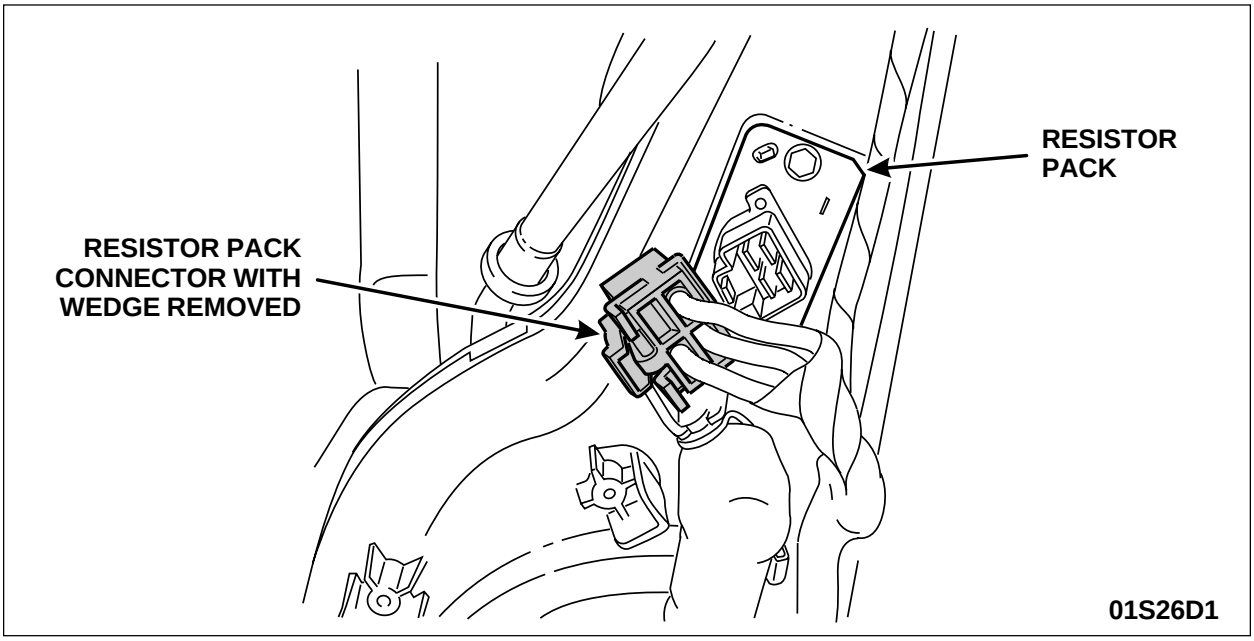


FIGURE 4

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

INSTALLATION

1. **CAUTION: The terminals on each end of the jumper harness are different. Make sure to match the correct terminal to the correct connector before installation. The end of the jumper harness with the identification tag goes into the resistor pack connector.**

   Insert the end of the jumper harness with the identification tag into the resistor pack connector. Lightly pull on the jumper harness to ensure that the terminal is locked into the connector, and install the locking wedge onto the connector. See Figure 5.

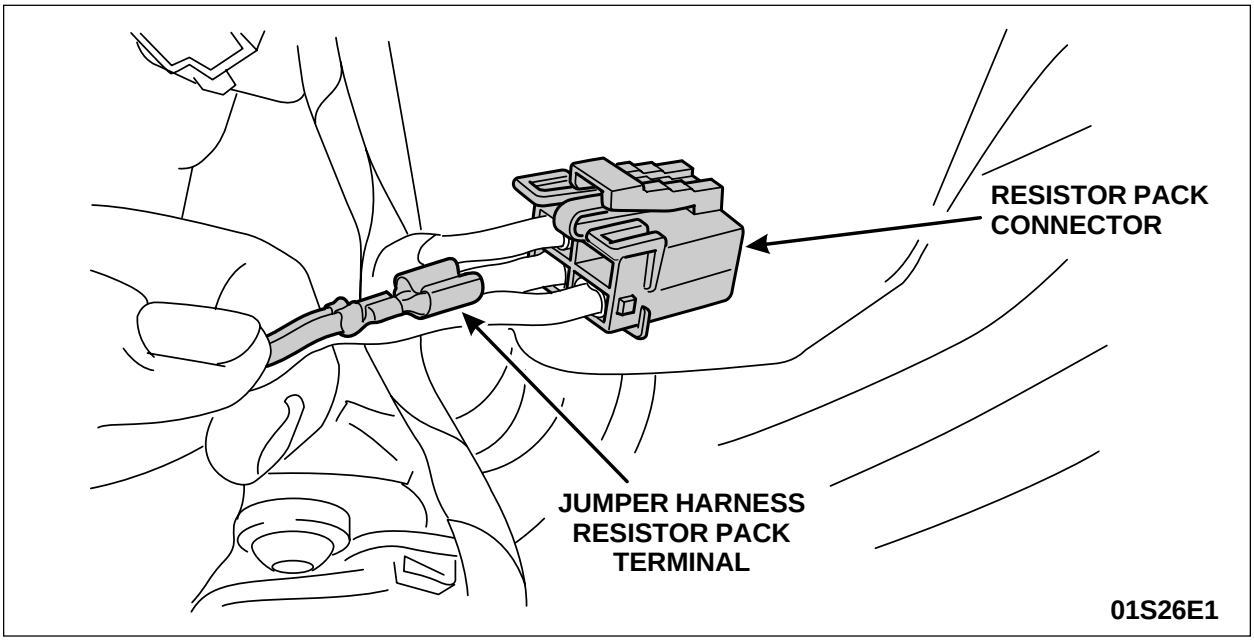


FIGURE 5

2. Reconnect the auxiliary blower motor resistor pack connector to the resistor pack.

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

3. Insert the opposite end of the jumper harness into the cavity of the relay module from which the black wire was removed. Lightly pull on the jumper harness to ensure that the terminal is locked into the connector. See Figure 6.

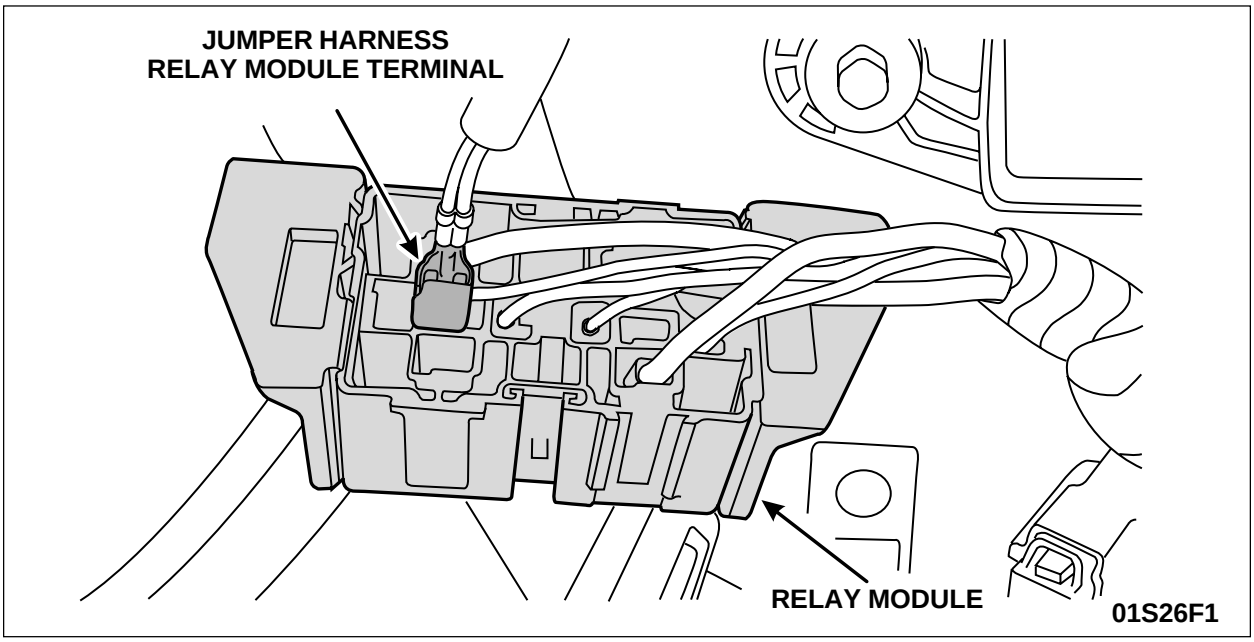


FIGURE 6

4. Install the relay module locking wedge into the relay module. Install both relays and install the cover.
5. Route the jumper harness behind the relay module before installing the module. See Figure 7.

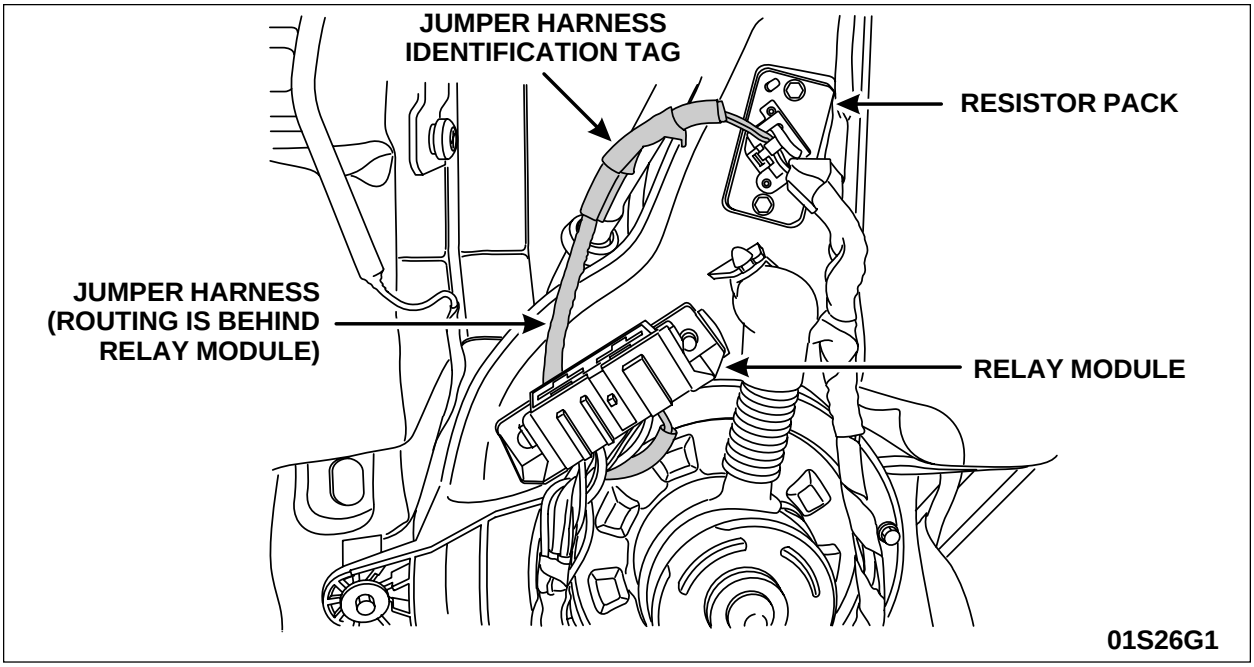


FIGURE 7

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01

6. Install the relay module into its original position above the blower motor.
7. Connect the battery negative cable and remove the memory saver.
8. Verify that the auxiliary blower motor operates correctly at all speeds.
9. Position the quarter trim panel in the vehicle.
10. Install the two (2) pushpin retainers by the floor, then install the pushpin retainer by the C-pillar (four-door model only).
11. Install the two (2) quarter trim panel screws by the liftgate.
12. Install the D-pillar trim panel.
13. Install any pushpin fastener(s) or screw(s) that secure the D-pillar trim panel.
14. **WARNING: BE SURE TO TIGHTEN THE SEAT BELT ANCHOR BOLT TO THE PROPER TORQUE SPECIFICATION.**

    Install the safety belt guide and bolt, using safety belt bolt bit T77L-2100-A or equivalent. Tighten the bolt to 40 Nm (30 lb-ft), then close the D-pillar safety belt guide cover.
15. On four door models, install the upper C-pillar trim panel.
16. **WARNING: BE SURE TO TIGHTEN THE SEAT BELT ANCHOR BOLT TO THE PROPER TORQUE SPECIFICATION.**

    On four-door models, install the safety belt guide and nut. Tighten nut to 40 Nm (30 lb-ft), then close the C-pillar safety belt guide cover.
17. On four-door models, install the left side sliding door scuff plate and return the second row left seat (or bench seat if equipped) to its original position.
18. On three-door models, install the second row seat assembly (bench or captain's chairs).
19. Install the rear bench seat assembly and the liftgate scuff plate.

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
09/01