2001 ESCAPE DRIVESHAFT REPLACEMENT

AFFECTED VEHICLES: CERTAIN 2001 MODEL YEAR ESCAPE

SERVICE PROCEDURE

CAUTION: Do not reuse any driveshaft retaining fasteners. Install *new* fasteners only or damage to vehicle will occur.

1. Raise and support the vehicle.
2. Position a safety stand under the driveshaft center bearing support. See Figure 1.

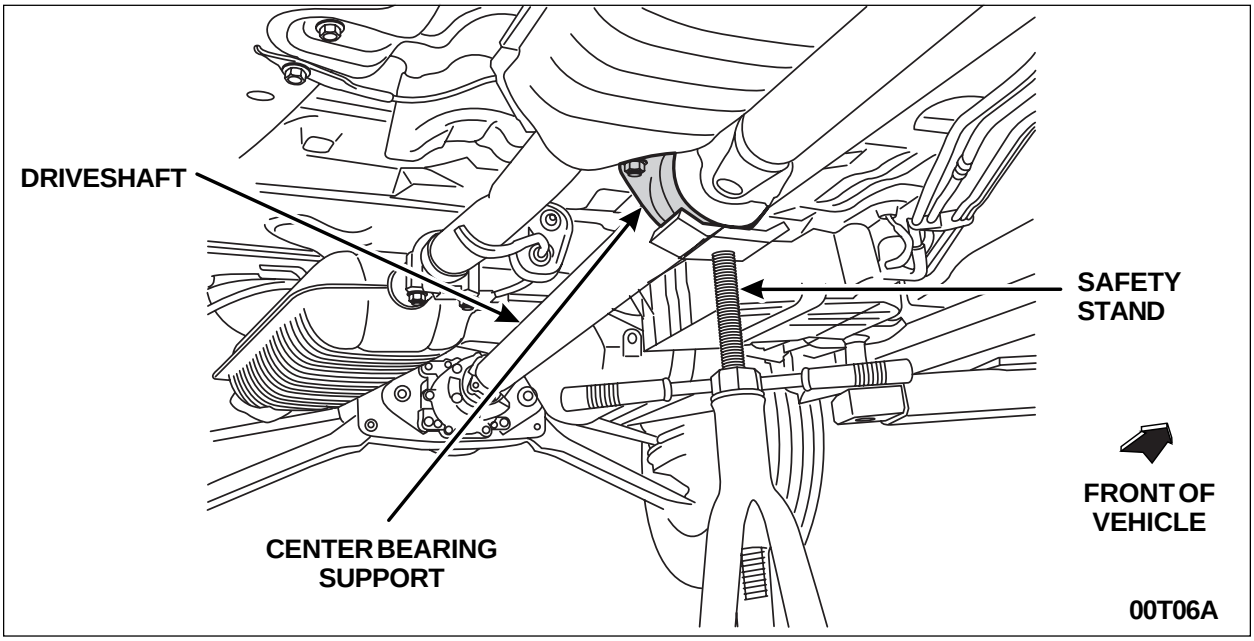


FIGURE 1

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
08/00

3. Remove the bolts and straps securing the rear of the driveshaft to the differential yoke. Discard the bolts. See Figure 2.

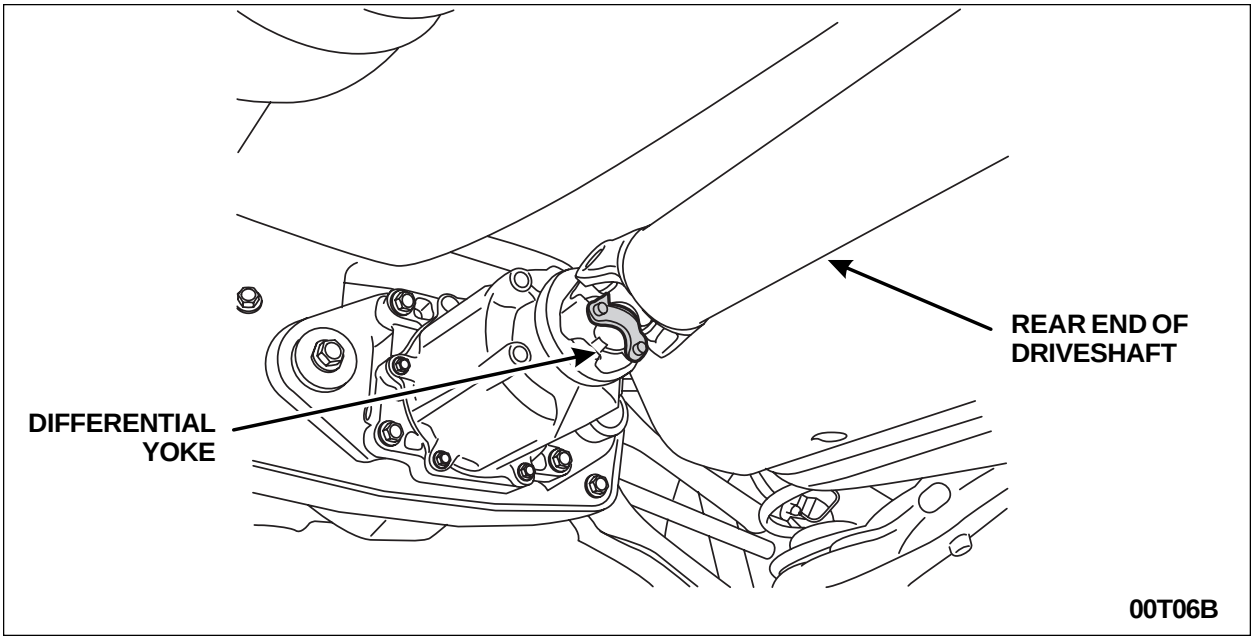


FIGURE 2

4. Remove and discard the center bearing support nuts. See Figure 3.
5. Remove the center bearing support ground strap bolt from the floor pan. See figure 3.

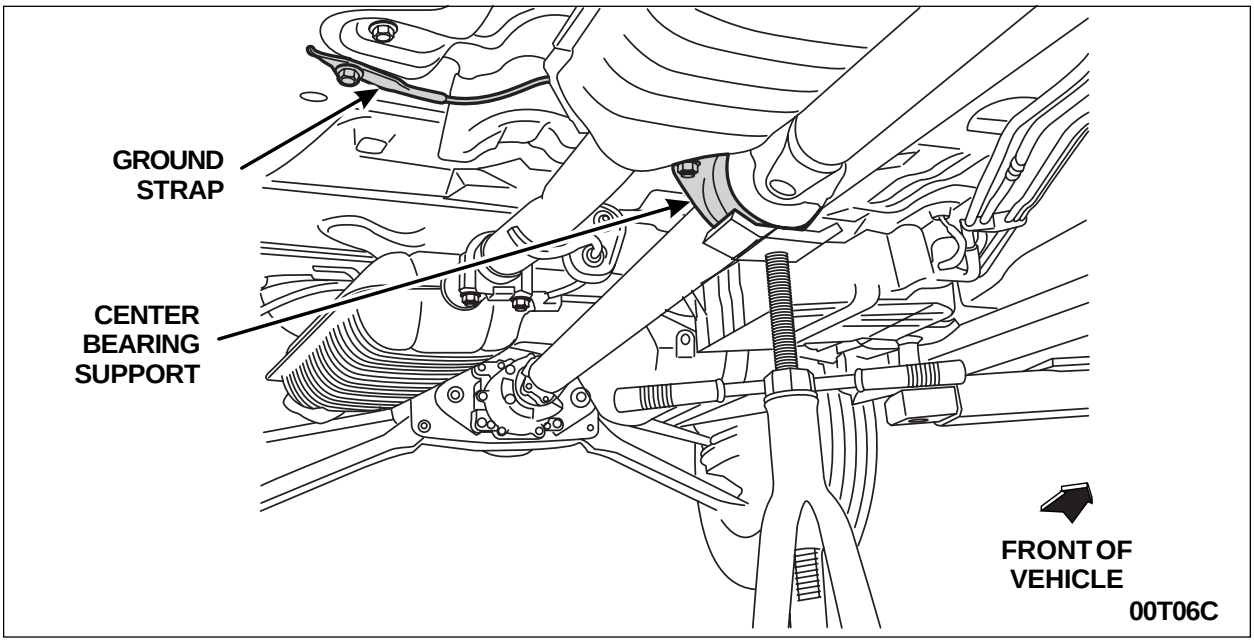


FIGURE 3

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
08/00

6. Remove and discard the bolts and washers securing the front of the driveshaft to the power take off. See Figure 4.

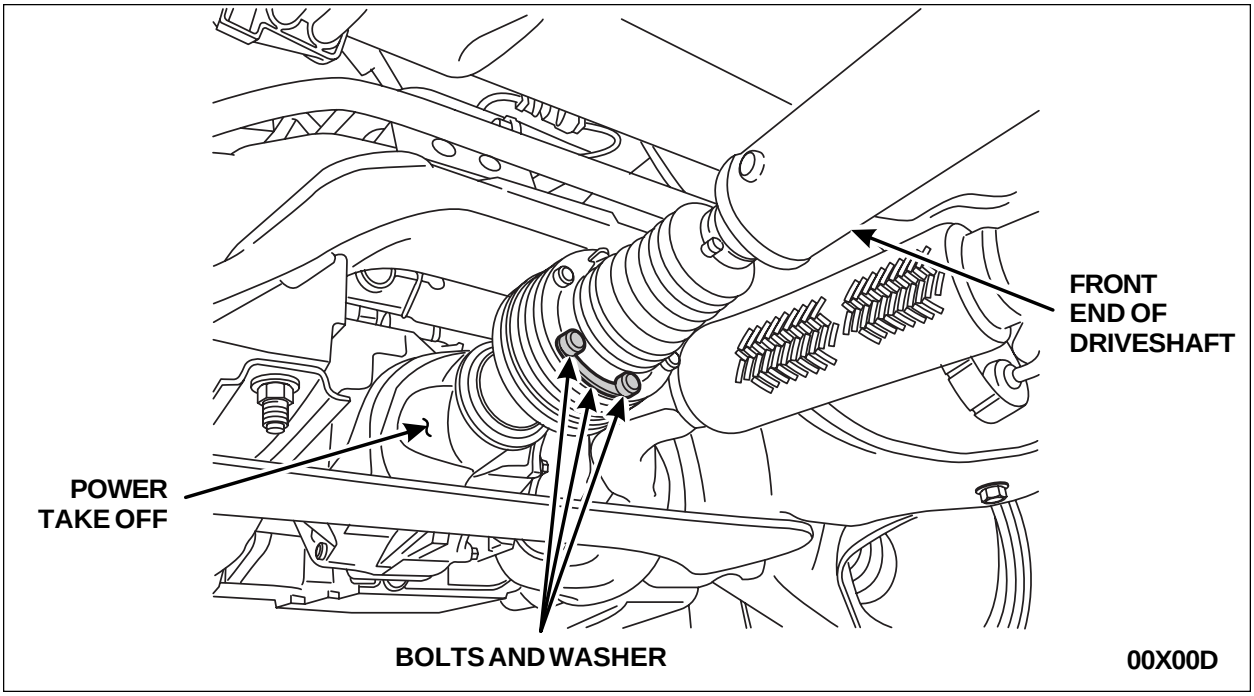


FIGURE 4

7. With the aid of an assistant, remove the driveshaft from the safety stand. Discard the driveshaft.
8. With the aid of an assistant, position the center bearing support of the ***new*** driveshaft onto the safety stand. Position the rear of the driveshaft into the differential yoke, then position the front of the driveshaft into the power take off.
9. **CAUTION: The rear of the driveshaft must be bolted to the differential yoke before the center bearing support nuts are installed.**

   Install the straps with ***new*** bolts to secure the rear of the driveshaft to the differential yoke. Tighten the bolts to 23 Nm (17 lb-ft).
10. Install ***new*** nuts to the center bearing support. Tighten the nuts to 48 Nm (35 lb-ft).
11. Install the center bearing support ground strap to the floor pan. Tighten the bolt to 40 Nm (30 lb-ft).

NOTE: If front driveshaft bolts are missing or damaged, order Part Number YL8Z-4529-AA, quantity of one (1).

12. Install ***new*** bolts and washers to secure the front of the driveshaft to the power take off. Tighten the bolts to 37 Nm (27 lb-ft).
13. Remove the safety stand from under the center bearing support.
14. Lower the vehicle.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
08/00