POWERTRAIN CONTROL MODULE (PCM) REPROGRAM

AFFECTED VEHICLES: **CERTAIN 1999 AND 2000 MODEL YEAR EXPLORER AND MOUNTAINEER VEHICLES**

OVERVIEW

This program involves checking the existing PCM calibration (PCM ID) using either Worldwide Diagnostic System (WDS) or New Generation Star (NGS) Tester. Once you have recorded the PCM ID information, you will need to compare it to the Application/Calibration Chart to see if reprogramming is necessary. If a later calibration is available other than what is listed in the chart, reprogram the PCM to the latest level.

NOTE: If you discover that the PCM is already at the latest level, do not attempt to perform the reprogram procedure. No further service is required except to install an Authorized Modification Label.

SERVICE PROCEDURE

Proceed to the appropriate procedure depending on your choice of diagnostic tools.

- If using Worldwide Diagnostic System (WDS), use WDS CD-ROM B10 release (or subsequent release if applicable) available via Fordstar, or for non-Fordstar dealers available at:

  http://www.fordtechservice.com/vdirs/wds
- If using Service Bay Technical System (SBTS) and the New Generation Star (NGS) Tester with Rotunda Flash Cable (007-00531) and Rotunda Flash Card (007-00532), use the October release CD-ROM (or subsequent release if applicable).

RETRIEVING PCM INFORMATION AND REPROGRAMMING USING WORLDWIDE DIAGNOSTIC SYSTEM

1. Connect the WDS to the vehicle DLC.
2. Select 16 PIN, then select ALL EXCEPT THOSE BELOW.
3. Verify the transmission selector is in either PARK or NEUTRAL, set the parking brake and turn the ignition ON.
4. Select the appropriate model year.
5. Answer YES or NO when asked if the vehicle is equipped with ABS brakes.
6. Verify Vehicle Specifications.
7. Go to LOG VIEWER.
8. Note the PCM ID information.
9. Locate the appropriate application in the Application/Calibration Chart and determine if reprogramming is required.
10. If the PCM requires reprogramming, go to continue with Step 11. If reprogramming is not required, proceed to Preparing Authorized Modification Label.

Ford Motor Company
CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
12/00

11. To reprogram the PCM, go to the TOOL BOX.
12. Select MODULE PROGRAMMING.
13. Select MODULE REPROGRAMMING.
14. Select PCM.
15. Answer YES when asked to reprogram.
16. Proceed to Preparing Authorized Modification Label.

RETRIEVING PCM INFORMATION AND REPROGRAMMING USING THE NEW GENERATION STAR TESTER

1. Connect the NGS to the vehicle with the applicable diagnostic card inserted.
2. Turn the key ON and select NEW VEHICLE from the NGS menu. Hit TRIGGER to continue.
3. Pick the Model Year then hit TRIGGER.
4. Select the vehicle/engine and hit TRIGGER.
5. Next, select DIAGNOSTIC DATA LINK from the menu and hit TRIGGER.
6. Select PCM from the menu and hit TRIGGER.
7. Select MODULE ID and hit TRIGGER.
8. Locate the appropriate application in the Application/Calibration Chart and determine if reprogramming is required. If reprogramming is required go to next step. If not, disconnect the NGS and proceed to Preparing Authorized Modification Label.
9. To begin the reprogramming process, first download the applicable calibration file onto a Rotunda Flash card (007-00532) and insert into the NGS.
10. Connect Rotunda Flash cable (007-00531) to the NGS and to the vehicle.
11. Select PCM RECALIBRATION from the menu and hit TRIGGER.
12. Enter the last 8 characters of the VIN and hit ENTER.
13. Select the applicable calibration file and hit TRIGGER.
14. Cycle the key OFF then ON and hit TRIGGER.
15. Turn the key OFF then hit TRIGGER.

Ford Motor Company
CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
12/00

16. Next, turn the key ON being sure not to crank the engine. The NGS will now verify the current calibration. Hit TRIGGER to continue. The NGS will then reprogram the PCM. This may take several minutes.
17. The NGS will complete the reprogramming by running a KOEO Self Test.
18. Disconnect the flash cable.
19. Proceed to Preparing Authorized Modification Label.

APPLICATION/CALIBRATION CHART

APPLICATION	EXISTING PCM ID	NEW PCM ID
North America	XL2F-ME	YU2F-AFB
	XL2F-MD	
	XL2F-MC	
Japan	XL2F-XB	XU7A-HB
	XL2F-XC	
	XL2F-XD	
Left-Hand Drive OBD-I	XL2F-ACB	XU7A-LB
	XL2F-ACC	
	XL2F-ACD	
Right-Hand Drive OBD-I	XL2F-ADB	XU7A-MB
	XL2F-ADC	
	XL2F-ADD	
Right-Hand Drive — Leaded	XL2F-ABB	XU7A-KB
	XL2F-ABC	
	XL2F-ABD	

Ford Motor Company

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
12/00

PREPARING AUTHORIZED MODIFICATION LABEL

1. Obtain and prepare the Authorized Modification Label. Write the modification completed, your P&A code, the date of repair, the program type and program number as shown below. See Figure 1.

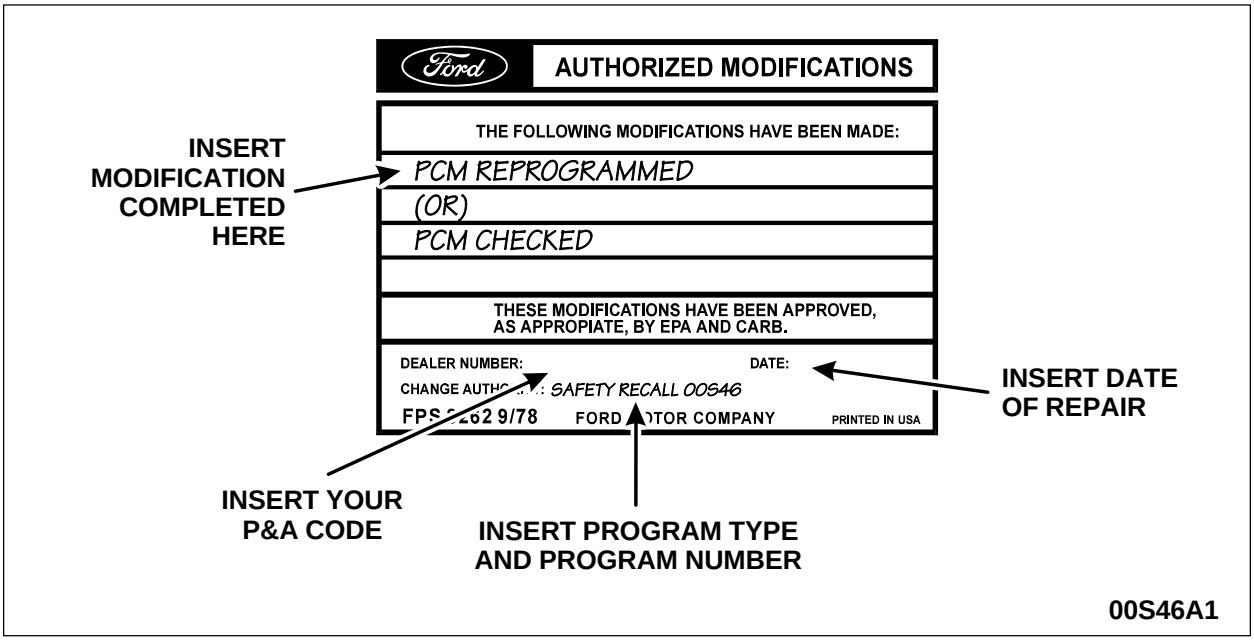


FIGURE 1

2. Apply the label to a clear area of the upper radiator support.

Ford Motor Company
CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
12/00