FOCUS HIGH-MOUNT STOP LAMP WIRING HARNESS REPLACEMENT

AFFECTED VEHICLES: CERTAIN 2000 FOCUS 4-DOOR VEHICLES

OVERVIEW

This procedure provides details for replacing the high-mount stop lamp wiring harness. The harness is routed from inside the left quarter panel, along the trunk hinge and into the trunk lid. This harness also provides power to the license plate lamps, trunk latch release and the rear defroster.

To save time, this procedure will instruct you to de-pin the rear defroster wire from the original harness connector and leave it in place in the vehicle, eliminating the need to remove C-pillar interior trim panels. This wire will replace the rear defroster wire in the replacement harness.

SERVICE PROCEDURE

1. Install a memory saver and disconnect the battery negative cable.
2. Open the truck lid and remove the left rear corner trim panel.
3. Remove the trunk lid trim panel.
4. Disconnect the harness electrical connector at the left quarter panel. Disengage the harness retainer, then cut it off. Carefully cut or remove enough tape to remove the rear defroster lead (green wire with the blue tracer) from the wire harness. Disengage the red lock wedge and de-pin the connector from the harness hard-shell connector. See Figure 1.

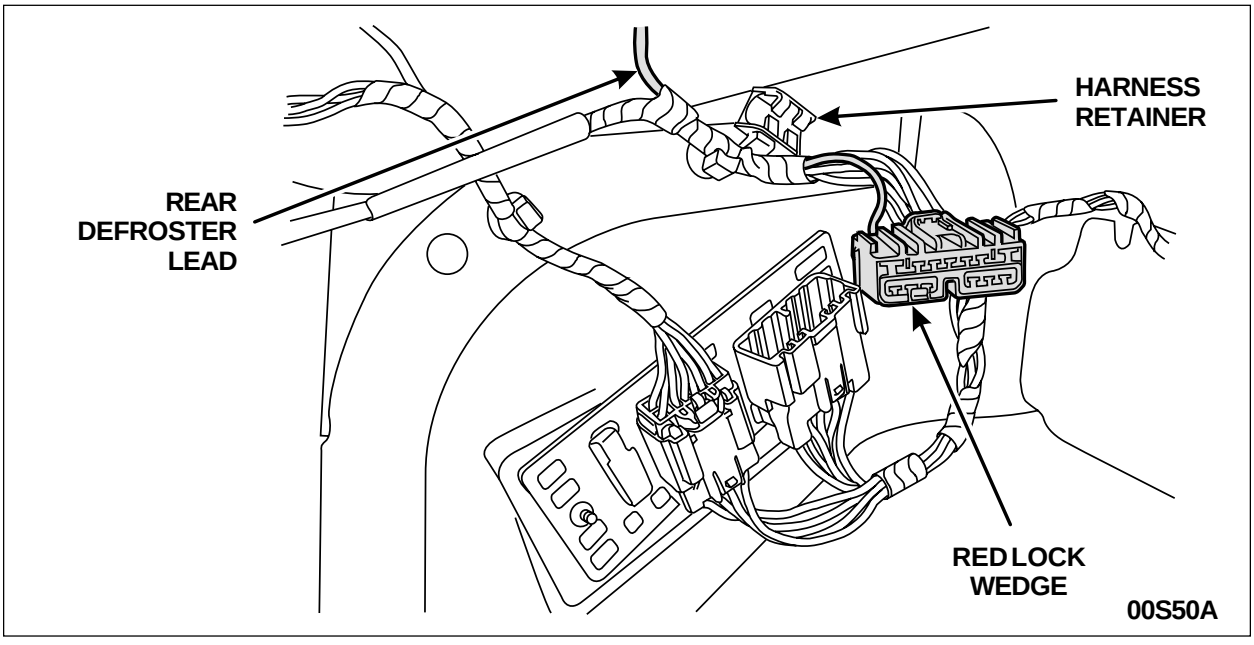


FIGURE 1

Ford Motor Company

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
12/00

RTS

5. Remove the high-mount stop lamp socket assembly, disconnect the lamp electrical connector, then reinstall the socket assembly. Disconnect the license plate lamp connectors, the trunk latch connector and the wiring harness retainers. See Figure 2.

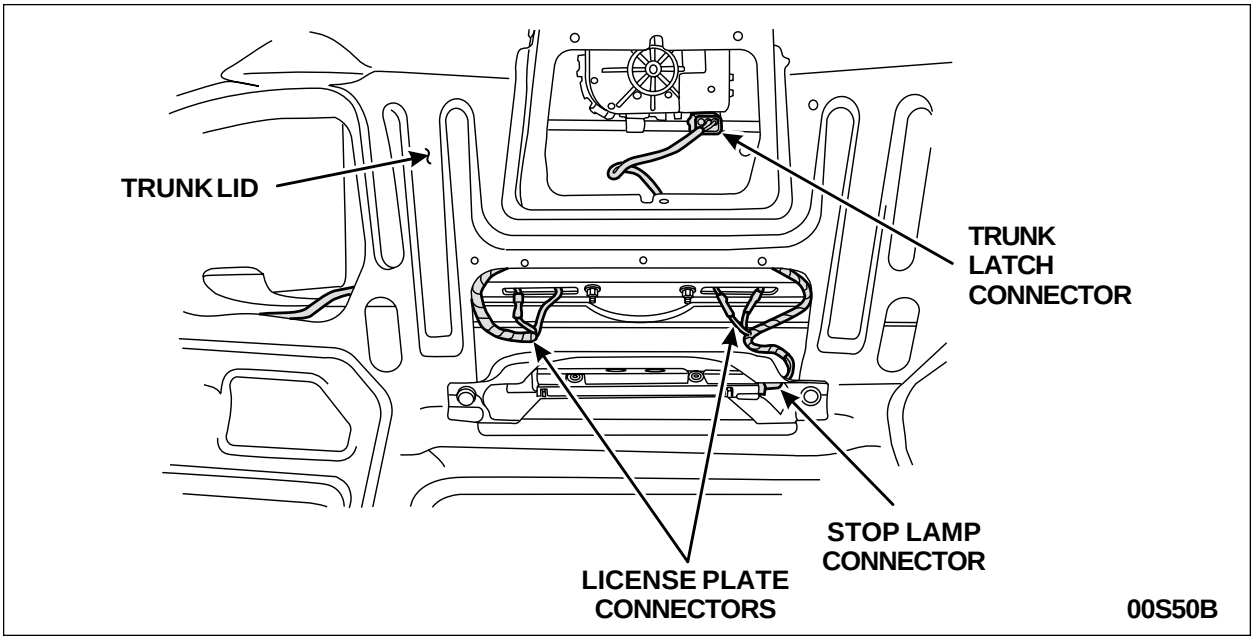


FIGURE 2

6. Pull back the rubber grommets to reveal the two (2) hard plastic grommets at the trunk lid and at the left quarter panel. Disengage the hard plastic grommets from the body panels, remove the harness retainer from the trunk lid hinge and remove the harness from the vehicle. See Figure 3.

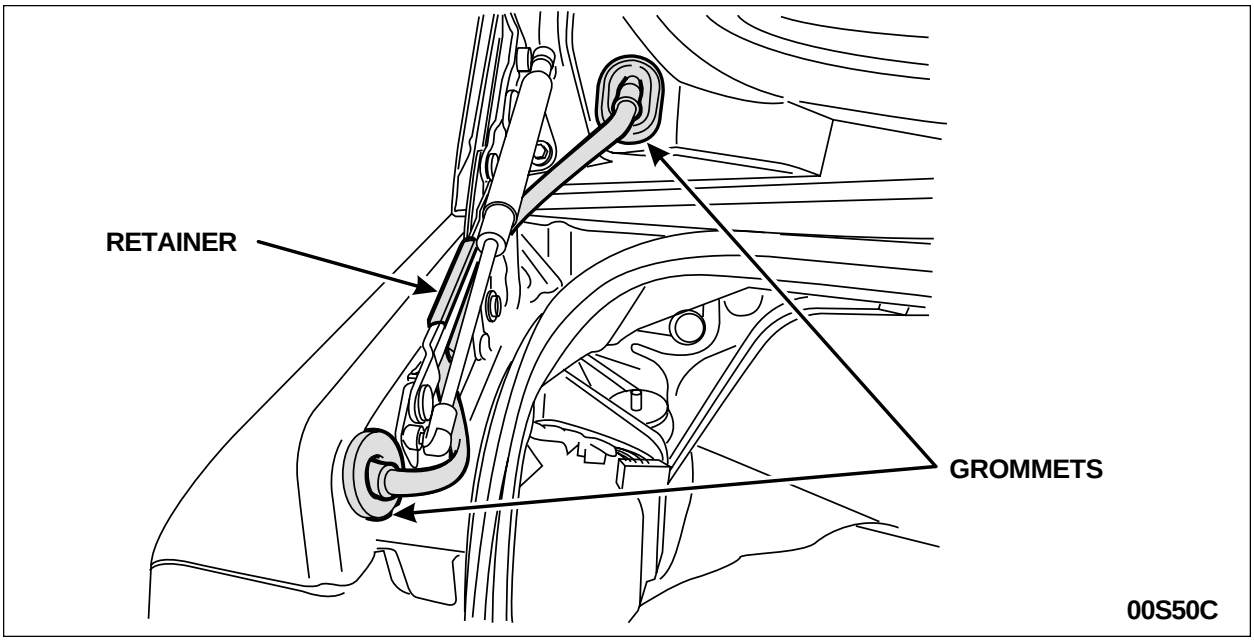


FIGURE 3

Ford Motor Company
CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
12/00

7. Prepare the ***new*** harness for installation by removing the rear defroster lead (green wire with the blue tracer). Carefully cut or remove enough tape to remove the wire from the harness and de-pin it from the hard-shell connector. See Figure 4.

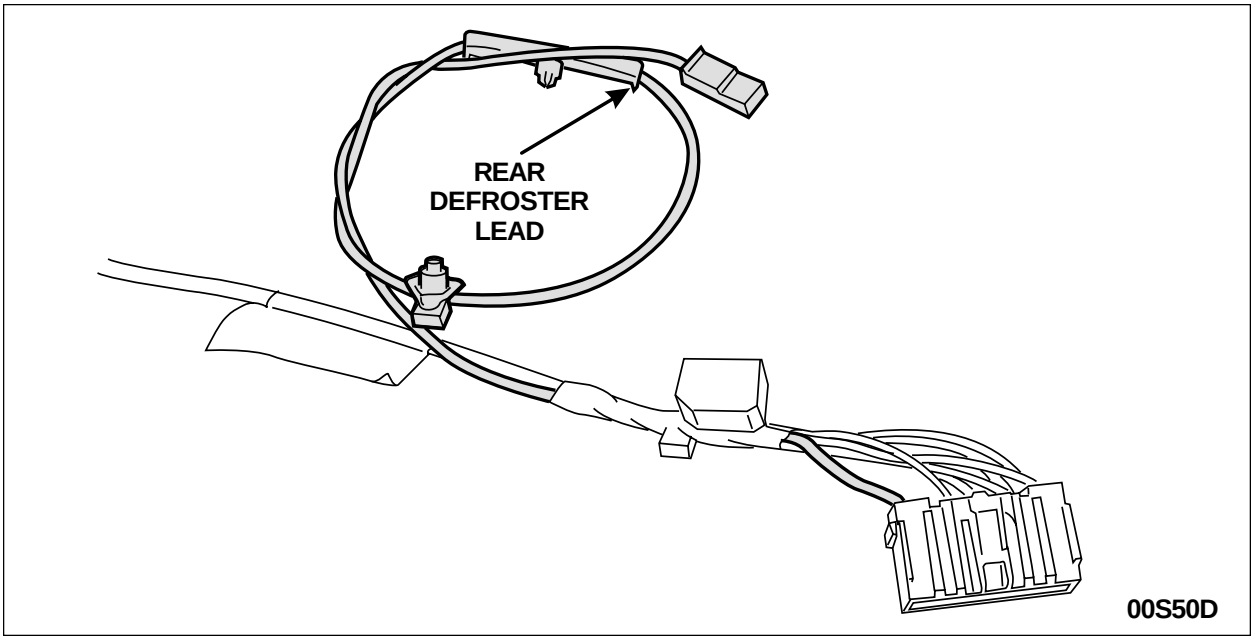


FIGURE 4

8. Install the ***new*** harness by first routing the lower half through the quarter panel grommet opening and down into the trunk area. Route the upper half through the trunk lid grommet opening and up into position.
9. Connect the brake lamp, license plate lamp, trunk latch release connectors and harness retainers.
10. Insert the rear defroster lead connector into the ***new*** hard-shell and engage the lock wedge. Secure the wire to the harness using electrical tape.
11. Connect the ***new*** harness connector to the vehicle harness connector.
12. Secure both grommets and harness retainers.
13. Install the trunk lid trim pad and the left rear corner trim panel.
14. Connect the battery negative cable and remove the memory saver.
15. Check rear defroster, brake lights, license plate lights and trunk latch release for proper operation.

Ford Motor Company
CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
12/00