BRAKES—AIR BRAKE FOOT VALVE REPLACEMENT—VEHICLES EQUIPPED WITH E14 FOOT VALVE	Article No. 02-23-5

FORD: 2000-2001 F-650, F-750

ISSUE

This procedure is to be used for 2000-2001 Ford F-650 and F-750 trucks that are equipped with air brakes and utilize the Bendix E-14 foot valve. The supplier Bendix, has discontinued the E-14 series foot valve in which the E-7 series foot valve has been identified to meet Ford application criteria.

ACTION

The service replacement for the E-14 foot valve (P/N F81A-2A270-A) is the E-7 foot valve (1C4Z-2A270-AA), which has slightly different port configurations. There are 4 different plumbing configurations that are available on the F-650/750. Refer to the following choices to determine which configuration applies before converting from the E-14 to the E-7 foot valve.

SERVICE PROCEDURE

There are 4 different plumbing configurations based on application:

1. Straight truck (except Ford 7.3L Powerstroke powered with cruise control)
2. Cummins and Caterpillar powered trucks with trailer package
3. Ford 7.3L Powerstroke powered trucks with cruise control
4. Ford 7.3L Powerstroke powered trucks with cruise control and trailer package

BASELINE REPLACEMENT PROCEDURE

1. There is a sequence for installing the brass fittings into the foot valve (refer to Figure 1 for the sequence).

NOTE

THE UPPER LEFT BOLT THAT ATTACHES THE MOUNTING PLATE OF THE FOOT VALVE TO THE DASH PANEL MUST BE PUT THROUGH THE PLATE BEFORE THE FITTINGS ARE PLACED IN THE VALVE.

2. A foot valve port identification diagram has been provided to help identify ports (Figure 2). Mark all lines and ports prior to removing so as not to get ports and lines crossed. In reference to Figure 2, further explanation of port and connection are referenced as follows:
   - Port A - Connects to Front Brakes - Red 3/8″ hose
   - Port B - Connects to Rear Brakes - Red 3/8″ hose
   - Port C - Connects to Air Manifold - Red 3/8″ hose
   - Port D - Connects to Air Reservoir Tank - Red 5/8″ hose
   - Port E - Connects to Air Manifold - Green 3/8″ hose
   - Port F - Connects to Air Reservoir Tank - Green 5/8″ hose
   - Port G - Connects to Rear Brakes - Green 1/2″ hose
   - Port H - Trailer Pkg Only - Connects to TP3DC (Tractor Protection Valve) - Green 1/2″ hose
   - Port T - Trailer Pkg. Only - Connects to TP3DC (Tractor Protection Valve) - Red 1/2″ hose
3. Obtain thread sealant and use per specification.
4. Remove current foot valve. (Section 206-08 of the Workshop Manual).

NOTE

ALL OF THE SWITCHES AND MOST OF THE BRASS WILL BE RE-USED IN THE NEW E-7 FOOT VALVE.

5. Install new E-7 foot valve per section 206-08 of the Workshop Manual.

Truck Configuration #1 - Straight Truck Procedure

Change in Configuration - 3 fitting changes, 1 connector added

1. Remove current E-14 foot valve from the vehicle.

Copyright © 2002 Ford Motor Company

2. Replace 45 degree fitting in port A with new part F6HZ-2535-GA (straight fitting) and place in port A of the E-7 foot valve as shown in Figure 3.
3. All of the other fittings are to be transferred to their prospective ports on the E-7 foot valve as shown in Figure 4.
4. Install foot valve, place air lines into valve and check for leaks and proper operation.

Truck Configuration #2 - Cummins And Caterpillar Powered Trucks With Trailer Package

Change in Configuration - 3 fitting changes, 1 connector added

1. Remove E-14 foot valve from the vehicle.
2. Replace 45 degree fitting in port A with new part F6HZ-2535-GA (straight fitting) and place in port A of E-7 foot valve as shown in Figure 5.
3. Replace fitting in port H with new fitting F6HZ-2535-LB and install into port H on E-7 foot valve as shown in Figure 5.
4. Replace fitting from port T with new fitting F6HZ-2535-SB and install into port T on E-7 foot valve as shown in Figure 5.
5. Place 5 inches of 1/2″ I.D. red hose into fitting in port T, and then place connector 4C4Z-2535-CA onto end of hose, as shown in Figure 5. The air line going to port T can now be re-attached through the connector.
6. All of the other fittings are to be transferred to their prospective ports on the E-7 foot valve as shown in Figure 6.
7. Install foot valve, place air lines into valve and check for leaks and proper operation.

Truck Configuration #3 - Ford 7.3L Powerstroke Powered Trucks With Cruise Control

Change in Configuration - 3 fittings

1. Remove E-14 foot valve from the vehicle.
2. Replace 45 degree fitting in port A with new part F6HZ-2535-GA (straight fitting) and place in port A of E-7 foot valve as shown in Figure 7.
3. Replace fitting in port B with new fitting YC3Z-2535-DA and place in port B as shown in Figure 7.
4. Replace fitting in port E with new fitting YC3Z-2535-DA and place in port E as shown in Figure 7.
5. All of the other fittings are to be transferred to their prospective ports on the E-7 foot valve as shown in Figure 8.
6. Install foot valve, place air lines into valve and check for leaks and proper operation.

Truck Configuration #4 - Ford 7.3L Powerstroke Powered Trucks With Cruise Control And Trailer Package

Change in Configuration - 5 fittings, 1 connector added

1. Remove E-14 foot valve from the vehicle.
2. Replace 45 degree fitting in port A with new part F6HZ-2535-GA (straight fitting) and place in port A of E-7 foot valve as shown in Figure 9.
3. Replace fitting in port H with new fitting F6HZ-2535-LB and install into port H of E-7 foot valve as shown in Figure 9.
4. Replace fitting in port T with new fitting F6HZ-2535-SB and install into port T of E-7 foot valve as shown in Figure 9.
5. Place 5 inches of 1/2″ I.D. red hose into fitting in port T, and then place connector 4C4Z-2535-CA onto end of hose, as shown Figure 9. The air line going to port T can now be re-attached through the connector.
6. All of the other fittings are to be transferred to their prospective ports on the E-7 foot valve as shown in Figure 10.
7. Install foot valve, place air lines into valve and check for leaks and proper operation.

PART NUMBER	PART NAME
1C4Z-2A270-AA	Foot Valve
F6HZ-2535-GA	Fitting - Air
F6HZ-2535-LB	Fitting - Air
F6HZ-2535-SB	Fitting - Air
YC3Z-2535-DA	Fitting - Air
4C4Z-2535-CA	Fitting - Air

OTHER APPLICABLE ARTICLES: NONE
WARRANTY STATUS: INFORMATION ONLY
OASIS CODES: 301000, 302000, 390000

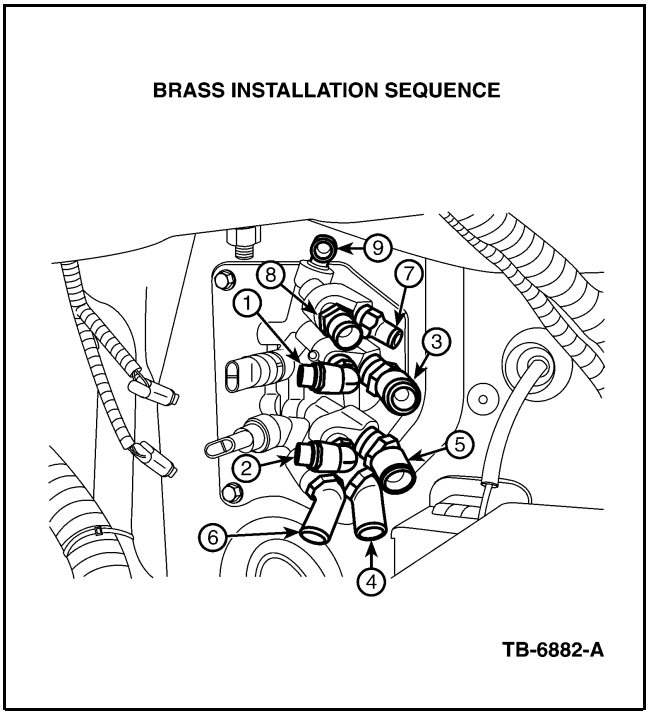


Figure 1 - Article 02-23-5

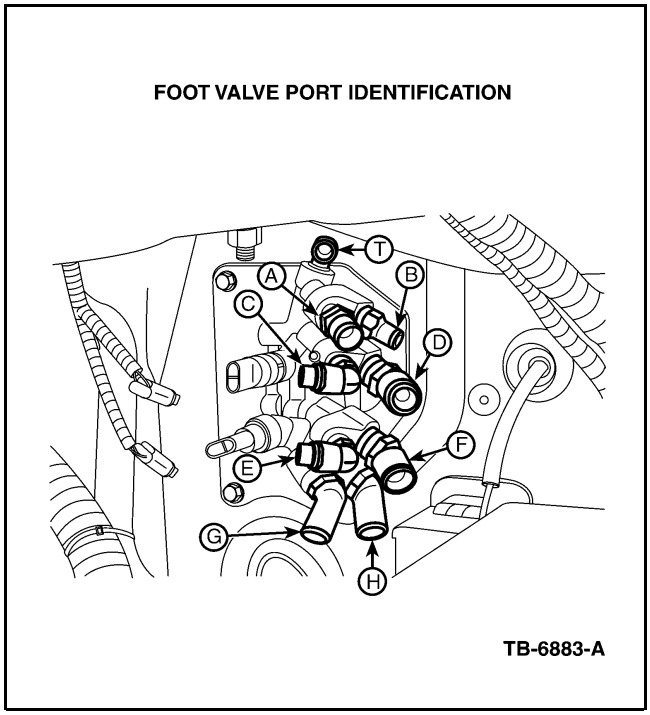


Figure 2 - Article 02-23-5

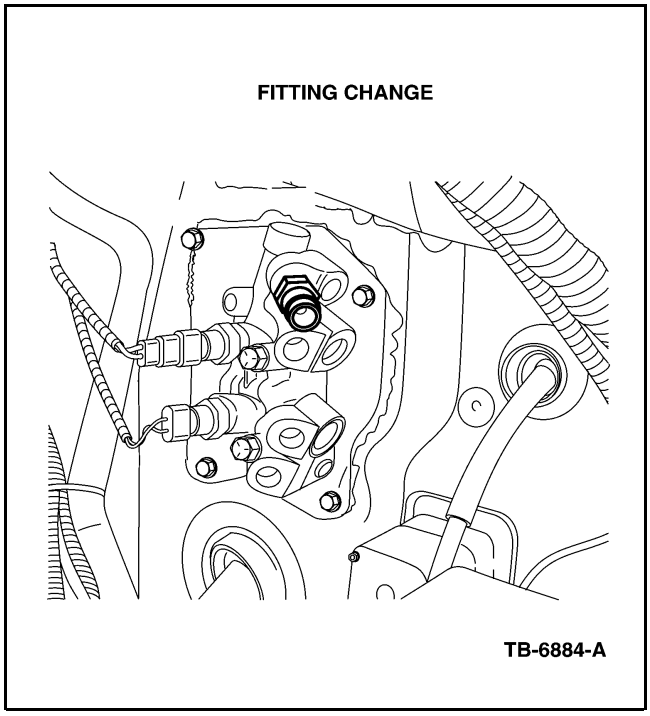


Figure 3 - Article 02-23-5

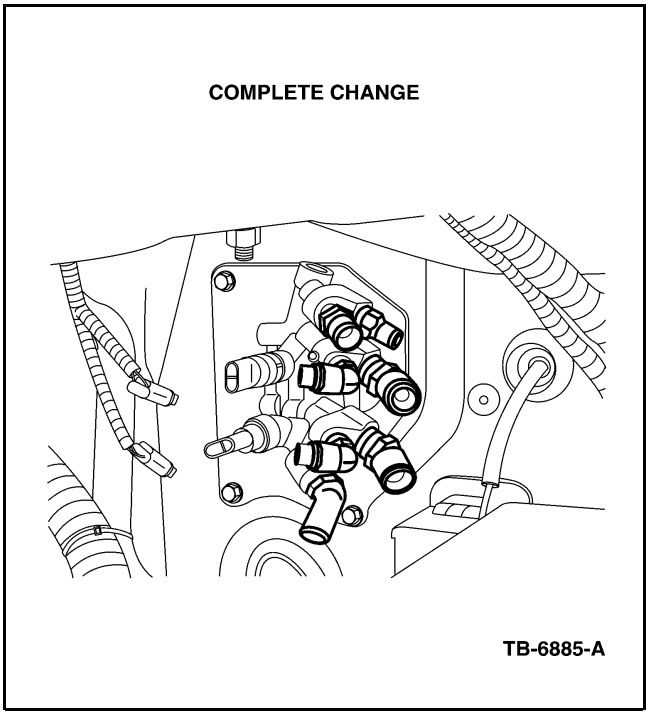


Figure 4 - Article 02-23-5

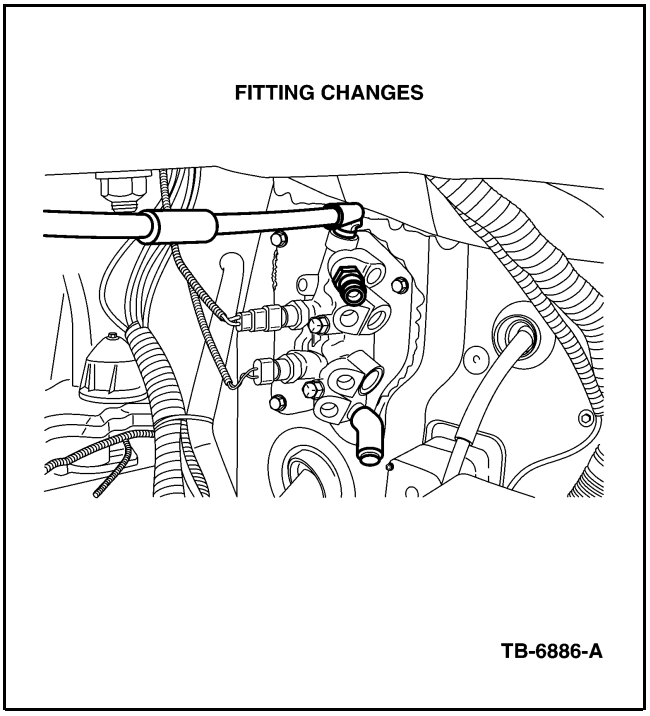


Figure 5 - Article 02-23-5

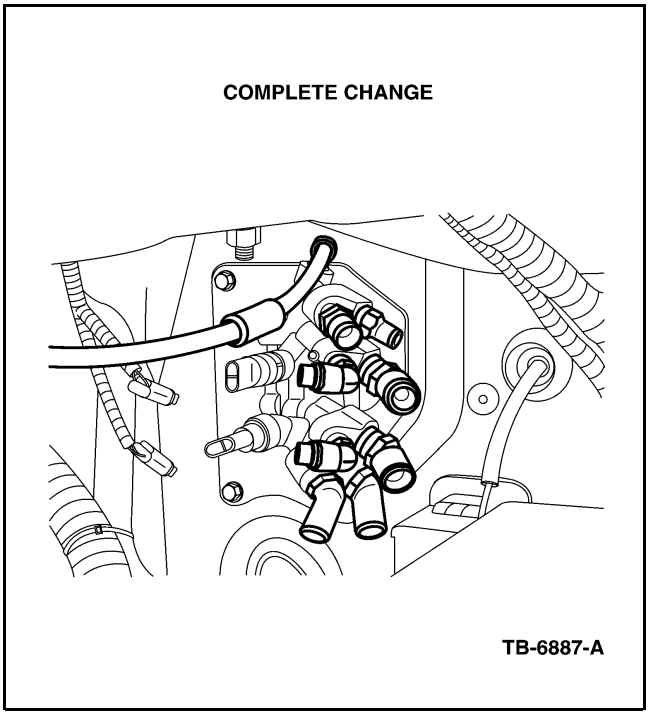


Figure 6 - Article 02-23-5

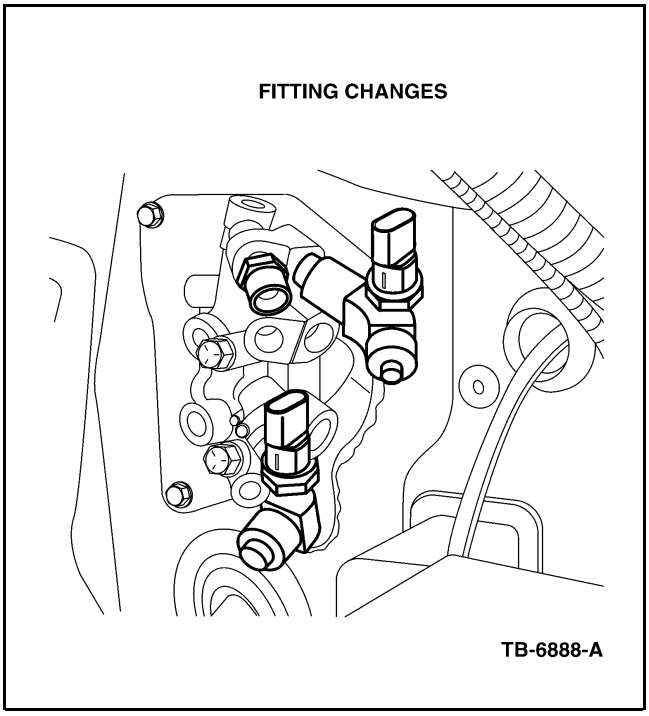


Figure 7 - Article 02-23-5

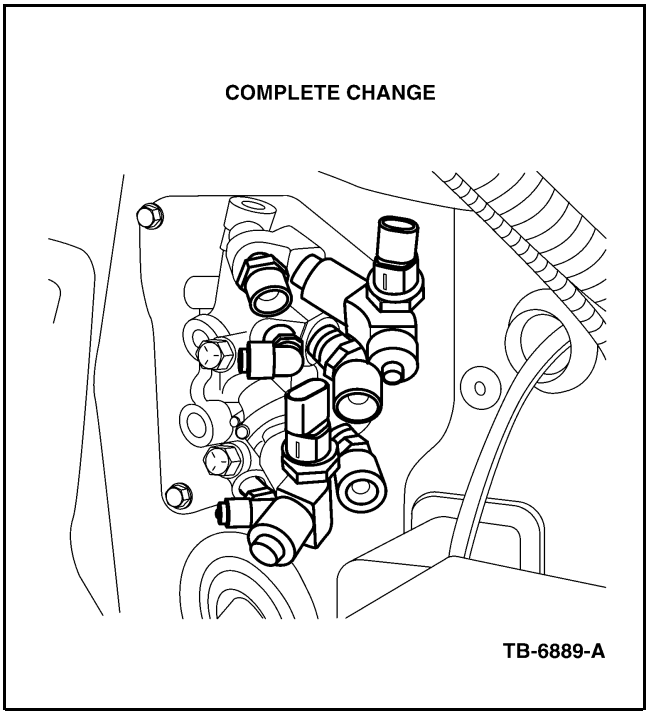


Figure 8 - Article 02-23-5

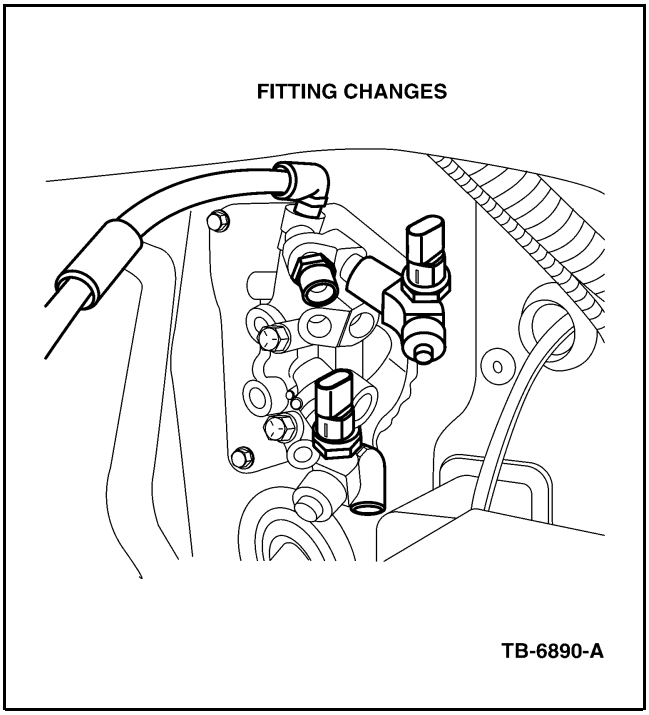


Figure 9 - Article 02-23-5

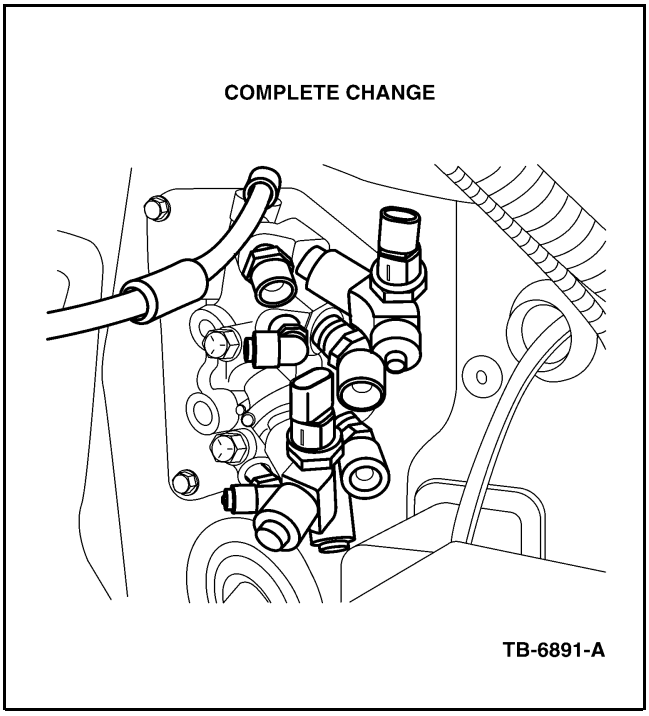


Figure 10 - Article 02-23-5

NOTE: The information in Technical Service Bulletins is intended for use by trained, professional technicians with the knowledge, tools, and equipment to do the job properly and safely. It informs these technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by "do-it-yourselfers". Do not assume that a condition described affects your car or truck. Contact a Ford, Lincoln, or Mercury dealership to determine whether the Bulletin applies to your vehicle.