POWER TAKE OFF—PTO INSTALLATION—SERVICE TIP	Article No. 00-5-11

FORD: 2000 F-650, F-750

ISSUE

Instrumentation indicator issues may occur after attempting to incorporate a Power Take Off (PTO) on trucks.

ACTION

This message provides instructions on how to install a PTO for Cummins engines, following the INSITE professional ISB (Cummins software) instruction. Refer to the following Service Procedure for details.

SERVICE PROCEDURE

Access to INSITE Professional ISB (Cummins Software)

1. Enter to Adjustment Menu (Figure 1).
2. Enter to Features and Parameters 1 (Figure 2).
3. Select folder, PTO Options 1 (Figure 3).
4. Select window and program (PTO/Remote PTO Enabled) (Figure 4).
5. Select folder, PTO Options 2 (Figure 5).
6. Program according to requirements (Figure 6).
7. Select folder, Remote PTO (Figure 7).
8. Program according to requirements (Figure 8).

OTHER APPLICABLE ARTICLES: NONE
WARRANTY STATUS: INFORMATION ONLY
OASIS CODES: 204000, 206000, 209000, 209200, 490000, 499000, 507000, 590000, 698298

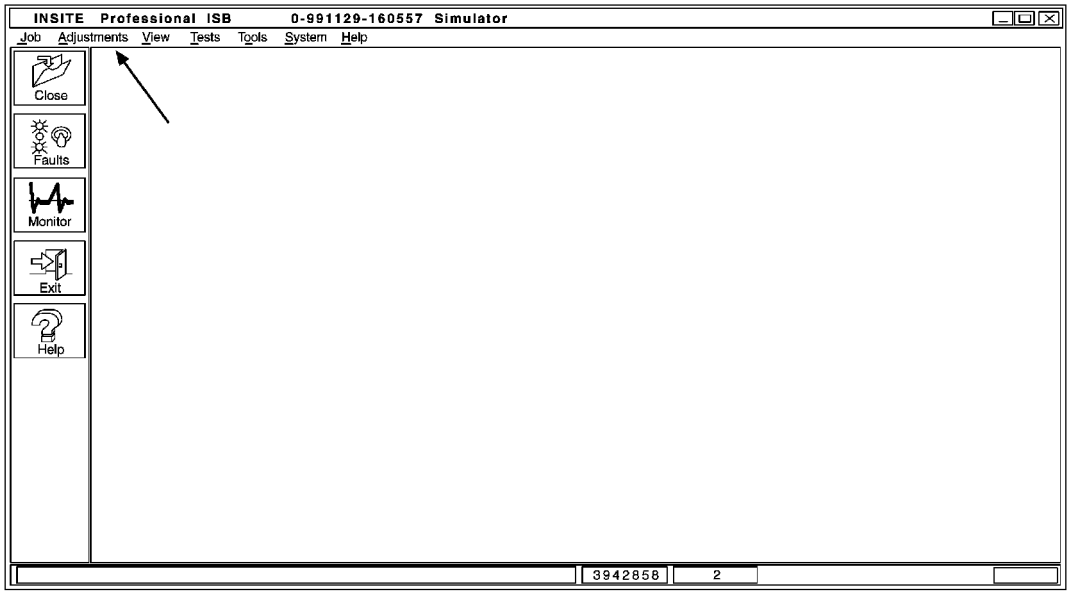


Figure 1 - Article 00-5-11

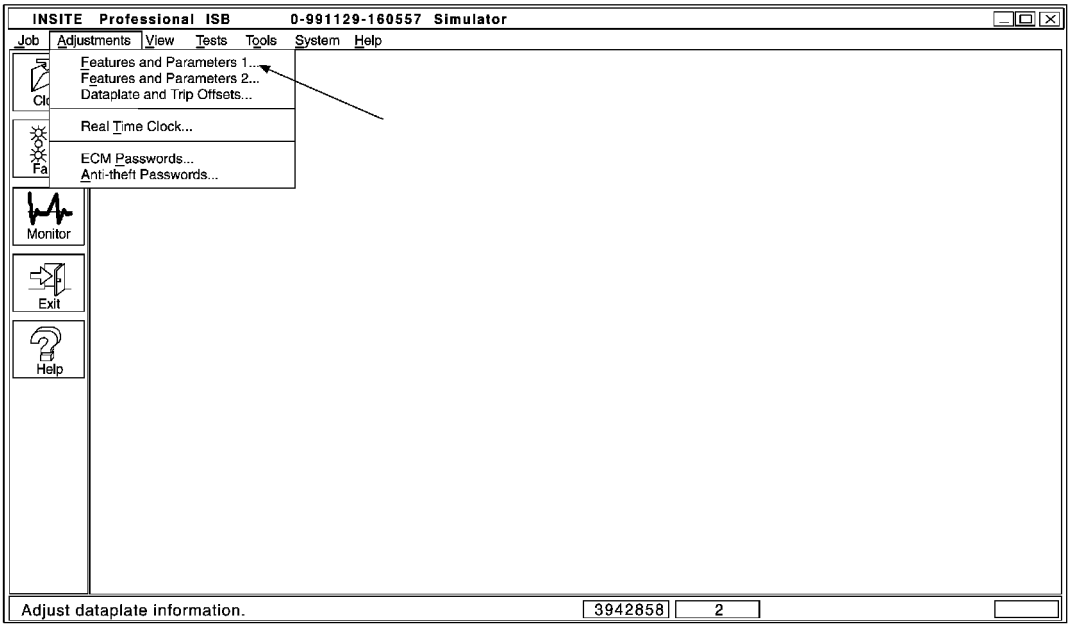


Figure 2 - Article 00-5-11



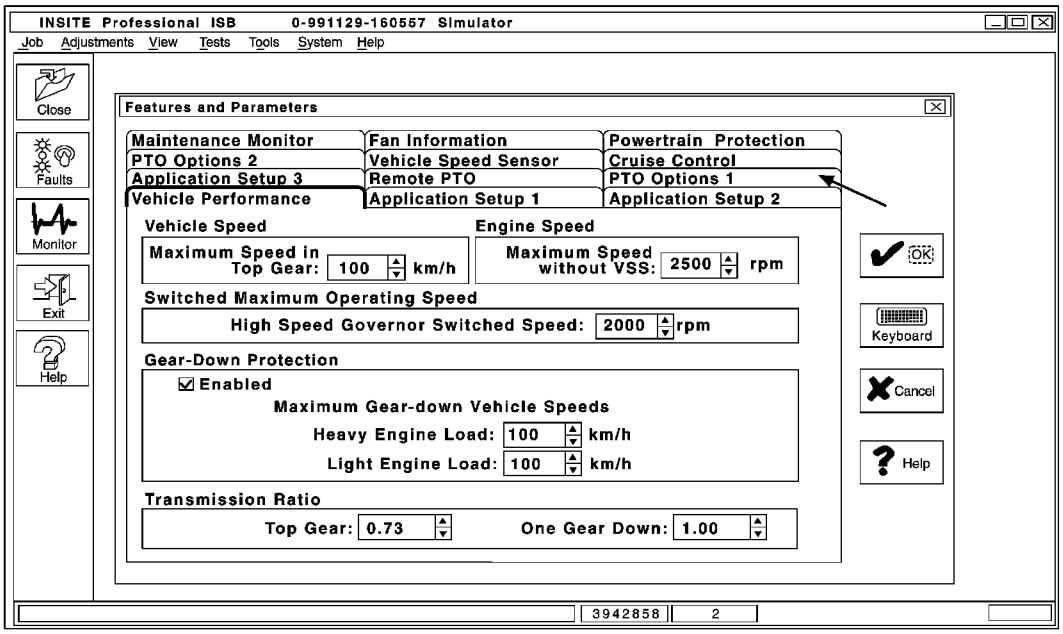


Figure 3 - Article 00-5-11

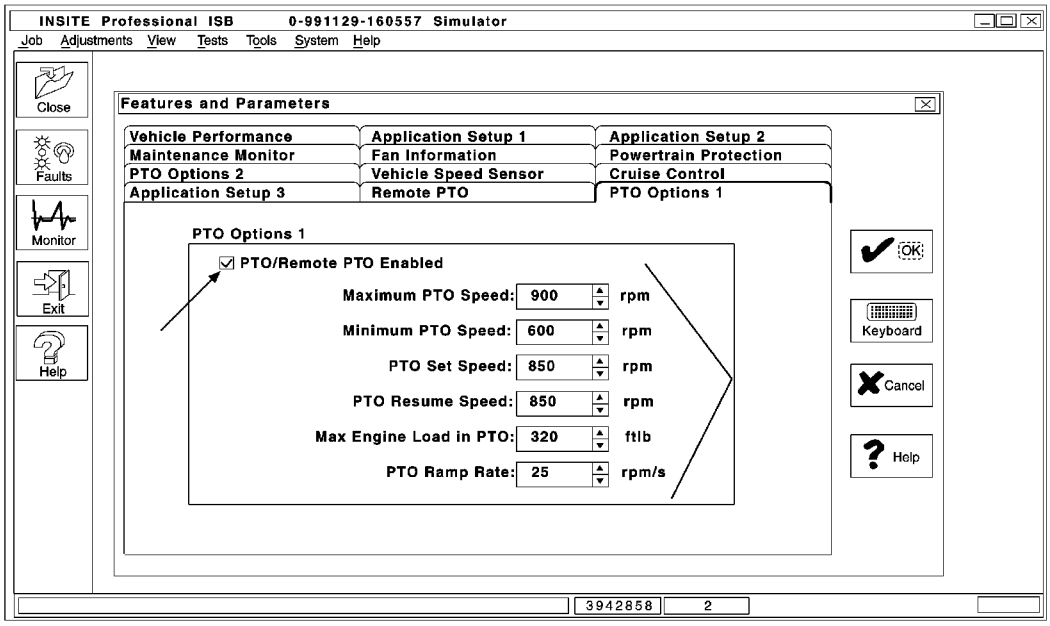


TB-6033-A

Figure 4 - Article 00-5-11

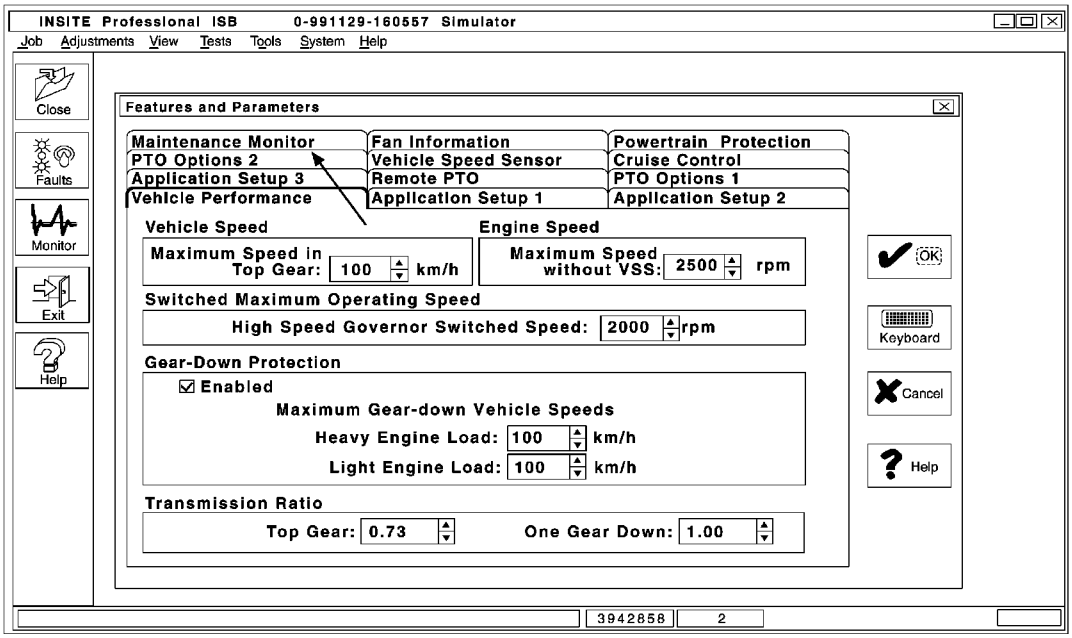


TB-6034-A

Figure 5 - Article 00-5-11

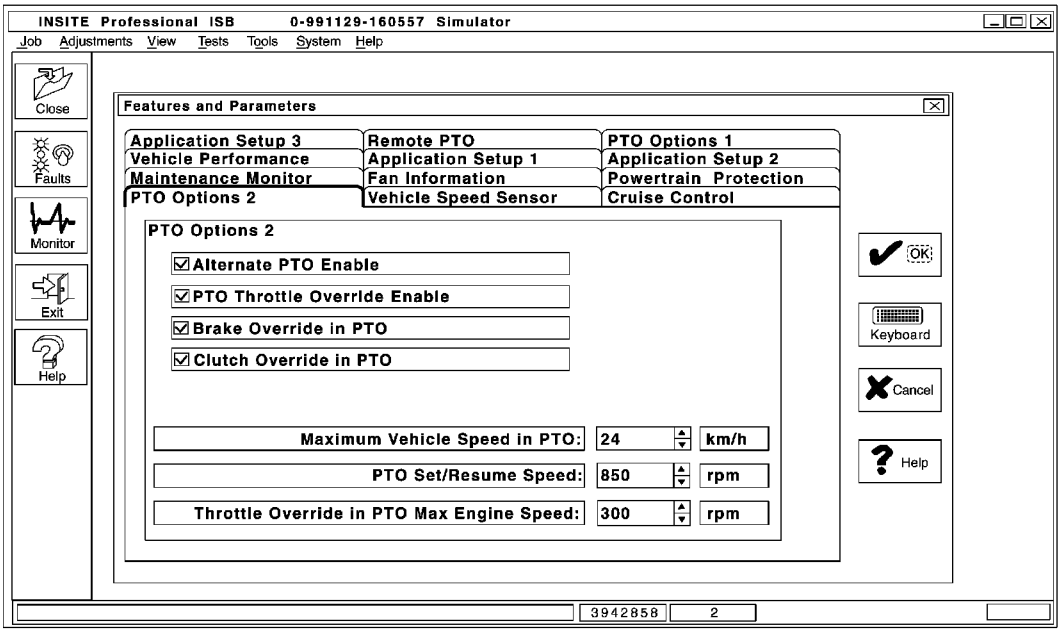

TB-6035-A

Figure 6 - Article 00-5-11

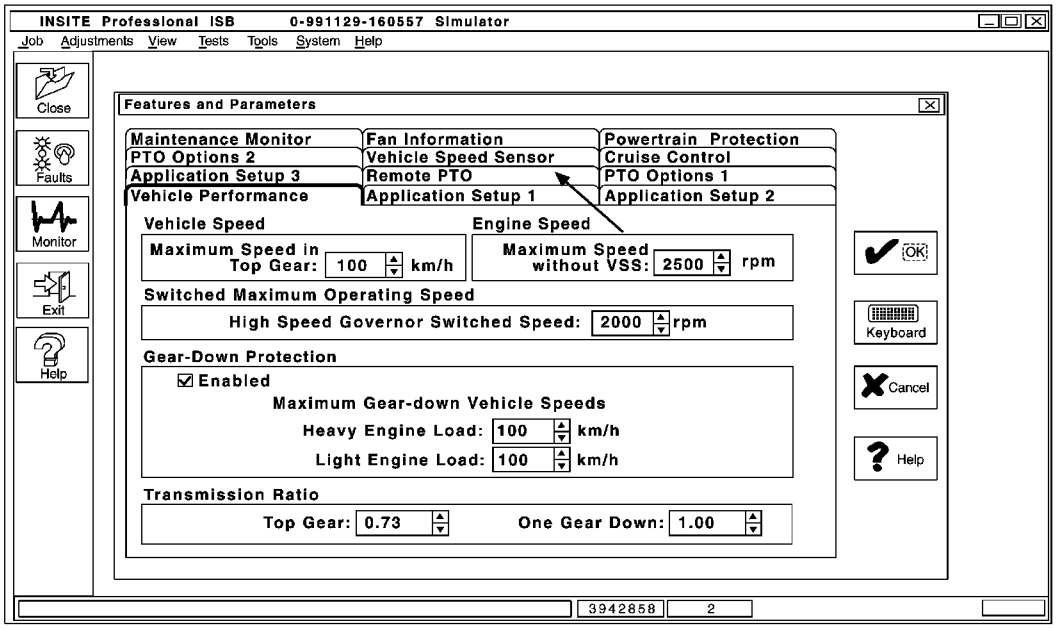

TB-6036-A

Figure 7 - Article 00-5-11

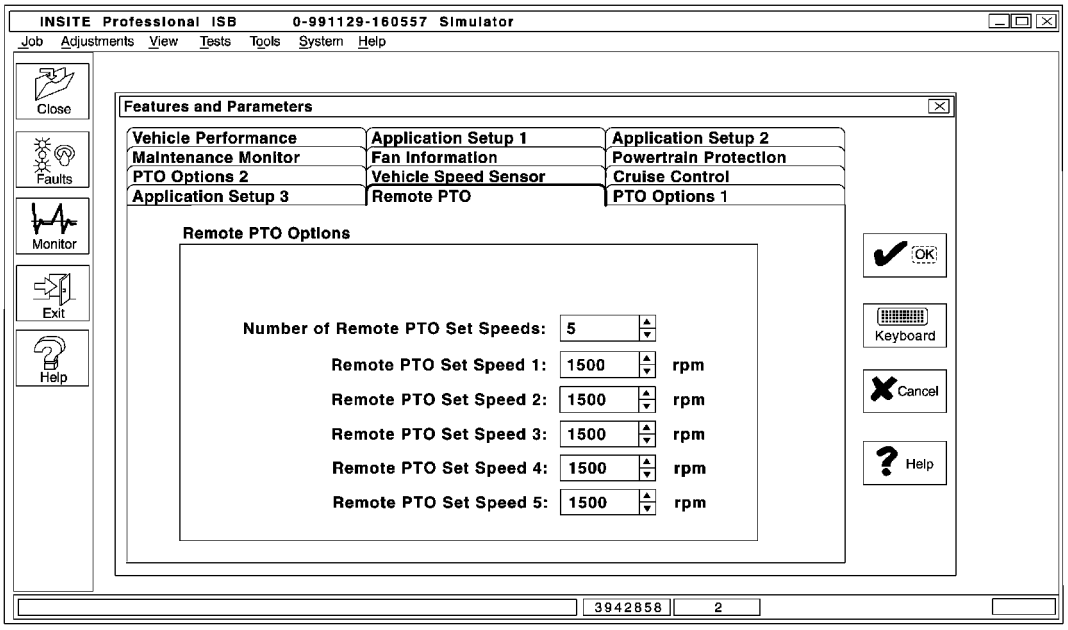


Figure 8 - Article 00-5-11