F-150 BRAKE HOSE REPLACEMENT

AFFECTED VEHICLES: **CERTAIN 2001 MODEL YEAR F-150 4X2 TRUCKS**

SERVICE PROCEDURE

1. Raise vehicle on a hoist. Remove the left front wheel and tire assembly, then position a drain pan under the caliper.
2. Unbolt the brake hose from the left front brake caliper. See Figure 1.

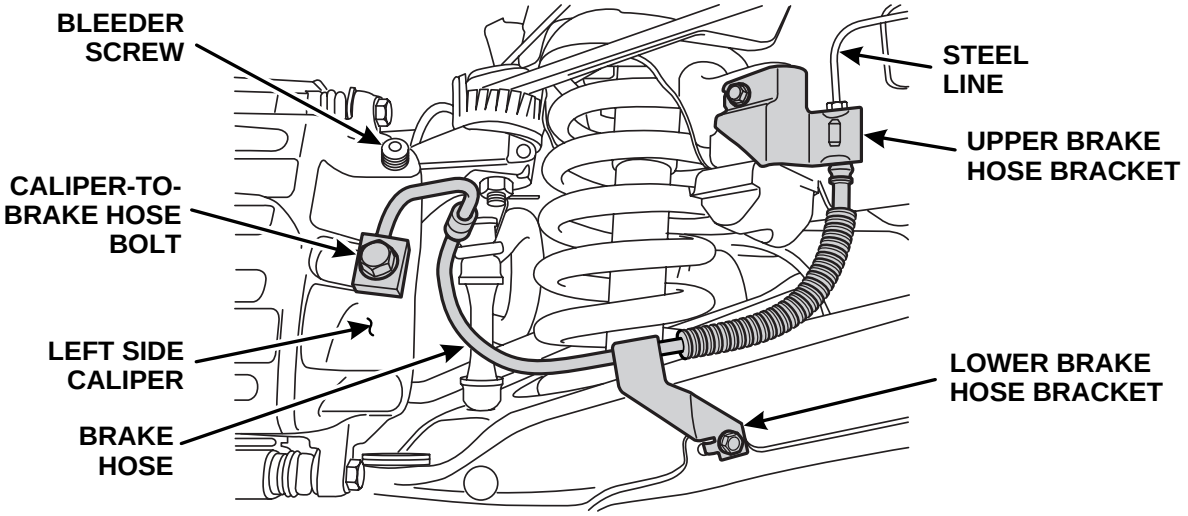


FIGURE 1

3. Disconnect the brake hose from the steel line at the upper brake hose bracket. See Figure 1.
4. Unbolt the upper and lower brake hose brackets from the vehicle and remove the brake hose from the vehicle. See Figure 1.
5. Position the ***new*** brake hose on the vehicle and install the upper and lower brake hose bracket bolts. Tighten the bolts to 15 Nm (11 lb-ft).
6. Connect the brake hose to the steel line at the upper brake hose bracket and tighten the line nut to 17 Nm (13 lb-ft).
7. Position the ***new*** brake hose on the caliper and install a ***new*** bolt with two (2) ***new*** copper washers. Tighten the bolt to 35 Nm (26 lb-ft).

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
03/01

8. **WARNING: USE OF ANYTHING OTHER THAN APPROVED DOT 3 BRAKE FLUID FROM A SEALED CONTAINER WILL CAUSE PERMANENT DAMAGE TO BRAKE COMPONENTS AND RENDER THE BRAKES INOPERATIVE.**

   WARNING: BRAKE FLUID CONTAINS POLYGLYCOL ETHERS AND POLYGLYCOLS. AVOID CONTACT WITH EYES. WASH HANDS THOROUGHLY AFTER HANDLING. IF BRAKE FLUID CONTACTS EYES, FLUSH EYES WITH RUNNING WATER FOR 15 MINUTES. GET MEDICAL ATTENTION IF IRRITATION PERSISTS. IF TAKEN INTERNALLY, DRINK WATER AND INDUCE VOMITING. GET MEDICAL ATTENTION IMMEDIATELY.

   CAUTION: Do not allow the brake master cylinder reservoir to run dry during the bleeding operation. Keep the brake master cylinder reservoir filled with the specified brake fluid. Never reuse the brake fluid that has been drained from the hydraulic system.

   CAUTION: Brake fluid is harmful to painted and plastic surfaces. If brake fluid is spilled onto a painted or plastic surface, immediately wash it with water.

   Bleed the left front caliper and brake hose in the following manner:
   - Attach a rubber drain hose to the caliper bleeder screw and submerge the free end of the tube in a container partially filled with clean brake fluid.
   - Have an assistant pump the brake pedal and then hold firm pressure on the brake pedal.
   - Loosen the caliper bleeder screw until a stream of brake fluid comes out. While the assistant maintains pressure on the brake pedal, tighten the caliper bleeder screw.
   - Repeat until clear, bubble-free fluid comes out.
   - Refill the brake master cylinder reservoir as necessary.
   - When finished, tighten the caliper bleeder screw to 21 Nm (15 lb-ft).
   - Check and top off brake master cylinder reservoir as necessary.
9. Inspect the brake hose and caliper for leaks.
10. Position the left front wheel and tire assembly onto the vehicle and install the lug nuts. Tighten the lug nuts to 203 Nm (150 lb-ft), in a star pattern.

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
03/01