RANGER ELECTRIC VEHICLE (EV) TRANSAXLE BOLTS

AFFECTED VEHICLES: ALL 1998-1999 AND CERTAIN 2000 MODEL YEAR RANGER EV

OVERVIEW

The transaxle bolts on the affected vehicles must be replaced and tightened to the proper torque specification. This procedure gives the detail for the proper replacement and tightening of the bolts.

The following tools that were provided to all authorized EV dealers must be used:

- Snap-On® torque wrench (TQFRN130)
- Snap-On® 15 mm socket (FSM151)
- Snap-On® 15 mm torque adapter (FRDHM15)
- Snap-On® wobble extension (FXWK6)

SERVICE PROCEDURE

1. Raise and support the vehicle.
2. **CAUTION: Each bolt must be replaced one at a time in the proper sequence (7-8-6-9-3-2-4-1-5) and fully tightened immediately after installing. Failure to do so will damage the transaxle.**

   Replace the transaxle bolts one at a time following the sequence shown at the bottom of the illustration. See Figure 1. All of the bolts are accessible with the torque wrench and socket except the No. 1 and No. 6 bolts. The No. 1 bolt will require the use of the wobble extension. The No. 6 bolt will require the use of the torque adapter. If present, clean all residual Loctite® from the threaded holes in the transaxle with brake cleaner and compressed air. Tighten each bolt to the following specifications immediately after installing.
   - Tighten all bolts except No. 6 to 130 Nm (96 lb-ft).
   - Tighten bolt No. 6 (with torque adapter) to 123 Nm (91 lb-ft).
3. Lower the vehicle.

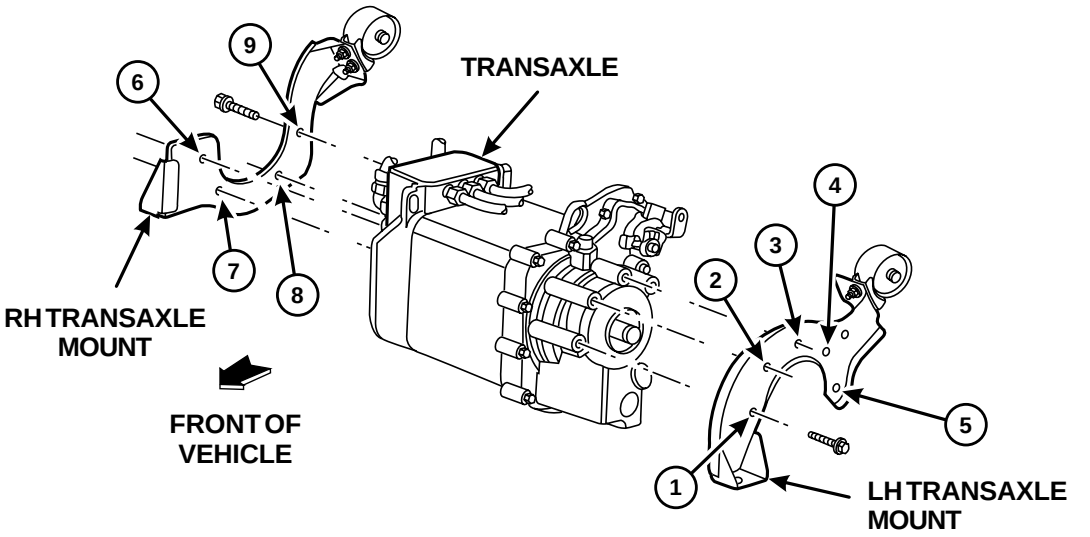

BOLT REPLACEMENT SEQUENCE 7-8-6-9-3-2-4-1-5 **01S07A**

FIGURE 1

Ford Motor Company

CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
02/01