
IMPORTANT ENGINE INFORMATION (IEI) LABEL INSTALLATION

1. The IEI label is to be installed on the passenger side valve cover. Open the hood of the vehicle and locate the area as shown in the illustration.

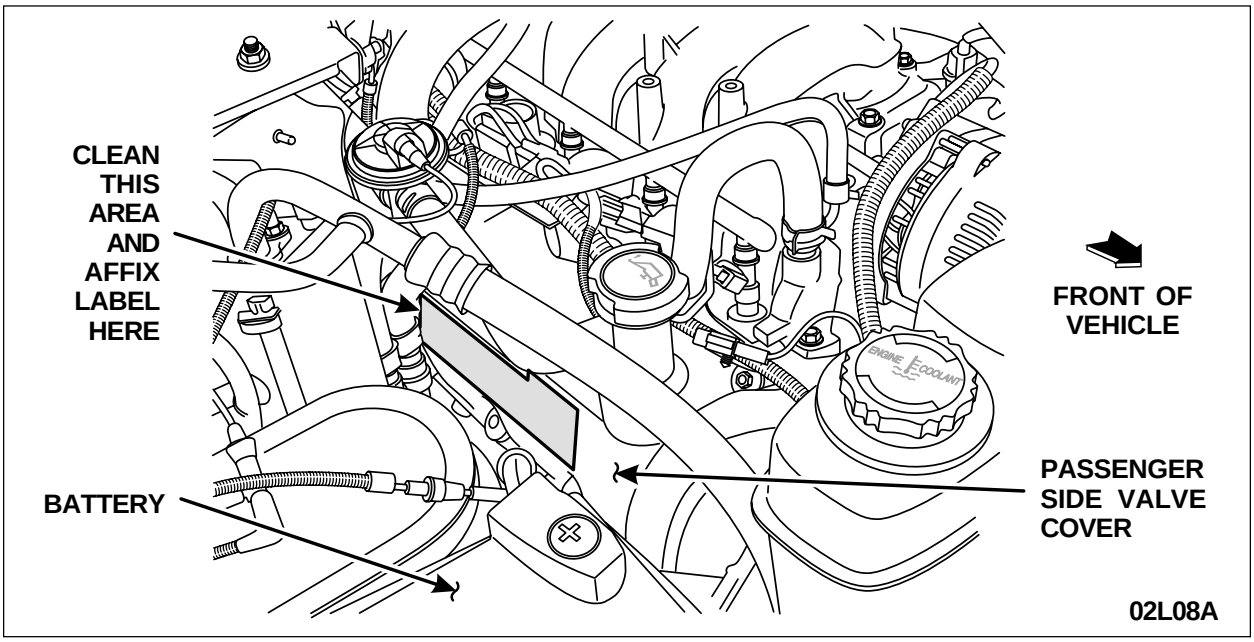

2. Using isopropyl alcohol and a clean cloth, clean the area and allow it to dry.
3. Remove the backing material from the ***new*** label and apply the label in the area specified.
4. Smooth the label as you apply it to remove bubbles or wrinkles.

Ford Motor Company
CPR © 2002 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
01/02