EMISSIONS LABEL REPLACEMENT

AFFECTED VEHICLES: **CERTAIN 2002 ECONOLINE CUTAWAY AND STRIPPED CHASSIS**

SERVICE PROCEDURE

1. Open the hood and locate the vehicle emissions certification information (VECI) label on the upper radiator support. See Figure 1.

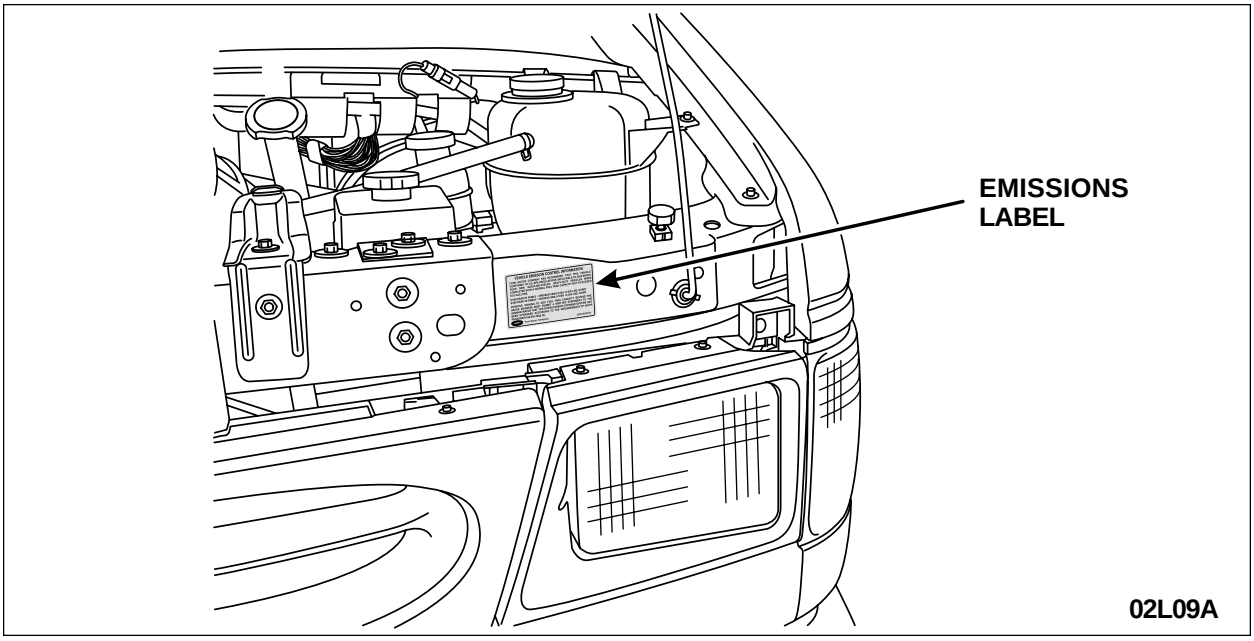


FIGURE 1

2. Remove the label. Some adhesive and print will remain in the area. Clean the area using the supplied label adhesive cleaning pad or isopropyl alcohol and a clean cloth.
3. Peel the supplied ***new*** VECI label from its backing and apply it to the cleaned area.
4. Close the hood.

Ford Motor Company

CPR © 2002 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
05/02