TRANSAXLE—CD4E—DIFFERENTIAL SHIM MEASUREMENT PROCEDURE—SERVICE TIPS	Article No. 01-2-1

FORD: 2001 ESCAPE

ISSUE

The existing special service tools (307-300-01 vertical supports and the 307-300 horizontal gauge bar) contact the spline of the Escape differential assembly and may result in selecting the wrong shim required for proper reassembly.

ACTION

Place the vertical supports and the gauge bar so that the gauge bar does not contact the differential assembly spline. The selection of the correct shim, consistent with the 2001 Escape Workshop Manual, can now be properly determined. Refer to the following Service Procedure to select the correct Escape differential assembly shim.

SERVICE PROCEDURE

Use special service tools 307-300-01 (vertical supports) and the 307-300 (horizontal gauge bar) for measuring the vertical distance between the gauge bar top and the shim seating surface area (near the top of the differential).

NOTE

CARE MUST BE USED WHEN INSTALLING THE SPECIAL TOOL GAUGE BAR TO AVOID CONTACT WITH THE DIFFERENTIAL ASSEMBLY SPLINE.

1. Figure 1 shows the new vertical support spacer locations for making the #14 differential shim measurements (please note that location “A” will be used for two (2) measurements). Refer to Figure 1.
2. Install special service tool in the “A” - “B” location shown (Figure 2). Take and record measurement. You will notice that the gauge bar at NO TIME contacts the spline or the top of the differential gear assembly.
3. Install special service tool in the “A” - “C” location shown (Figure 3). Take and record measurement. You will notice again that the gauge bar at NO TIME contacts the spline or the top of the differential gear assembly.
4. Calculate an average of the two measurements. This is your dimension “B”.
5. Use the combined thickness of the special tool with the long spacer that equals 177.8mm or 7.01″. This is dimension “A”.
6. Subtract dimension “B” from “A” and the result is dimension “C”.
7. Use dimension “C” to select the correct #14 differential bearing shim from the differential bearing shim chart. See chart below.

#14 DIFFERENTIAL SHIM	
IF DIMENSION “C” IS:	USE #14 DIFFERENTIAL SHIM:
130.76 to 130.46mm (5.148 to 5.136 in.)	1.08 to 0.98mm (0.042 to 0.038 in.)
130.45 to 130.16mm (5.136 to 5.124 in.)	1.38 to 1.28mm (0.054 to 0.050 in.)
130.15 to 129.87mm (5.123 to 5.113 in.)	1.67 to 1.57mm (0.065 to 0.061 in.)
129.86 to 129.57mm (5.113 to 5.101 in.)	1.97 to 1.87mm (0.077 to 0.073 in.)
129.56 to 129.27mm (5.101 to 5.089 in.)	2.27 to 2.17mm (0.089 to 0.085 in.)

8. Select and install the #14 differential bearing shim (select fit).
9. Install the #15 differential bearing.
10. Continue with the procedure as outlined in the Workshop Manual.

OTHER APPLICABLE ARTICLES: NONE
WARRANTY STATUS: INFORMATION ONLY
OASIS CODES: 504000

Copyright © 2001 Ford Motor Company

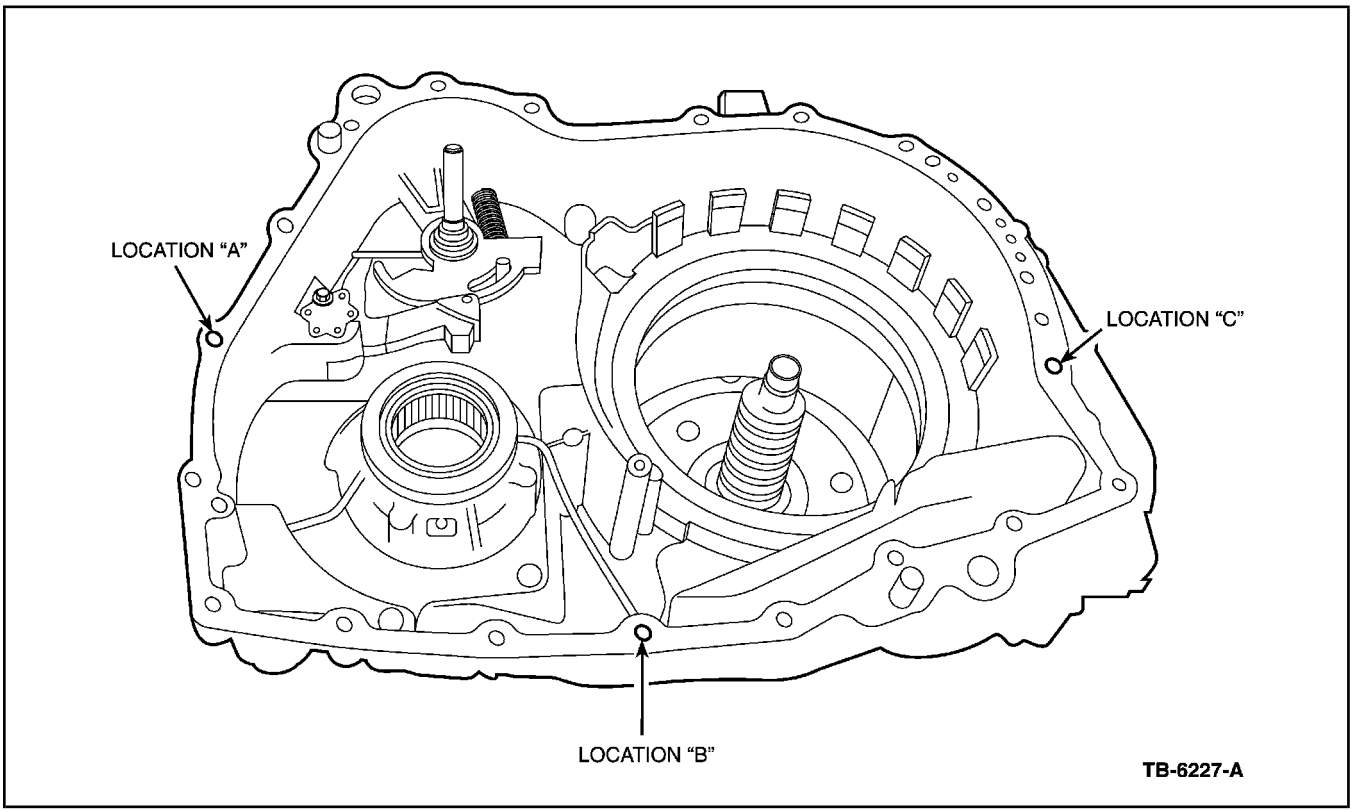


Figure 1 - Article 01-2-1

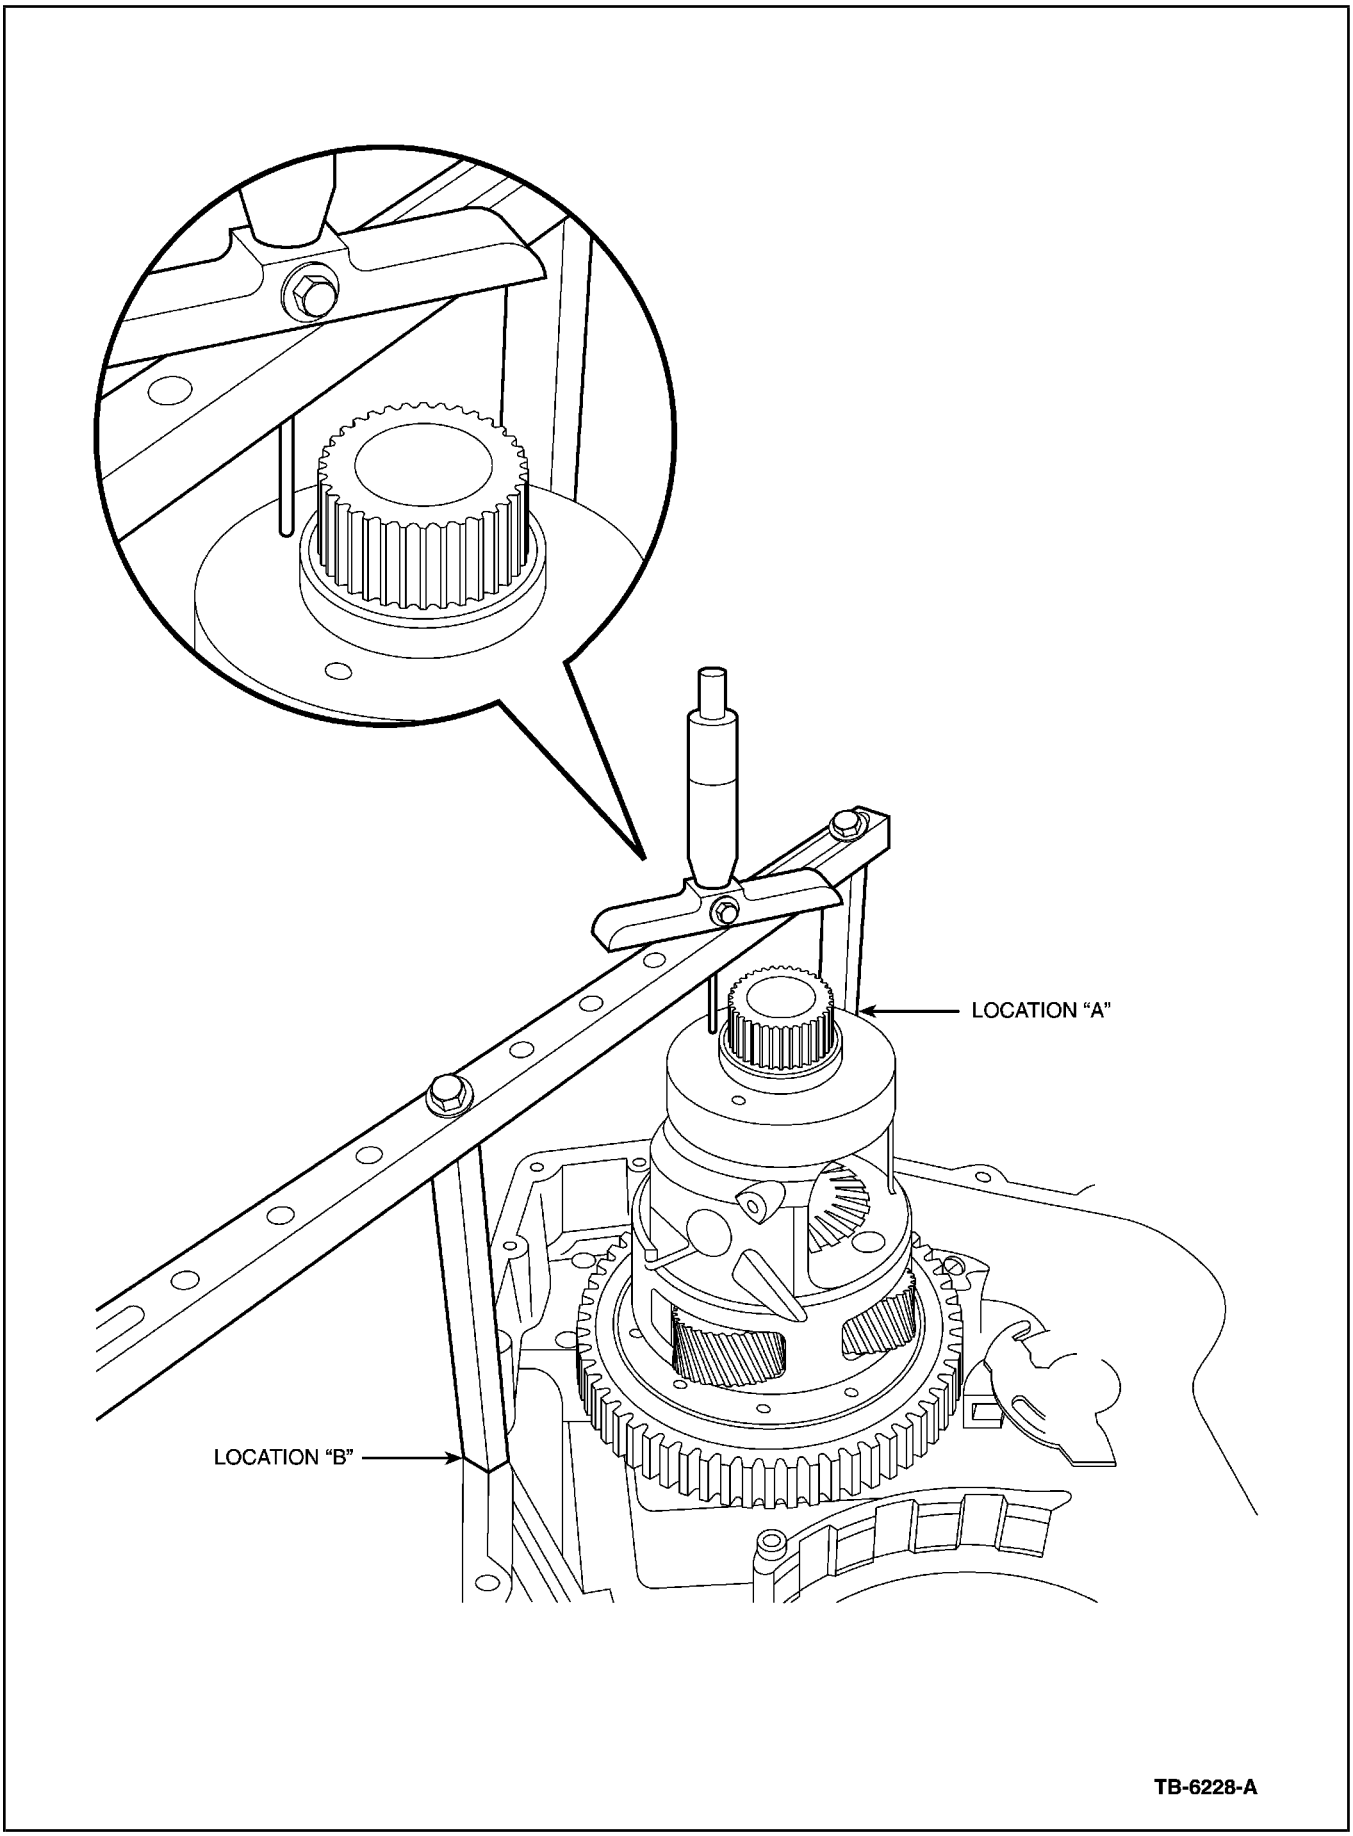


Figure 2 - Article 01-2-1

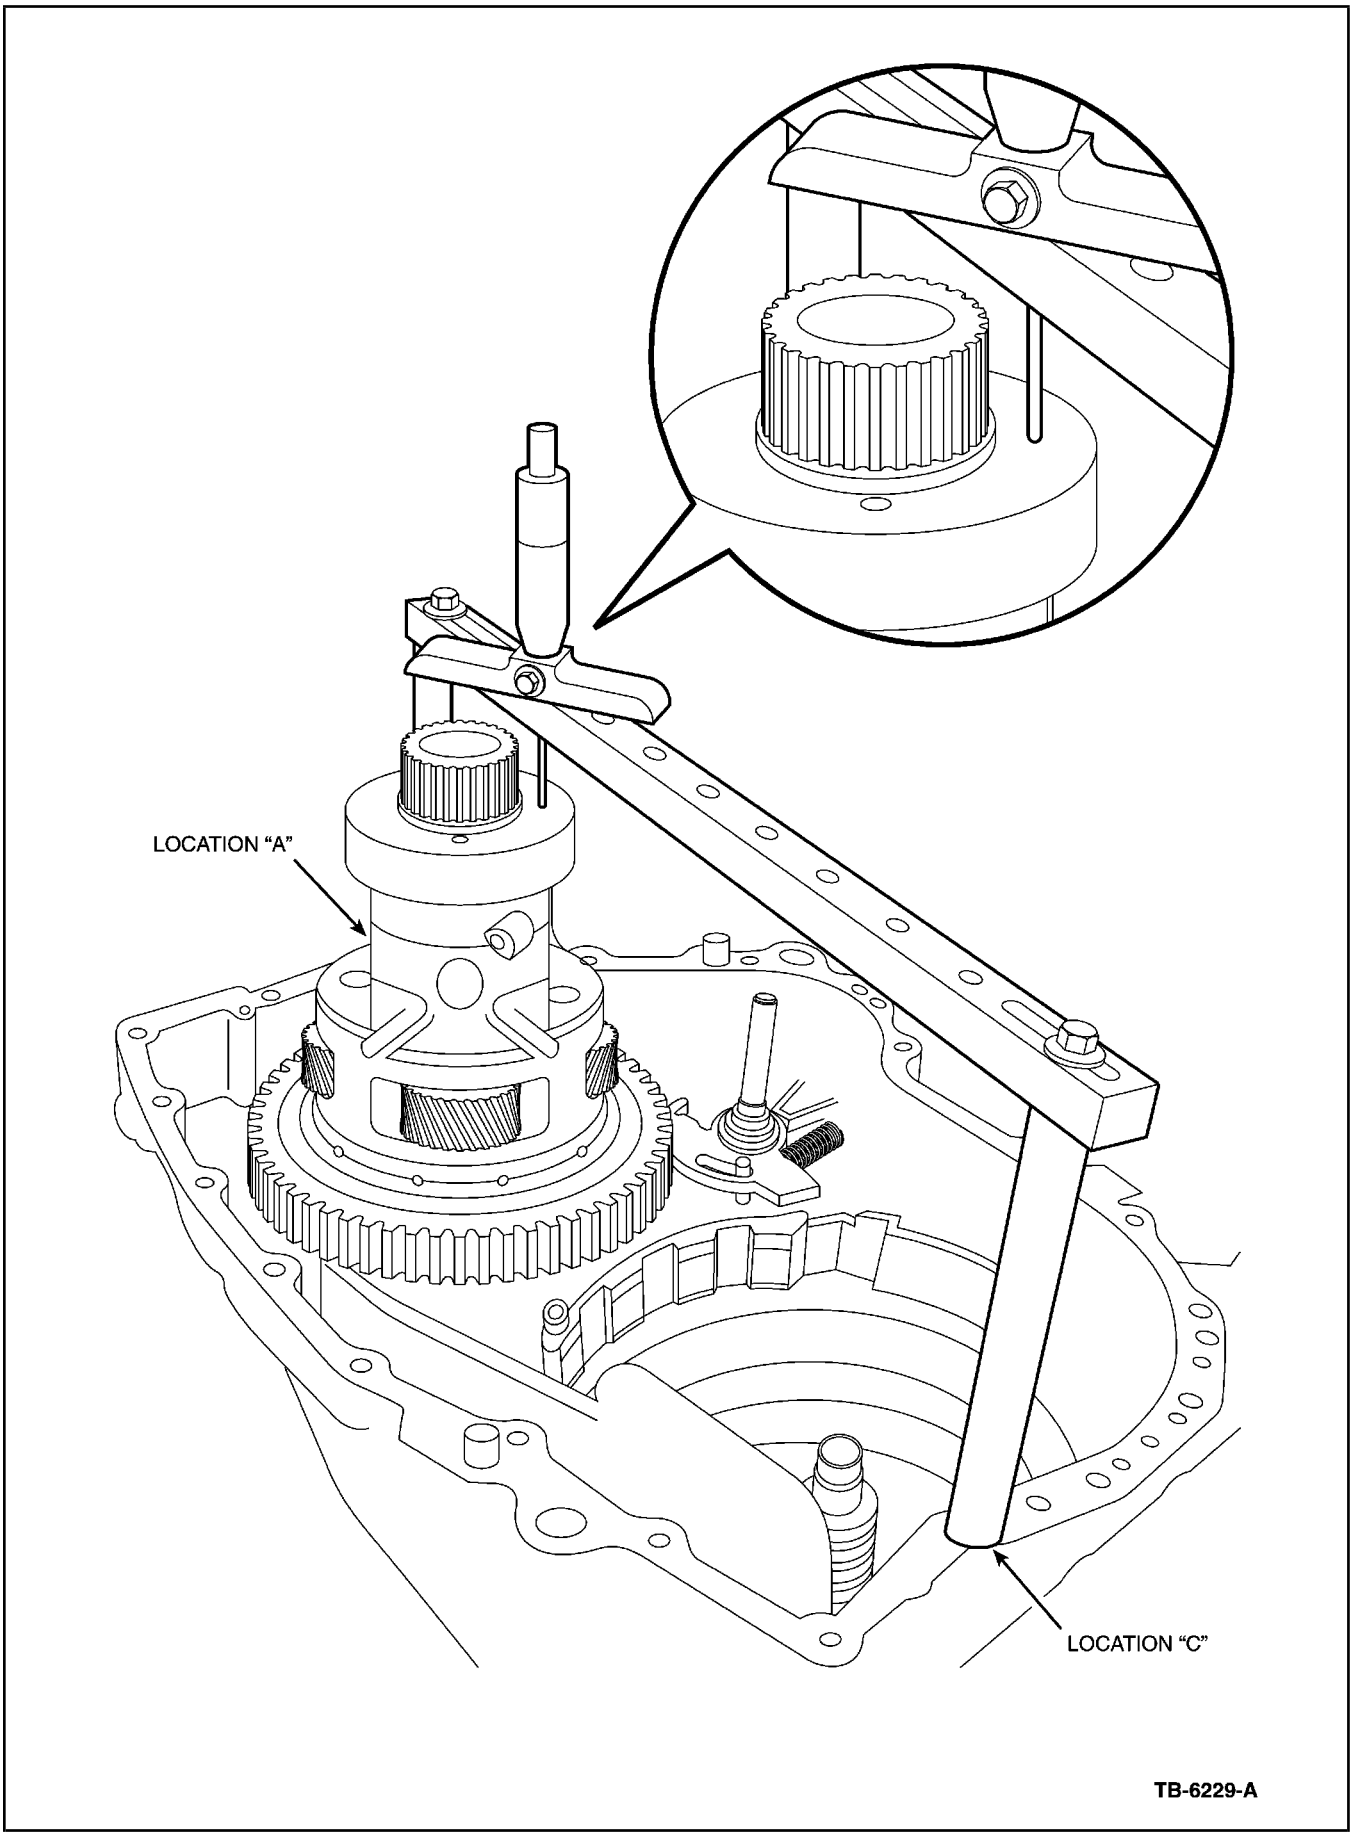


Figure 3 - Article 01-2-1