INJECTOR PRESSURE SENSOR (IPS) REPLACEMENT

AFFECTED VEHICLES: CERTAIN 2000 MODEL YEAR FOCUS WITH 2.0L ZETEC ENGINES

TABLE OF CONTENTS

SERVICE PROCEDURE ..... PAGE 1
PREPARING AUTHORIZED MODIFICATIONS LABEL ..... PAGE 4

SERVICE PROCEDURE

WARNING!

DO NOT SMOKE OR CARRY LIGHTED TOBACCO OR OPEN FLAME OF ANY TYPE WHEN WORKING ON OR NEAR ANY FUEL RELATED COMPONENTS. HIGHLY FLAMMABLE VAPORS ARE ALWAYS PRESENT AND MAY IGNITE. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

WARNING!

THIS PROCEDURE INVOLVES FUEL HANDLING. BE PREPARED FOR FUEL SPILLAGE AT ALL TIMES AND ALWAYS OBSERVE FUEL HANDLING PROCEDURES. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

WARNING!

THE FUEL SYSTEM REMAINS PRESSURIZED FOR A LONG TIME AFTER THE IGNITION IS SWITCHED OFF. THE INJECTOR PRESSURE MUST BE RELEASED BEFORE ATTEMPTING ANY REPAIRS. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN PERSONAL INJURY.

1. Relieve the fuel system pressure by removing the fuel pump fuse from the battery junction box under the hood. Start the engine and allow it to idle, then depress the accelerator pedal to stall the engine. Crank the engine for an additional 5 seconds to make sure the fuel supply manifold pressure has been relieved.
2. Install a memory saver, then disconnect the battery negative cable.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
02/00

3. Disconnect the fuel line from the injector pressure sensor (IPS) as follows. See Figure 1.
   - Lift up on the top of the retaining clip.
   - Squeeze the sides of the clip inward and push down on the clip.
   - Pull the fuel line off the sensor.

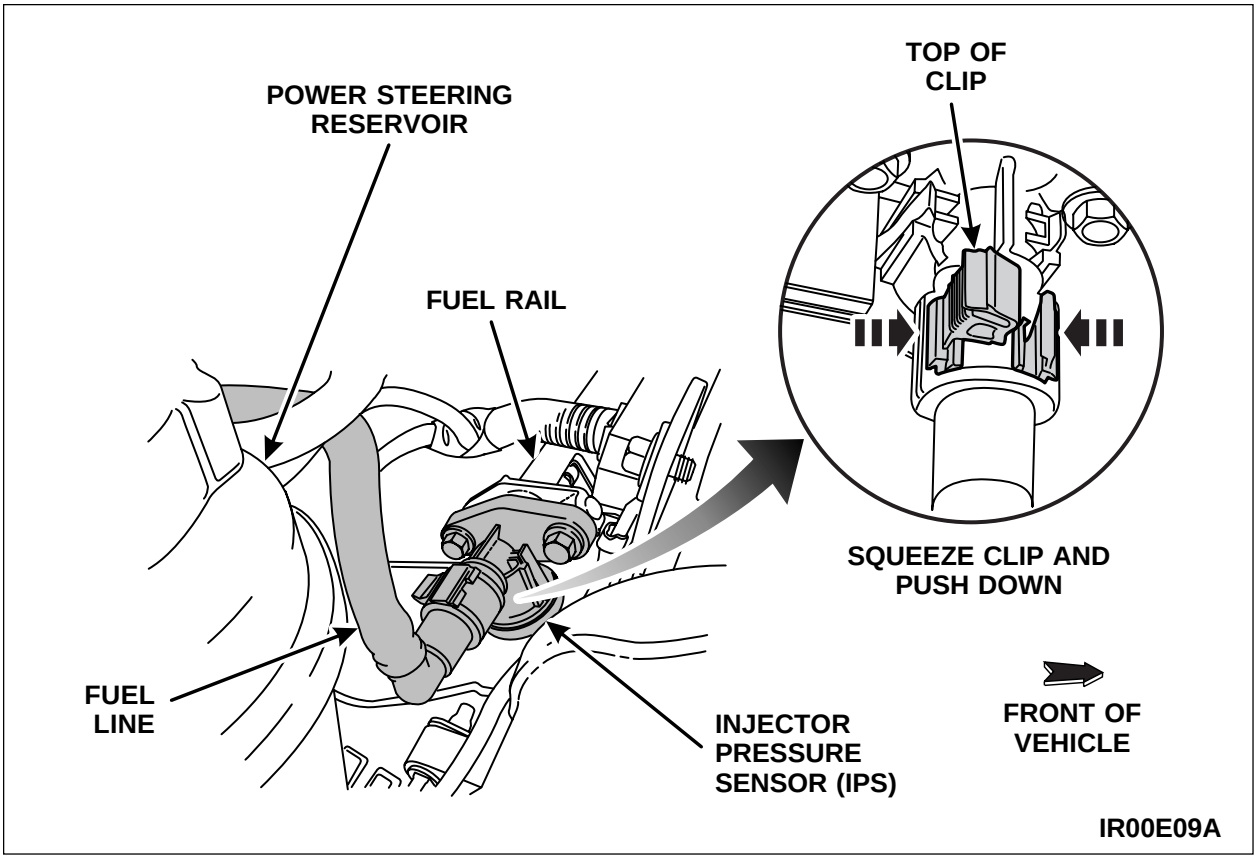


FIGURE 1

4. Remove the two (2) retaining bolts from the IPS.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
02/00

5. Rotate the IPS until the electrical connector is pointing upward, then pull the sensor out of the fuel rail. See Figure 2.
6. Disconnect the IPS electrical connector as follows. See Figure 2.
   - Slide the red cover up to expose the locking tab.
   - Depress the locking tab and slide the connector off the sensor.
7. Disconnect the vacuum hose, then remove and discard the IPS. See Figure 2.

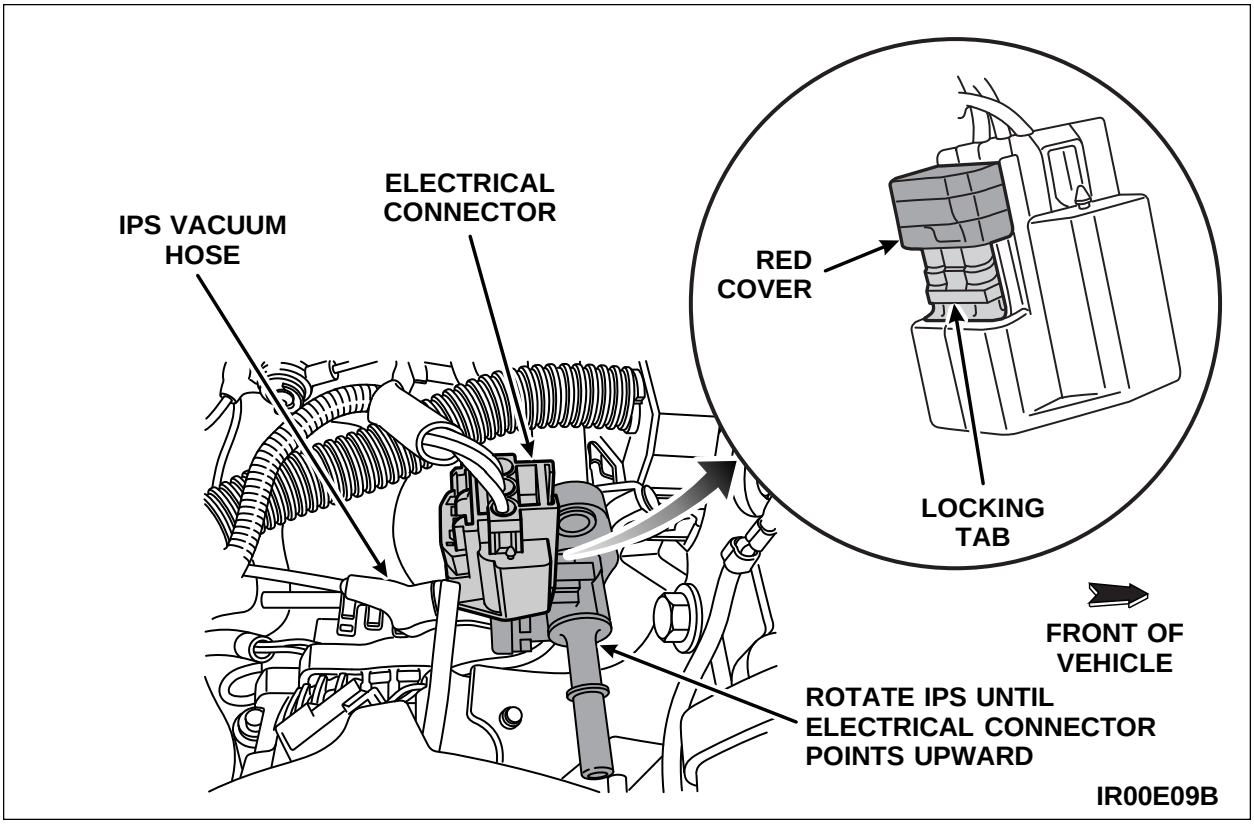


FIGURE 2

8. Lubricate the O-ring seal on the ***new*** IPS with clean engine oil to aid installation.
9. Connect the vacuum hose.
10. Slide the electrical connector onto the IPS. Then, slide the red cover over the locking tab.
11. Insert the ***new*** IPS into the fuel rail with the electrical connector pointing upward, then rotate to the installed position.
12. Install the two (2) retaining bolts. Tighten to 6 Nm (53 lb-in).
13. Connect the fuel line and secure the locking clip.
14. Install the fuel pump fuse into the battery junction box.
15. Connect the battery negative cable, then remove the memory saver.
16. Cycle the key to the ON position 2 to 3 times to pressurize the fuel system and check for leaks around the IPS.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
02/00

PREPARING AUTHORIZED MODIFICATIONS LABEL

1. Obtain and prepare the Authorized Modifications Label. Write the modification completed, your P&A Code, date of repair and the recall program type and program number. See Figure 3.

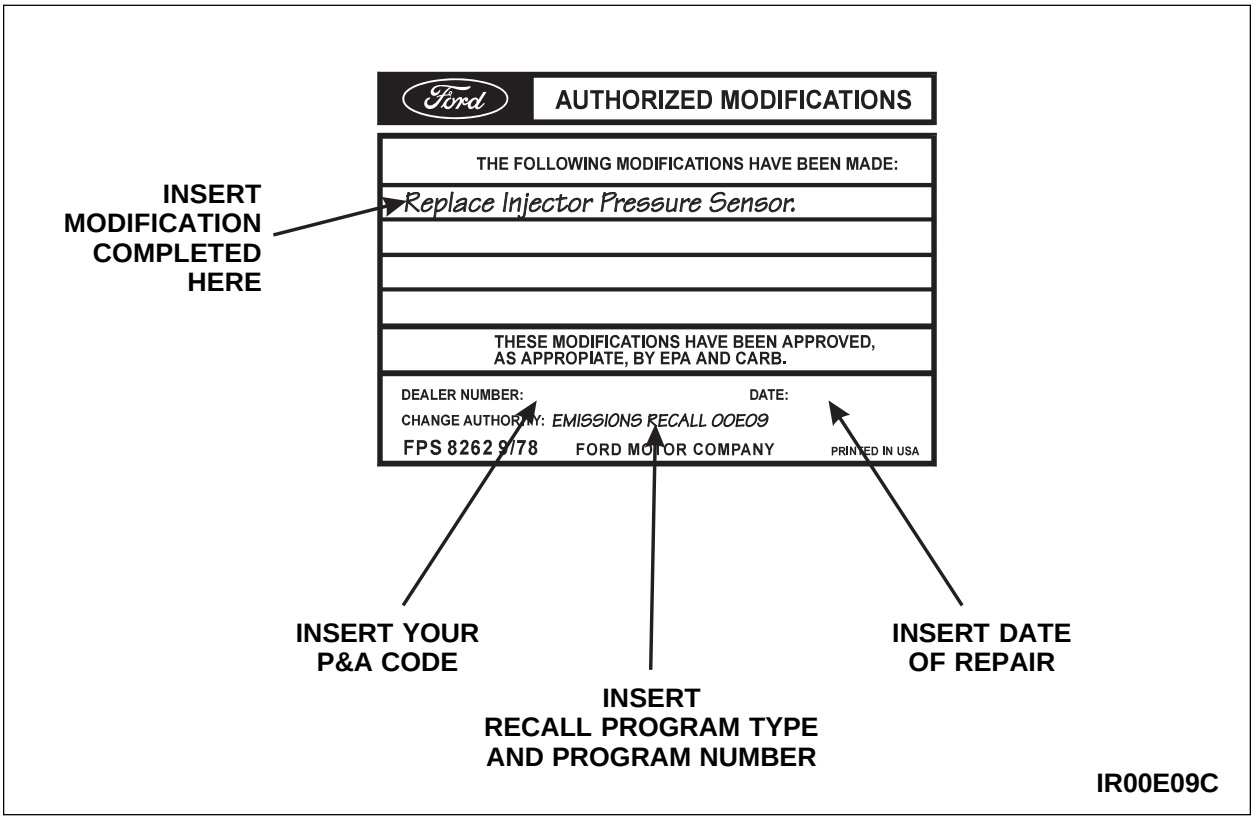


FIGURE 3

2. Apply the label to a clear area of the upper radiator support.
3. Provide California and Massachusetts owners with “Emissions Recall-Proof of Correction” Certificates.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
02/00