INNER FENDER WELL—DENTED OR DINGED FROM STONES BEING THROWN INTO WHEELWELL	Article No. 00-9-5

FORD: 1997-2000 F-150, F-250 LD

This TSB is being republished in its entirety to clarify the affected vehicles.

ISSUE

Dents or dings may be evident in the rear inner fender wells on some vehicles. This may be due to rocks being thrown up into the wheelwell.

ACTION

Install inner fender well shields. The shields should reduce the possibility of dents and dings from rocks. Refer to the following Service Procedure for details.

SERVICE PROCEDURE

1. Remove rear wheel and tire and power wash inner surface of fender well. Surface must be free of dirt, oil, and road film. Dry with shop air to ensure good sealer adhesion.
2. Apply generous amount of undercoating to the inner fender well. Wipe off excess overspray where necessary (Figure 1).
3. Install Splash Shield Kit (YL3Z-16A550-AB).
4. While holding shield against cross beam, align vertical flange of shield to the open edge of the beam and the front edge of the shield flush with the bottom surface of the beam.
5. Using a 9/32″ bit and the shield as a guide, drill the beam at hole “A” (Figure 2).
6. Change to a 1/8″ bit and drill a hole in the beam at “B” location (Figure 2).
7. Change to a 5/16″ bit and drill out the hole at “A” (Figure 2).
8. Slide the J-clip over the open end of the beam so it snaps into hole “A” (Figure 2).
9. Loosely attach the shield using a screw and washer at holes “A” and “B”.
10. Align the side flange of the shield with the rear fender flange and scribe holes “C” and “D” (Figure 2) on the fender flange.
11. Remove the shield from vehicle.
12. Center punch holes “C” and “D” and drill through the fender flange using a 1/4″ drill.
13. Slide J-clips over holes “C” and “D”.
14. Holding shield in place, secure shield to fender with screw and washer.
15. Reinstall wheel and tire.

PART NUMBER	PART NAME
YL3Z-16A550-AB	Splash Shield Kit

OTHER APPLICABLE ARTICLES: NONE
SUPERSEDES: 00-1-4
WARRANTY STATUS: Eligible Under The Provisions Of Bumper To Bumper Warranty Coverage

OPERATION	DESCRIPTION	TIME
000905A	Clean, Dry, And Apply Undercoating To Rear Wheelwell, And Install Splash Shield Kit	0.8 Hrs.

DEALER CODING

BASIC PART NO.	CONDITION CODE
16A550	06

OASIS CODES: 106000, 108000, 111000

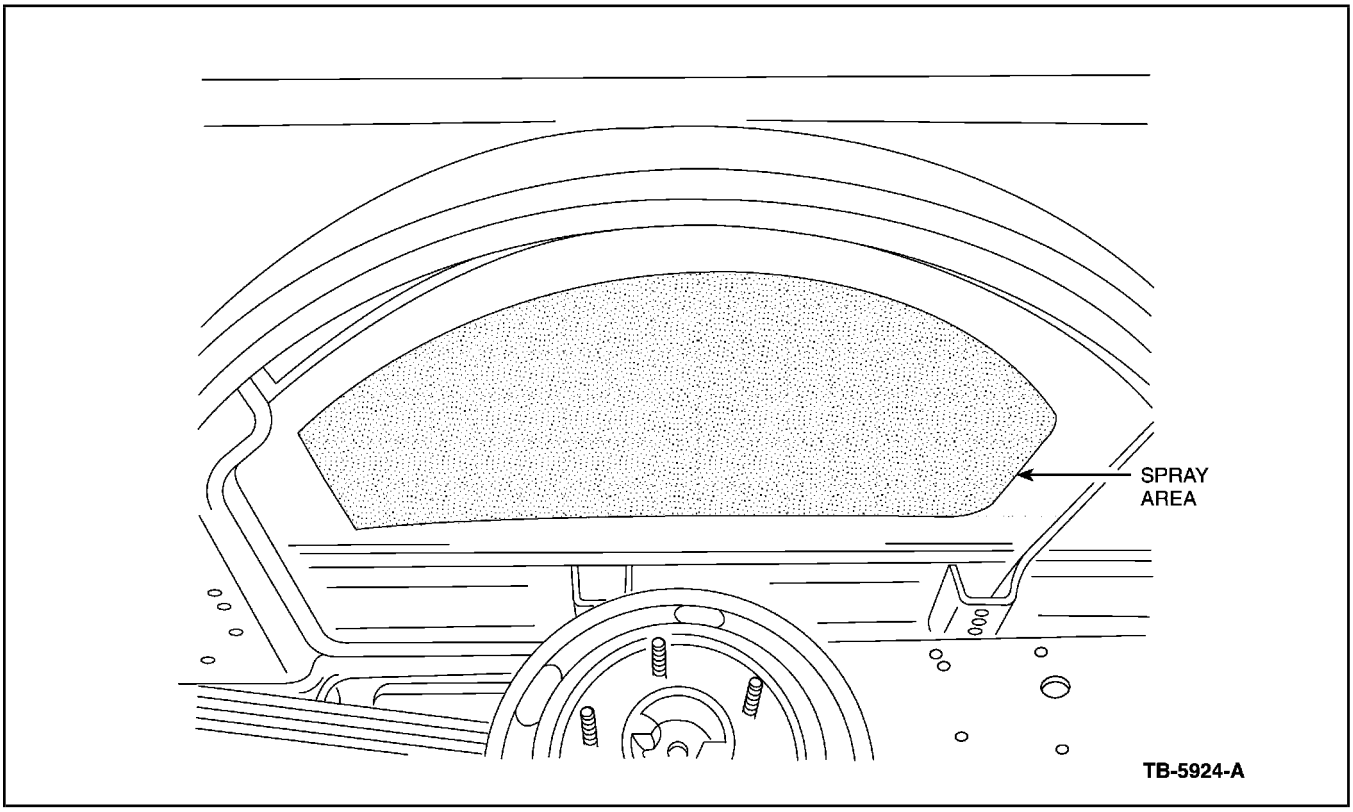

Figure 1 - Article 00-9-5

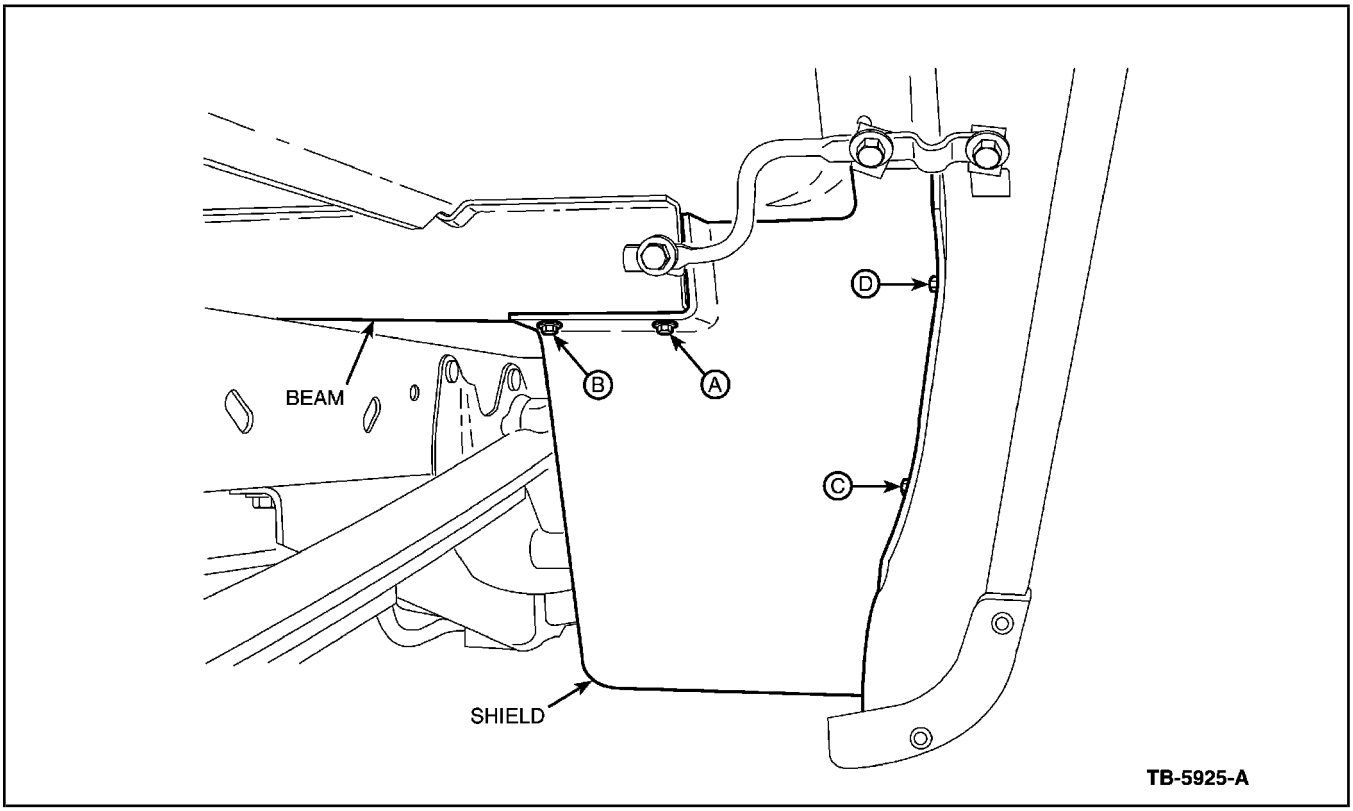

Figure 2 - Article 00-9-5