F-53 MOTORHOME CONCERNS

AFFECTED VEHICLES: CERTAIN 2000 F-53 MOTORHOME STRIPPED CHASSIS

TABLE OF CONTENTS

OVERVIEW ..... Page 1
SHIFT CABLE — INSTALLATION INSPECTION ..... Page 1
STEERING COLUMN YOKE BOLT — TORQUE CHECK ..... Page 3
SHIFT LEVER BRACKET BOLTS — TORQUE CHECK ..... Page 4
STEERING GEAR ATTACHING BOLTS — TORQUE CHECK ..... Page 5
WHEEL LUG NUTS — TORQUE CHECK ..... Page 5

OVERVIEW

These instructions provide direction to perform the following:

- Checking and installing the shift cable into a retention bracket.
- Tightening a steering column yoke coupling shaft retaining bolt.
- Tightening two (2) shift lever bracket bolts.
- Checking and tightening the wheel lug nuts.
- Tightening the steering gear to-bracket bolts.
- Tightening the steering gear bracket-to-frame bolts.

SHIFT CABLE — INSTALLATION INSPECTION

1. Remove the shrouds covering the lower steering column area. See Figure 1.

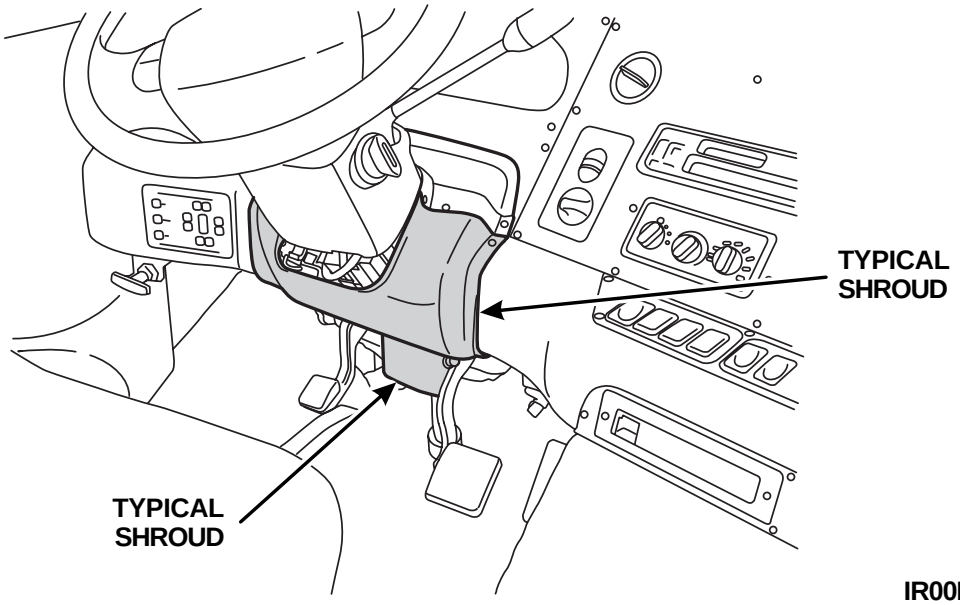


FIGURE 1

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/00

2. Reaching under the left end of the instrument panel, locate the shift cable where it attaches to the retention bracket. Check to see if it is fully seated in the retention bracket. See Figure 2.
   - If the cable is fully seated and locked, no further action is required.
   - If the cable is not fully seated, pull the cable into position until it locks in place in the bracket.
3. Go to next repair procedure.

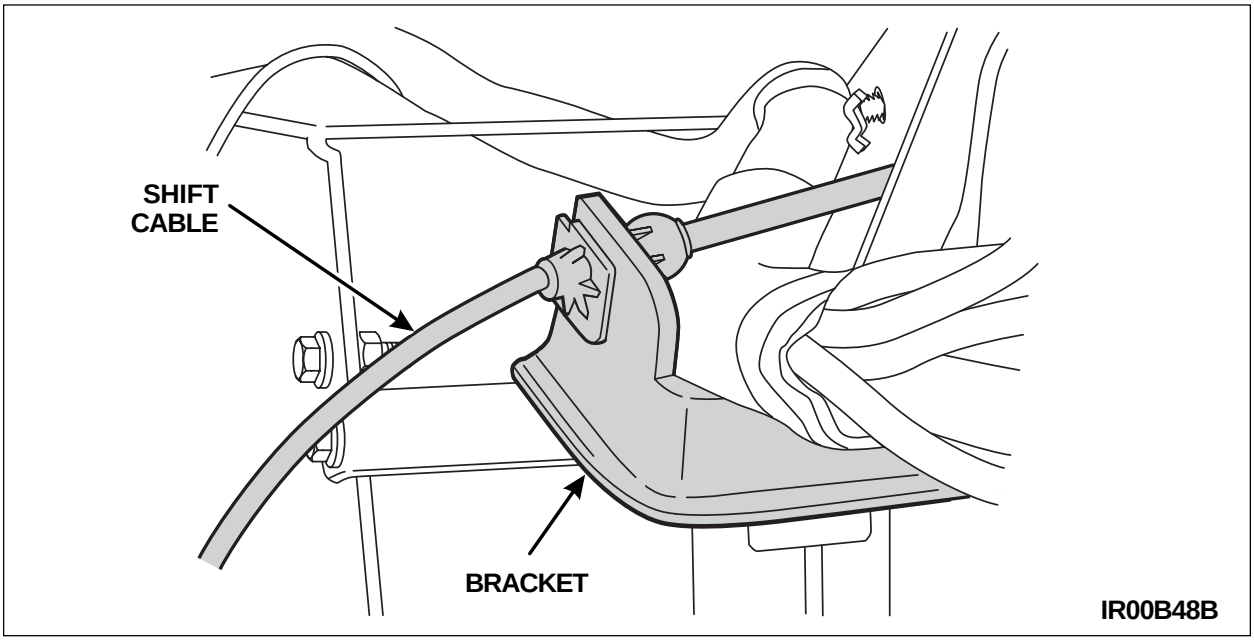


FIGURE 2

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/00

STEERING COLUMN YOKE BOLT — TORQUE CHECK

1. Tighten the lower steering column yoke bolt to 48 Nm (35 lb-ft). See Figure 3.
2. Go to next repair procedure.

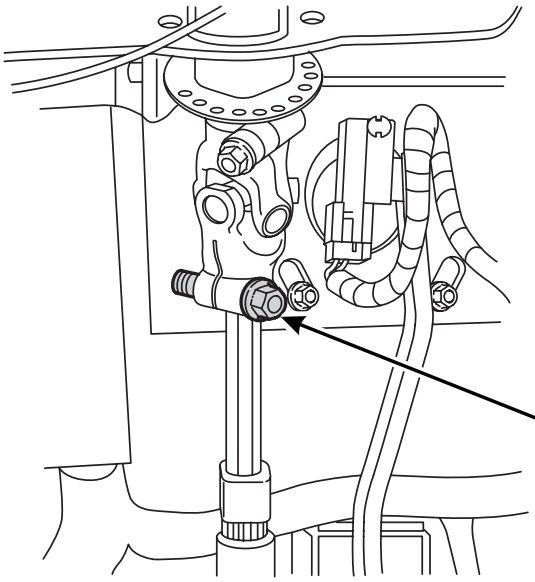


FIGURE 3

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/00

SHIFT LEVER BRACKET BOLTS — TORQUE CHECK

1. Tighten both shift lever bracket retaining bolts to 9 Nm (80 lb-in). See Figure 4.
2. Go to next repair procedure.

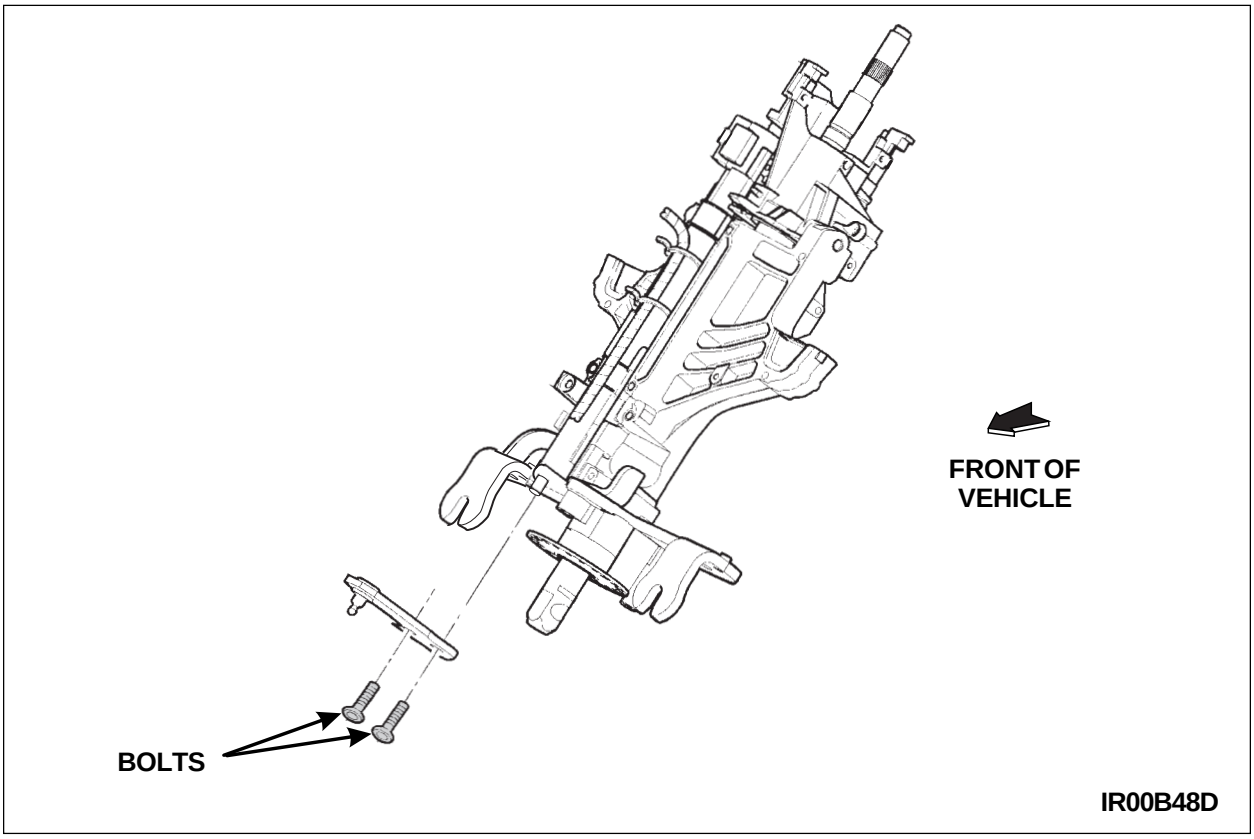


FIGURE 4

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/00

STEERING GEAR ATTACHING BOLTS - TORQUE CHECK

1. Tighten the steering gear-to-bracket bolts to 350 Nm (258 lb-ft). See Figure 5.
2. Tighten the bracket-to-frame bolts to 200 Nm (148 lb-ft). See Figure 5.
3. Go to the next repair procedure.

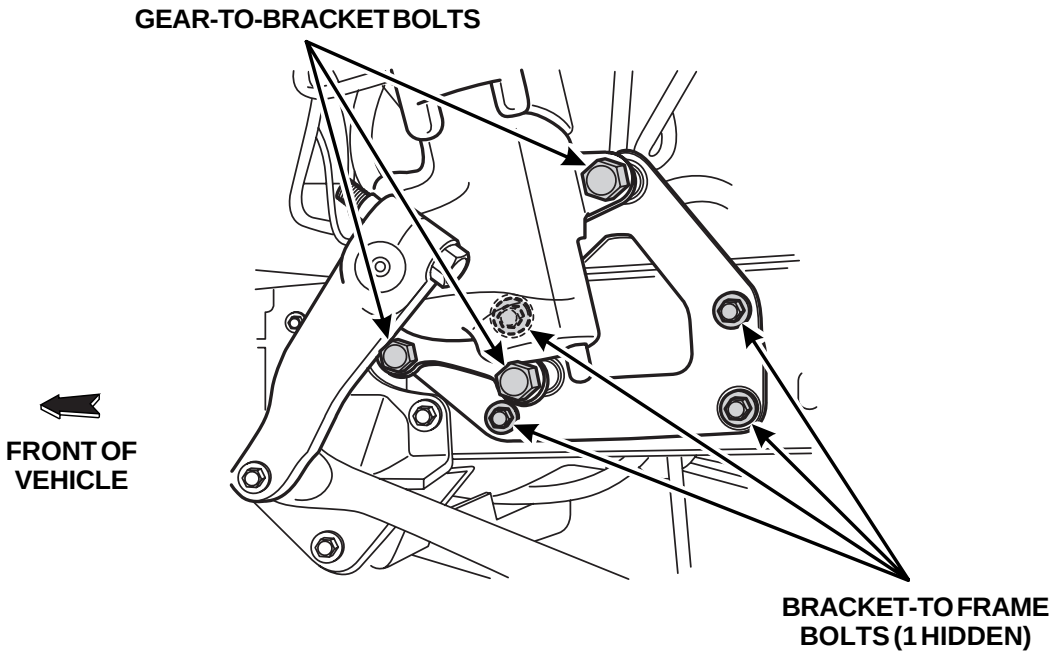


FIGURE 5

WHEEL LUG NUTS — TORQUE CHECK

1. Remove all wheel covers, if equipped.
2. Check the torque of each lug nut on all wheels. Make sure all are tightened to 190 Nm (140 lb-ft).
3. Install the wheel covers, if equipped.

CPR © 2000 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
07/00