• **DIAGNOSTIC TROUBLE CODES (DTCS)—P0350-P0360 COIL DTCS STORED IN MEMORY—ROUGH IDLE—MALFUNCTION INDICATOR LAMP (MIL) ILLUMINATED—COIL ON PLUG APPLICATIONS ONLY** • **MALFUNCTION INDICATOR LAMP (MIL) ILLUMINATED—ROUGH IDLE—DIAGNOSTIC TROUBLE CODES (DTCS) P0350-P0360 COIL DTCS STORED IN MEMORY—COIL ON PLUG APPLICATIONS ONLY** • **ROUGH IDLE—MALFUNCTION INDICATOR LAMP (MIL) ILLUMINATED—DIAGNOSTIC TROUBLE CODES (DTCS) P0350-P0360 COIL DTCS STORED IN MEMORY** • **LAMP—MALFUNCTION INDICATOR LAMP (MIL) ILLUMINATED—ROUGH IDLE—DIAGNOSTIC TROUBLE CODES (DTCS) P0350-P0360 COIL DTCS STORED IN MEMORY—COIL ON PLUG APPLICATIONS ONLY**	**Article No. 01-1-6**

FORD: 2000 CROWN VICTORIA, ECONOLINE, EXCURSION, EXPEDITION, F SUPER DUTY, F-150

LINCOLN: 2000 LS, TOWN CAR, NAVIGATOR

MERCURY: 2000 GRAND MARQUIS

ISSUE

Some 2000 Coil-On-Plug applications may produce P0350 through P0360 coil Diagnostic Trouble Codes (DTCs), a check engine light, and rough idle. This may be caused by the Powertrain Control Module (PCM) calibration.

ACTION

Perform normal diagnostics. If normal diagnostics cannot pinpoint the condition and no other concerns are found, reprogram the PCM using the Worldwide Diagnostic System (WDS) or New Generation Star (NGS) Tester. Refer to the following PCM Calibration Information Chart.

Copyright © 2001 Ford Motor Company

PCM CALIBRATION INFORMATION						
Application	Old Part Number (-12A650-)	Tear Tag	New Part Number (-12A650-)	Old Calibration	New Calibration	NGS/WDS Qualifier
Gas Vehicles						
Crown Victoria	YW7F-BB	KMJx	YW7Z-BD	0FB1FB0A05	0FB1FB0A11	0FB1FB0A Calibration
Crown Victoria	YW7F-BC	KMJx	YW7Z-BD	0FB1FB0A10	0FB1FB0A11	0FB1FB0A Calibration
Crown Victoria	YW7F-JC	GUEx	YW7Z-JD	0FB1FB0A10	0FB1FB0A11	0FB1FB0A Mexican Calibration
Crown Victoria	YW7F-GB	RRTx	YW7Z-GD	0FB1FB0B05	0FB1FB0B11	0FB1FB0B Calibration
Crown Victoria	YW7F-GC	RRT3	YW7Z-GD	0FB1FB0B10	0FB1FB0B11	0FB1FB0B Calibration
Crown Victoria	YW7F-DB	MMJ2	YW7Z-DC	0FB1FB0G05	0FB1FB0G10	....
Crown Victoria	YW7F-CC	LLKx	YW7Z-CD	0FB1FH0A10	0FB1FH0A11	0FB1FH0A Calibration
Crown Victoria	YW7F-HB	SDHx	YW7Z-HD	0FB1FH0B05	0FB1FH0B11	0FB1FH0B Calibration
Crown Victoria	YW7F-HC	SDH3	YW7Z-HD	0FB1FH0B10	0FB1FH0B11	0FB1FH0B Calibration
Crown Victoria	YW7F-ED	NKLx	YW7Z-EE	0FB1FP0A10	0FB1FP0A11	0FB1FP0A Calibration
Crown Victoria	YW7F-FB	PTL2	YW7Z-FC	0FB1FP0G05	0FB1FP0G10	...
Grand Marquis	YW7F-BB	KMJx	YW7Z-BD	0FB1FB0A05	0FB1FB0A11	0FB1FB0A Calibration
Grand Marquis	YW7F-BC	KMJx	YW7Z-BD	0FB1FB0A10	0FB1FB0A11	0FB1FB0A Calibration
Grand Marquis	YW7F-JC	GUEx	YW7Z-JD	0FB1FB0A10	0FB1FB0A11	0FB1FB0A Mexican Calibration
Grand Marquis	YW7F-GC	RRTx	YW7Z-GD	0FB1FB0B10	0FB1FB0B11	0FB1FB0B Calibration
Grand Marquis	YW7F-DB	MMJx	YW7Z-DC	0FB1FB0G05	0FB1FB0G10	...
Grand Marquis	YW7F-CC	LLKx	YW7Z-CD	0FB1FH0A10	0FB1FH0A11	0FB1FH0A Calibration
Grand Marquis	YW7F-HC	SDHx	YW7Z-HD	0FB1FH0B10	0FB1FH0B11	0FB1FH0B Calibration
Grand Marquis	YW7F-FB	PTLx	YW7Z-FC	0FB1FP0G05	0FB1FP0G10	...
Town Car	YW1F-BC	TTUx	YW1Z-BD	0VC1FB0A10	0VC1FB0A11	0VC1FB0A Calibration
Town Car	YW1F-DC	GBAx	YW1Z-DD	0VC1FB0B10	0VC1FB0B11	0VC1FB0B Calibration
Town Car	YW1F-CB	VSTx	YW1Z-CC	0VC1FB0G05	0VC1FB0G10	...
Town Car	YW1F-EC	HPYx	YW1Z-ED	0VC1FH0A10	0VC1FH0A11	0VC1FH0A Calibration
Town Car	YW1F-FC	JRHx	YW1Z-FD	0VC1FH0B10	0VC1FH0B11	0VC1FH0B Calibration
Lincoln LS	XW4F-JH	BMTx	XW4Z-JJ	9LDA-AAG	9LDA-AAH	9LDA-AA

Application	Old Part Number (-12A650-)	Tear Tag	New Part Number (-12A650-)	Old Calibration	New Calibration	NGS/WDS Qualifier
Lincoln LS	XW4F-KG	AUTx	XW4Z-KH	9LDA-ACF	9LDA-ACG	Calibration 9LDA-AC
Lincoln LS	XW4F-LH	BORx	XW4Z-LJ	9LDA-BBG	9LDA-BBH	Calibration 9LDA-BB
Lincoln LS	XW4F-MG	CAJx	XW4Z-MH	9LDA-BCF	9LDA-BCG	Calibration 9LDA-BC
Lincoln LS	XW4F-UG	JEKx	XW4Z-UH	9LDM-ACF	9LDM-ACG	Calibration 9LDM-AC
Lincoln LS	XW4F-AEG	VAHx	XW4Z-AEH	9WHA-AAF	9WHA-AAG	Calibration 9WHA-AA
Lincoln LS	XW4F-YK	NPKx, MPUx	XW4Z-YL	9WHA-ABJ	9WHA-ABK	Calibration 9WHA-AB
Lincoln LS	XW4F-AFH	WOKx	XW4Z-AFJ	9WHA-BAG	9WHA-BAH	Calibration 9WHA-BA
Lincoln LS	XW4F-ZJ	RKHx, NIAx	XW4Z-ZL	9-WHA-BBH	9WHA-BBK	Calibration 9WHA-BB
Lincoln LS	XW4F-ZK	RKHx, NIAx	XW4Z-ZL	9WHA-BBJ	9WHA-BBK	Calibration 9WHA-BB
Econoline	YC2F-FC	BRUx	YC2Z-FD	0E416D0A06	0E416D0A10	Calibration 0E416D0A
Econoline	YC2F-GC	QBMx	YC2Z-GD	0E416E0B06	0E416E0B10	Calibration 0E416E0B
Econoline	YC2F-JC	HHKx	YC2Z-JD	0E414E0506	0E414E0510	Calibration 0E414E05
Econoline	YC2F-YD	JYZx	YC2Z-YE	0E414H0510	0E414H0511	Calibration 0E414H05
Econoline	YC2F-MC	KVBx	YC2Z-MD	0E414J0B10	0E414J0B11	Calibration 0E414J0B
Econoline	YC2F-PC	VNQx	YC2Z-PD	0E414N0A10	0E414N0A11	Calibration 0E414N0A
Econoline	YC2F-RB	BTLx	YC2Z-RD	0E414R0B05	0E414R0B11	Calibration 0E414R0B
Econoline	YC2F-RC	BTLx	YC2Z-RD	0E414R0B10	0E414R0B11	Calibration 0E414R0B
Econoline	YC2F-SB	LPDx	YC2Z-SD	0E414U0B05	0E414U0B11	Calibration 0E414U0B
Econoline	YC2F-SC	LPD3	YC2Z-SD	0E414U0B10	0E414U0B11	Calibration 0E414U0B
Econoline	YC2F-TB	MVRx	YC2Z-TD	0E414X0510	0E414X0512	Calibration 0E414X05
Econoline	YC2F-TC	MVRx	YC2Z-TD	0E414X0511	0E414X0512	Calibration 0E414X05
Econoline	YC2F-ASD	MQZx	YC2Z-ASE	0E414Y0511	0E414Y0512	Calibration 0E414Y05
Econoline	YC2F-ZE	HNSx	YC2Z-ZF	0E418HOB10	0E418H0B11	Calibration 0E418H0B
Econoline	YC2F-AAD	MXKx	YC2Z-AAE	0E418NO510	0E418N0511	Calibration 0E418N05

Article No. 01-1-6 Cont'd.

Application	Old Part Number (-12A650-)	Tear Tag	New Part Number (-12A650-)	Old Calibration	New Calibration	NGS/WDS Qualifier
Econoline	YC2F-ABD	CISx	YC2Z-ABE	0E418POA10	0E418P0A11	0E418P0A Calibration
Econoline	YC2F-ACD	TVFx	YC2Z-ACE	0E418QOB10	0E418Q0B11	0E418Q0B Calibration
Econoline	YC2F-ADD	MLDx	YC2Z-ADE	0E418ROB10	0E418R0B11	0E418R0B Calibration
Excursion	YC3F-TD	EKGx	YC3Z-TE	0L114D0B10	0L114D0B11	0L114D0B Calibration
Excursion	YC3F-UD	HDAx	YC3Z-UE	0L114NAR10	0L114N0A11	0L114N0A Calibration
Excursion	YC3F-ALD	MXHx	YC3Z-ALE	0L118D0B10	0L118D0B11	0L118D0B Calibration
Excursion	YC3F-AMD	FXUx	YC3Z-AME	0L118NOA10	0L118N0A11	0L118N0A Calibration
Expedition	YL1F-BB	ZUTx	YL1Z-BE	0B314B0505	0B314B0511	0B314B05 Calibration
Expedition	YL1F-BC	ZUTx	YL1Z-BE	0B314B0506	0B314B0511	0B314B05 Calibration
Expedition	YL1F-BD	ZUTx	YL1Z-BE	0B314B0510	0B314B0511	0B314B05 Calibration
Expedition	YL1F-GA	PYT2	YL1Z-GC	0B314B0F00	0B314B0F06	...
Expedition	YL1F-GB	PYT2	YL1Z-GC	0B314B0F05	0B314B0F06	...
Expedition	YL1F-EC	WUB3	YL1Z-ED	0B314B0G06	0B314B0G11	...
Navigator	YL1F-EC	WUB3	YL1Z-ED	0B314B0G06	0B314B0G11	...
Navigator	YL1F-AD	DZUx	YL1Z-AE	0B315B0510	0B315B0511	0B315B05 Calibration
F-Series	YL3F-RD	LCTx	YL3Z-RE	0F516D0B10	0F516D0B11	0F516D0B Calibration
F-Series	YL3F-SD	RQDx	YL3Z-SE	0F516E0B10	0F516E0B11	0F516E0B Calibration
F-Series	YL3F-BAA	JVDx	YL3Z-BAB	0F516M0A10	0F516M0A11	0F516M0A Calibration
F-Series	YL3F-BBA	XJBx	YL3Z-BBB	0F516N0A10	0F516N0A11	0F516N0A Calibration
F-Series	YL3F-YC	KWLx	YL3Z-YE	0F526J0B06	0F526J0B11	0F526J0B Calibration
F-Series	YL3F-YD	KWLx	YL3Z-YE	0F526J0B10	0F526J0B11	0F526J0B Calibration
F-Series	YL3F-ZC	RWXx	YL3Z-ZE	0F526K0B06	0F526K0B11	0F526K0B Calibration
F-Series	YL3F-ZD	RWXx	YL3Z-ZE	0F526K0B10	0F526K0B11	0F526K0B Calibration
F-Series	YL3F-AMC	SIH3	YL3Z-AMD	0F526L0M02	0F526L0M03	...
F-Series	YL3F-AYA	NIVx	YL3Z-AYB	0F526P0A10	0F526P0A11	0F526P0A Calibration
F-Series	YL3F-AZA	WMYx	YL3Z-AZB	0F526Q0A10	0F526Q0A11	0F526Q0A Calibration

Application	Old Part Number (-12A650-)	Tear Tag	New Part Number (-12A650-)	Old Calibration	New Calibration	NGS/WDS Qualifier
F-Series	XL3F-VB	HZW0	YL3Z-ALA	9VNA-AJB	0F516G0M00	...
F-Series	XL3F-ACB	SIH0	YL3Z-AMA	9VNM-AEB	0F526L0M00	...
F-Series	YL3F-BAA	JVDx	YL3Z-BAB	0F516M0A10	0F516M0A11	0F516M0A Calibration
F-Series	YC3F-SC	MOXx	YC3Z-SD	0F514X0506	0F514X0510	0F514X05 Calibration
F-Series	YC3F-MC	LMTx	YC3Z-MD	0F724P0A06	0F724P0A10	0F724P0A Calibration
F-Series	YC3F-KD	FVRx	YC3Z-KE	0F714D0B10	0F714D0B11	0F714D0B Calibration
F-Series	YC3F-LD	CPYx	YC3Z-LE	0F714N0A07	0F714N0A11	0F714N0A Calibration
F-Series	YC3F-MC	LMPx	YC3Z-MD	0F724P0A06	0F724P0A10	0F724P0A Calibration
F-Series	YL3F-LD	CPEx	YL3Z-LE	0F514D0B10	0F514D0B11	0F514D0B Calibration
F-Series	YL3F-APC	JNIx	YL3Z-APD	0F514D0Q02	0F514D0Q03	...
F-Series	YL3F-ATC	SNLx	YL3Z-ATD	0F514E0B11	0F514E0B12	0F514E0B Calibration
F-Series	YL3F-AUB	UATx	YL3Z-AUC	0F514F0A10	0F514F0A11	0F514F0A Calibration
F-Series	YL3F-BCA	GMHx	YL3Z-BCB	0F514G0A10	0F514G0A11	0F514G0A Calibration
F-Series	YL3F-BDA	JBRx	YL3Z-BDB	0F514H0A10	0F514H0A11	0F514H0A Calibration
F-Series	YC3F-AXC	TFMx	YC3Z-AXD	0F514M0X06	0F514M0X11	...
F-Series	YC3F-SC	MOXx	YC3Z-SD	0F514X0506	0F514X0510	0F514X05 Calibration
F-Series	YL3F-ATC	SNLx	YL3Z-ATD	0F514E0B11	0F514E0B12	0F514E0B Calibration
F-Series	YL3F-AUB	UATx	YL3Z-AUC	0F514F0A10	0F514F0A11	0F514F0A Calibration
F-Series	YC3F-VD	FIDx	YC3Z-VE	0F717C0B10	0F717C0B11	0F717C0B Calibration
F-Series	YC3F-XD	OVDx	YC3Z-XE	0F717N0510	0F717N0511	0F717N05 Calibration
F-Series	YC3F-YD	KNDx	YC3Z-YE	0F717P0A10	0F717P0A11	0F717P0A Calibration
F-Series	YC3F-ZD	QUMx	YC3Z-ZE	0F717ROB10	0F717R0B11	0F717R0B Calibration
F-Series	YC3F-AAD	HKIx	YC3Z-AAE	0F717TOB10	0F717T0B11	0F717T0B Calibration
F-Series	YC3F-ABD	WKRx	YC3Z-ABE	0F718COB10	0F718C0B11	0F718C0B Calibration
F-Series	YC3F-ACD	KWQx	YC3Z-ACE	0F718NO510	0F718N0511	0F718N05 Calibration
F-Series	YC3F-ADD	FDAx	YC3Z-ADE	0F718POA10	0F718P0A11	0F718P0A Calibration
F-Series	YC3F-AEC	BTWx	YC3Z-AED	0F718Q0510	0F718Q0511	0F718Q05 Calibration

Application	Old Part Number (-12A650-)	Tear Tag	New Part Number (-12A650-)	Old Calibration	New Calibration	NGS/WDS Qualifier
F-Series	YC3F-AFD	QDEx	YC3Z-AFE	0F718ROB10	0F718R0B11	0F718R0B Calibration
F-Series	YC3F-AGD	RSJx	YC3Z-AGE	0F718TOB10	0F718T0B11	0F718T0B Calibration
F-Series	YC3F-AHD	ZLGx	YC3Z-AHE	0F728AOB10	0F728A0B11	0F728A0B Calibration
F-Series	YC3F-AJD	KGGx	YC3Z-AJE	0F728UO510	0F728U0511	0F728U05 Calibration
F-Series	YC3F-AKD	DRCx	YC3Z-AKE	0F728VOA10	0F728V0A11	0F728V0A Calibration
Bi-Fuel Vehicles						
F-Series Bi-fuel 5.4L	YL3F-ARA	PSN0	YL3Z-ARB	0F51410B00	0F51410B10	N/A
F-Series Bi-fuel 5.4L	YL3F-ASA	BPX0	YL3Z-ASB	0F51420B00	0F51420B10	N/A
F-Series Bi-Fuel 6.8L	YU2F-CB	AEN0, AEN1	YU2Z-CC	0F717Y0A10	0F717Y0A11	N/A
F-Series Bi-Fuel 6.8L	YU2F-BB	RZE0, RZE1	YU2Z-BC	0F717Z0B10	0F717Z0B11	N/A
F-Series Bi-Fuel 6.8L	YU2F-AB	YCB0, YCB1	YU2Z-AC	0F717W0B10	0F717W0B11	N/A
F-Series Bi-Fuel 6.8L	YU2F-DB	HXY0, HXY1	YU2Z-DC	0F717X0510	0F717X0511	N/A
F-Series Bi-Fuel 6.8L	YU2F-GB	DPT0, DPT1	YU2Z-GC	0F717F0A10	0F717F0A11	N/A
F-Series Bi-Fuel 6.8L	YU2F-FB	PWE0, PWE1	YU2Z-FC	0F717G0B10	0F717G0B11	N/A
F-Series Bi-Fuel 6.8L	YU2F-EB	VDN0, VDN1	YU2Z-EC	0F717H0B10	0F717H0B11	N/A
F-Series Bi-Fuel 6.8L	YU2F-HB	QSM0, QSM1	YU2Z-HC	0F717E0510	0F717E0511	N/A

Obtain an Authorized Modifications Decal (FPS 8262 - obtainable through DOES II, 25/pkg) and list the date, dealer number, and summary of modifications performed. Select a prominent place adjacent to the Vehicle Emission Control Information Decal suitable for installing the Authorized Modifications Decal. Clean the area, install the decal, and cover it with a clear plastic decal shield.

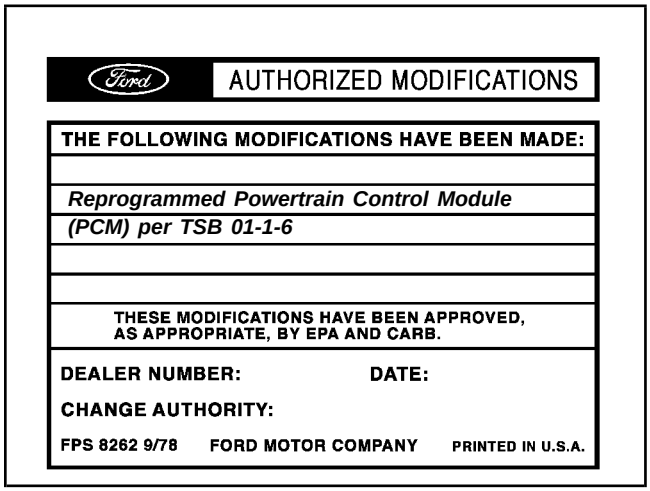

OTHER APPLICABLE ARTICLES: NONE

WARRANTY STATUS: Eligible Under The Provisions Of Bumper To Bumper Warranty Coverage And Emissions Warranty Coverage

DEALER CODING

	CONDITION CODE
BASIC PART NO.	
RECALEM	42

OASIS CODES: 206000, 608000, 608400, 609000, 609400, 698298