FUEL FILLER PIPE GROUND

AFFECTED VEHICLES: **CERTAIN 2001 MODEL YEAR F-350 CREW CAB WITH 156-INCH WHEELBASE AND DUAL REAR WHEELS**

INSPECTION AND CLAMP INSTALLATION

1. Raise the vehicle on a hoist.
2. Locate the fuel filler pipe support bracket. The bracket is attached to the bottom of the pickup box directly above the fuel filler pipe. See Figure 1.
   - If the vehicle is not equipped with a bracket, perform Fuel Filler Pipe Ground Strap Installation.
   - If the vehicle is equipped with a bracket, secure the fuel filler pipe to the bracket with a hose clamp as shown in the illustration. Tighten the clamp to 4.5 Nm (40 lb-in). See Figure 2.
3. Lower the vehicle.

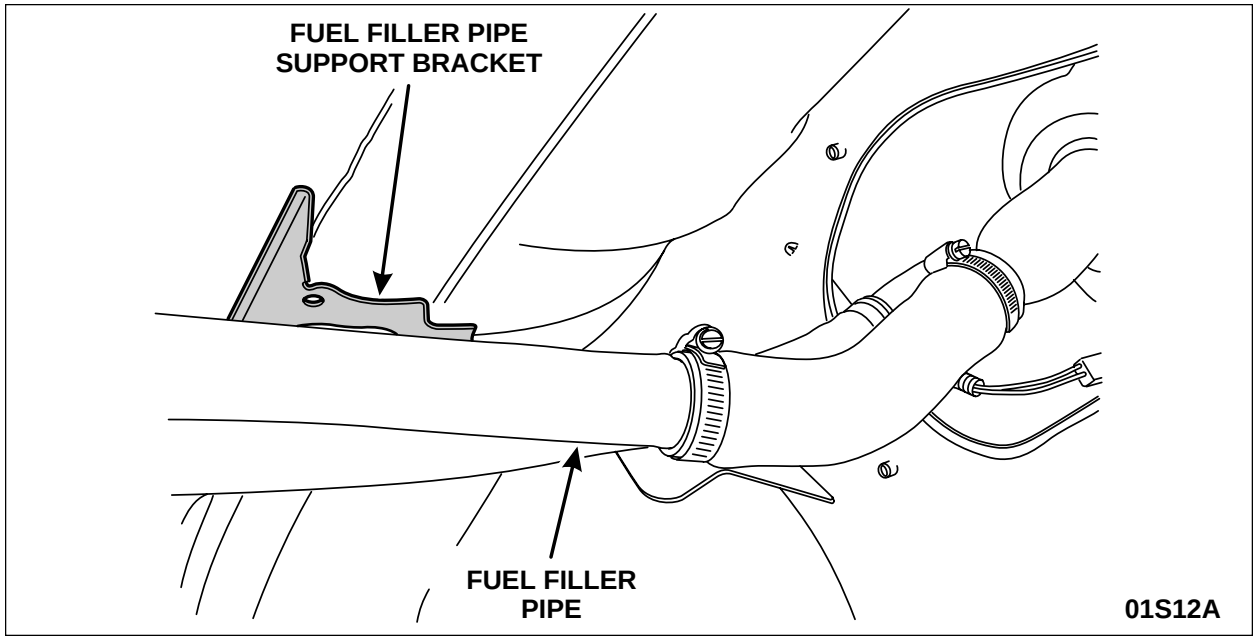


FIGURE 1

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
03/01

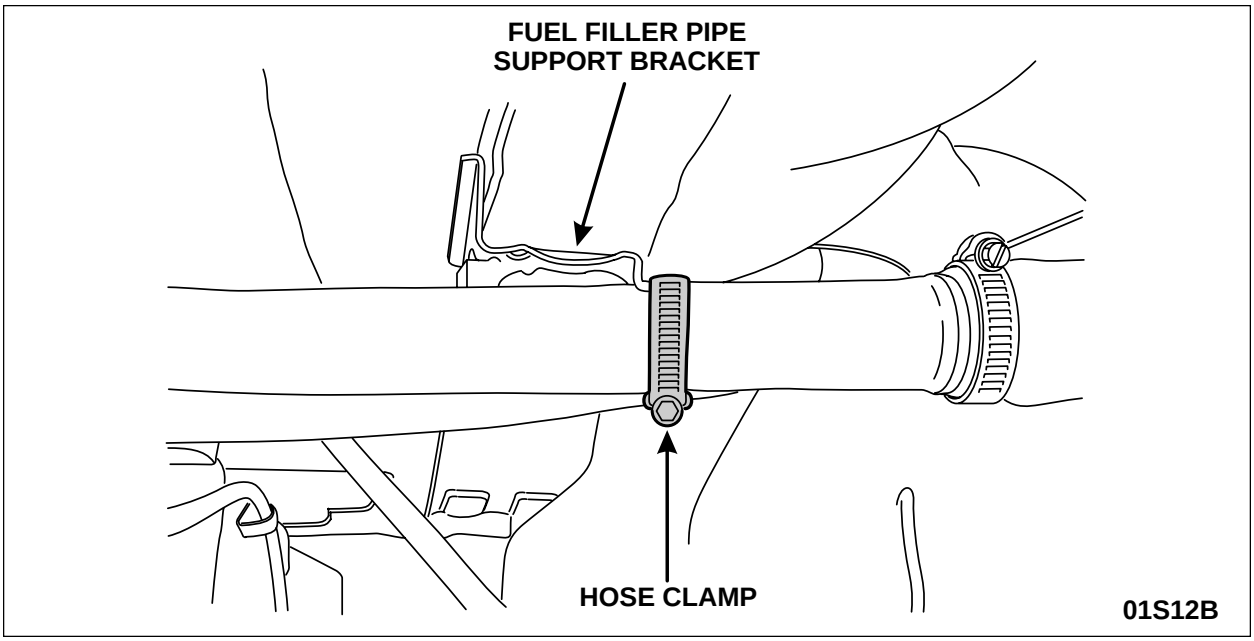


FIGURE 2

FUEL FILLER PIPE GROUND STRAP INSTALLATION

1. Open the fuel filler door and remove the fuel filler pipe screw that is located at the 9 o'clock position. Loosen, but do not remove, the remaining two (2) screws.
2. Raise the vehicle on a hoist.

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
03/01

3. Slide the small eyelet (flat side down) of the ground strap between the fuel filler pipe flange and the plastic filler pipe cup, at the hole for the screw that was removed. See Figure 3.
4. Install the fuel filler pipe screw at the 9 o'clock position. Tighten all three (3) fuel filler pipe screws to 3.2 Nm (28 lb-in), then close the fuel filler door. See Figure 3.
5. Drill a 12 mm (31/64-in) hole in the inner pickup box wall below the opening for the filler pipe. The center of the hole should be located 16 mm (5/8 in) from the lower edge of the opening and 50 mm (2 in) back from the rivet shown in the illustration. See Figure 3.
6. Install an M8 x 1.25 J-nut onto the inner pickup box wall at the drilled hole. See Figure 3.
7. Install, but do not tighten, the large eyelet (flat side down) of the ground strap to the J-nut using an M8 x 1.25 bolt/washer. Position the eyelet so the ground strap routes straight upward, then tighten the bolt to 20 Nm (15 lb-ft). See Figure 3.
8. Lower the vehicle.

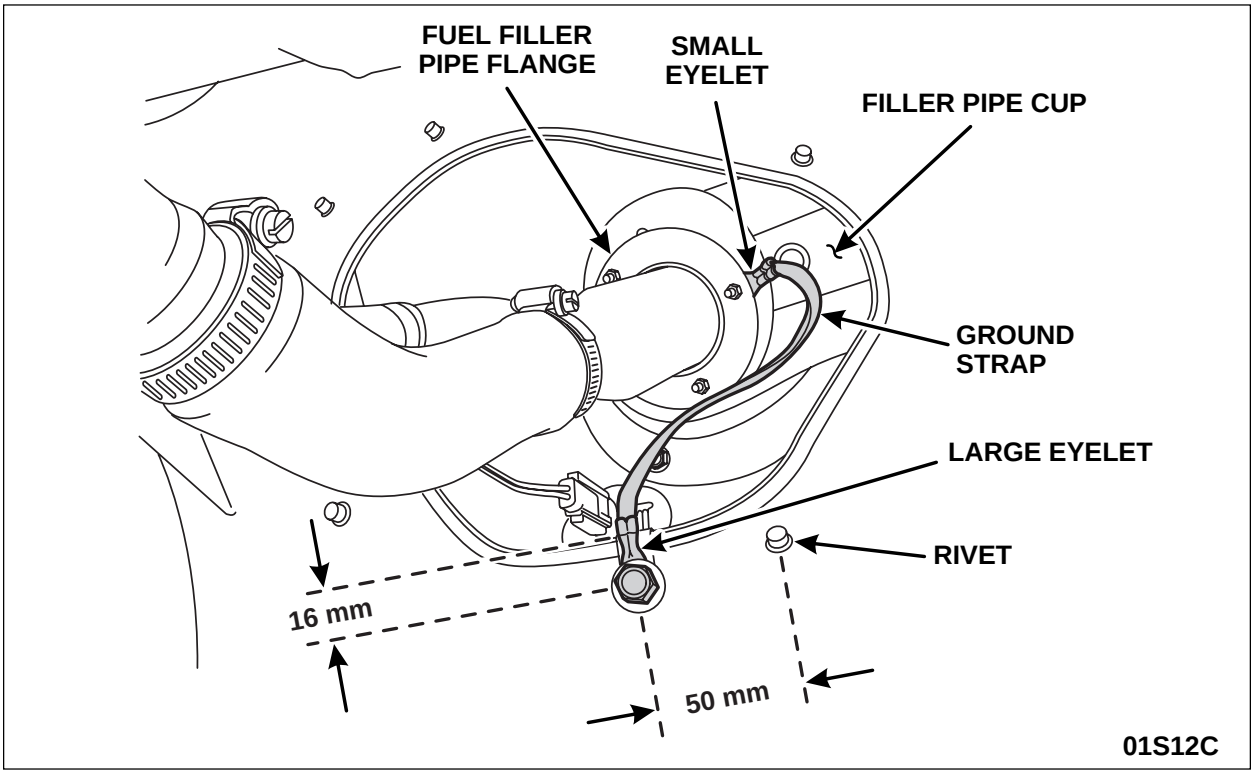


FIGURE 3

Ford Motor Company
CPR © 2001 FORD MOTOR COMPANY
DEARBORN, MICHIGAN 48121
03/01