

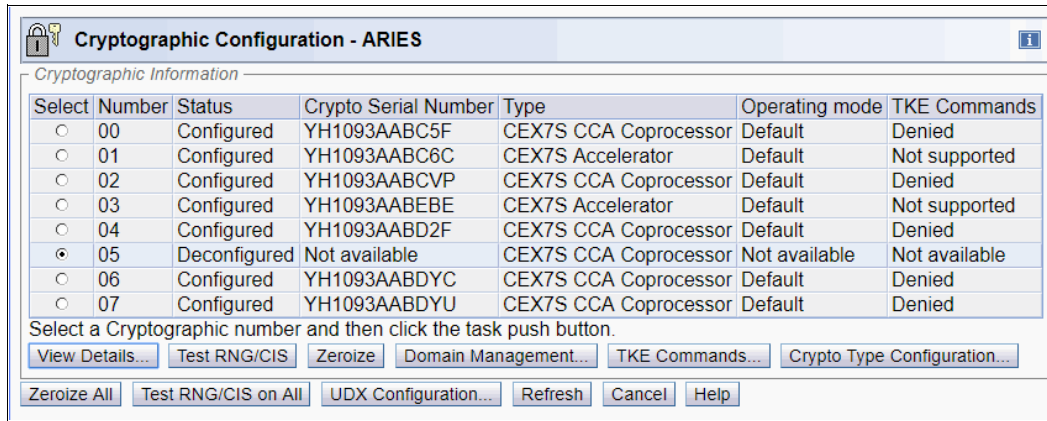


Figure 10-11 Cryptographic Configuration task (unconfigured)

4. Change the configuration for the cryptographic coprocessor adapter. The selected cryptographic coprocessor channel is configured as a coprocessor (Figure 10-12). Select **Accelerator**.

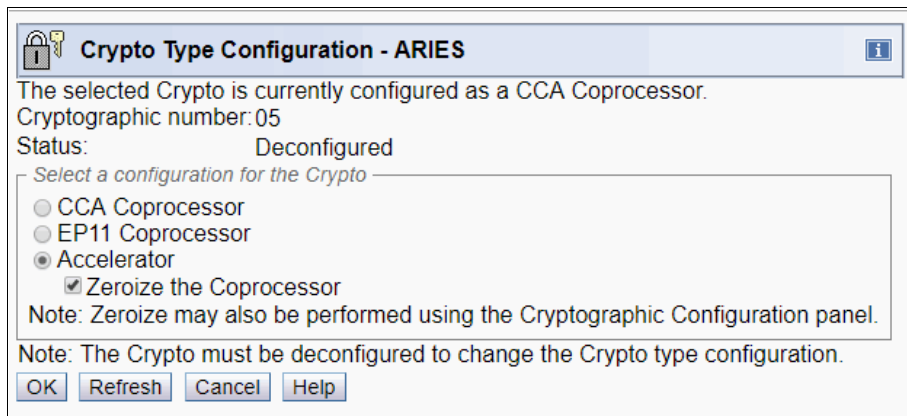


Figure 10-12 Crypto Type Configuration (CCA coprocessor to Accelerator)

By selecting Accelerator, you can zeroize the selected coprocessor by also selecting **Zeroize the Coprocessor** on the Crypto Type Configuration window. However, click to clear the **Zeroize the Coprocessor** check box and click **OK**.

Important: Zeroizing one or all cryptographic coprocessors clears their configuration data and all cryptographic keys. Zeroizing also erases configuration data from the SE hard disk drive (for example, UDX files). Zeroize cryptographic coprocessors manually only when absolutely necessary, typically when the cryptographic coprocessor configuration data must be erased completely. In normal cases, be sure to clear the check box for each cryptographic channel.

5. Click **Yes** (Figure 10-13 on page 234).