



## USER GUIDE

**BW-103R**

Preparation

Installation

Operation

Maintenance & Cleaning



 **DYNE GLOBAL CO., LTD.**

178-50 Myeonmok2-dong  
Jungnang-gu, Seoul, 131-820, Korea.  
Tel: +82-2-432-2639 Fax: +82-505-242-2067

This user guide contains the product warranty certificate.

Be sure to read this user guide carefully before use.

■ 220V ~ 240V, 50Hz  (Ver 1.0)

 **DYNE GLOBAL**

# CONTENTS

*Bluwash*...

THIS UNIT WAS MANUFACTURED FOR HOUSEHOLD USE ONLY.  
READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.

Notes

1. This product should be installed according to this manual.
2. Please read this manual carefully and install properly.
3. Please save this manual and place it at an easily accessible place.
4. Do not attempt to service this appliance yourself. Doing so could void warranty.

02

03

	Preparation	Installation	Operation	Maintenance & Cleaning
1. Safety Instructions .....	4			
2. Product Characteristics .....		8		
3. Designation of Each Component .....		9		
4. Installation .....		11		
5. Trial Operation .....		15		
6. Disassembly of Product .....		16		
7. How to Use the Product .....		18		
8. User Settings .....		22		
9. Maintenance & Cleaning .....			24	
10. Before requesting repair .....			26	
11. Product Specifications .....			27	
12. Comparison Chart .....			28	
13. Warranty Information .....			29	



# 01.Safety Instructions

## ⚠ Caution




Don't stand on the product ; don't put heavy object on it.

► Risk of injury or damage to the product.



Don't force to close the cover of toilet.

► Risk of failure.

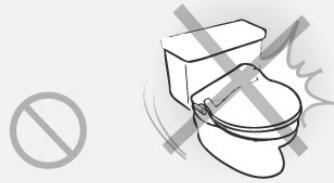

Don't force to lean against the cover of toilet.

► Risk of failure.



When cleaning, don't use toilet-use detergent, benzene, thinner, etc.

► Risk of damage to the product or crack.



Don't bend the connecting hose ; don't force to pull it out.

► It may cause stoppage of water supply or leakage.



Be cautious of low temperature burn.

► When the skin has been in contact with a low temperature hot surface for a long time, it may cause low temperature burns. The seat temperature should be set on Low or Off when the unit is used by children, elderly persons or persons who can not control temperature themselves.



## ⚠ Caution



When the product is not used for an extended period of time, remove the power plug and drain the water out of the product tank.

► It may cause the water rotten and result the skin disease.



Don't use an out of order/faulty product.

► When it is out of order, remove the plug from the outlet and inform the service center.  
► Otherwise, it may cause fire or electric hazard.



When installing, push it in until it sounds 'Click'.

► It may cause water leakage or mal-operation.



Don't place the removed product upside down.

► Risk of the product failure.



## Preparation

## 02. Product Characteristics

**Bluwash** bidet has the following characteristics:


### Continuous Warm Water Supply

Enjoy continuous warm water throughout the wash cycle.



### Bubble Wash

Aerated water wash adds cleaning comfort.

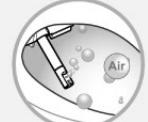

### Pulse

Pulsating wash repeatedly cycles from weak to strong.



### Energy Saving Function

It finds out the time frame when used frequently, realizing the maximum energy saving effect.



### Remote Control Unit

Convenient remote controller provides easy user interface.



### Power wash

Soft but powerful water wash for added cleansing benefit.



### Massage

Nozzle moves back and forth for massage effect.



### Deodorization Function

Semi-fundamental deodorizing filter provides odor-free during use.




### Kids Settings

Specialized nozzle position and water pressure for children.




## 03. Designation of Each Component

### Main Body

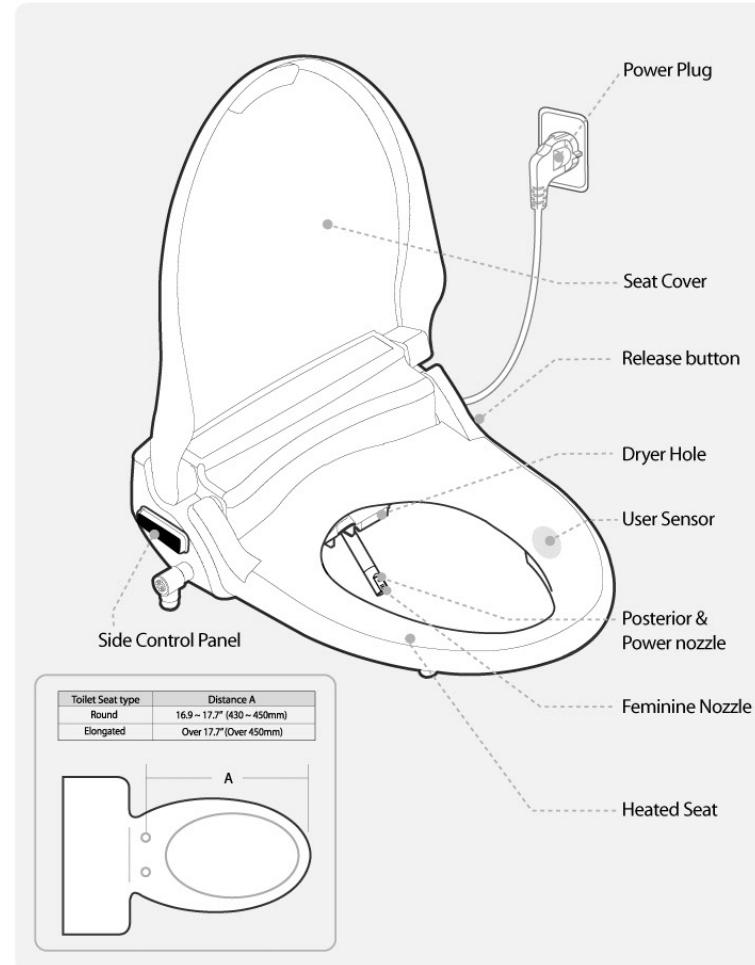


## 03.Designation of Each Component

### Operation Panel

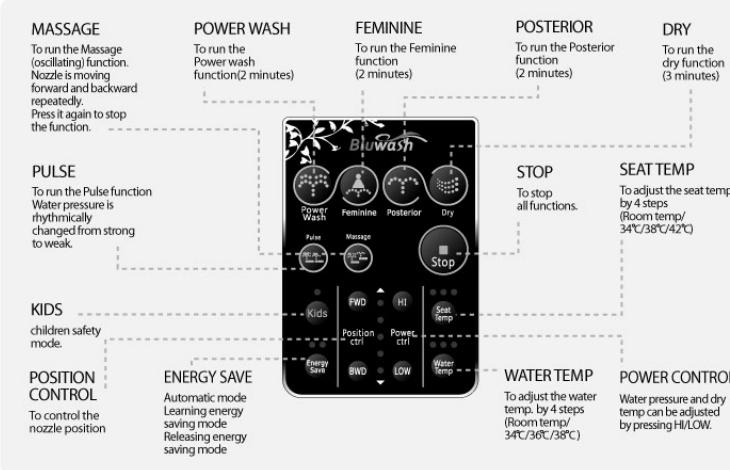

### Accessories

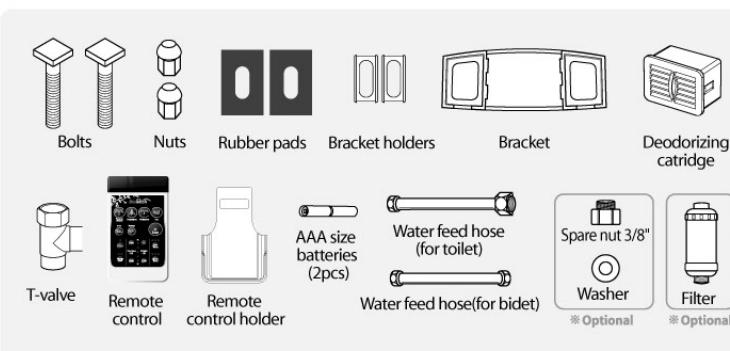

## 04.Installation


### Order of Installation

#### 1 Remove the seat from the existing toilet body.

- Release the nuts, and then remove the seat and cover from it.
- Keep the removed seat, cover and nuts well in a proper place.




#### 2 Close the water feed valve by turning it clockwise, and then drain the toilet water tank out.

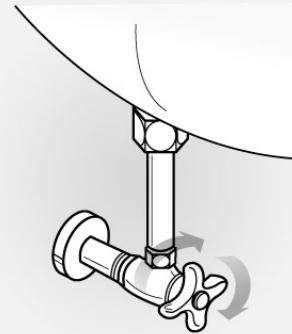


#### 3 Remove the water feed pipe and then install T-valve.

- Keep the removed water feed pipe well in a proper place. It may be useful when moving house to other place later.

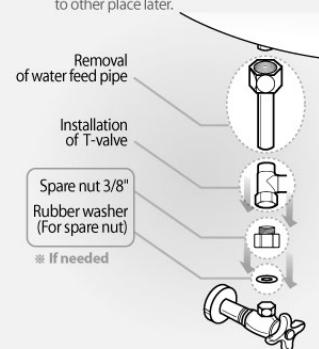


#### 4 Connect the toilet-use hose.

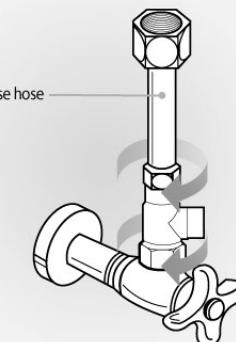


## 04. Installation

5 Fix the bracket onto the toilet first.

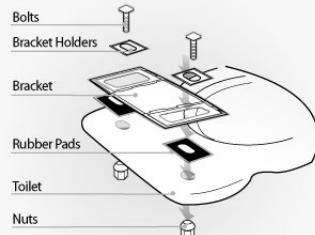


▶ Adjust the seat and the front part of toilet back and forth so that they can corresponds with before fastening the nuts.

6 Push the main body toward the bracket completely.

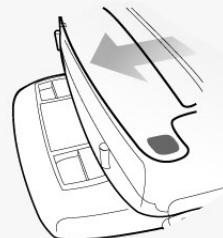


▶ Push it in until it sounds 'click'.  
▶ When the product is not installed well, it may cause leakage.

7 After install the filter onto the T-valve, connect the bidet-use hose to the bidet body.

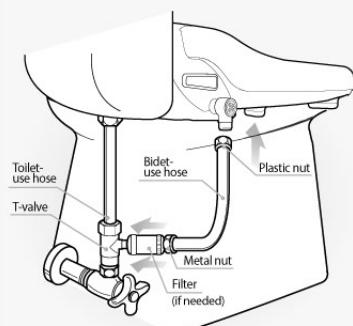


8 Insert the deodorizing cartridge into the bidet body.

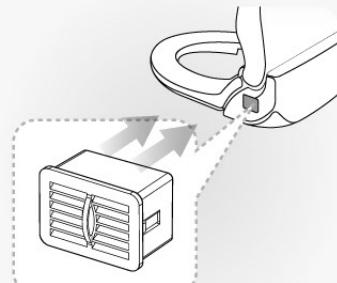


### Remote control installation & batteries insertion


1 Remove the adhesive protection to attach the remote control bracket.

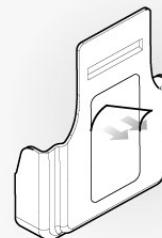

2 Clean the place thoroughly to attach the bracket.

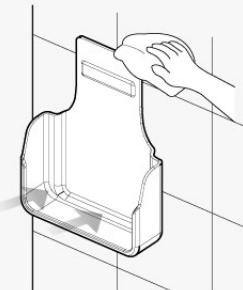

3 Remove the back cover and place supplied batteries with correct direction. Close the back cover.

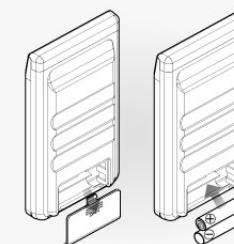

※ Caution  
Failure to install the batteries properly could cause damage or failure of the remote control unit.

4 Place the remote control in the bracket with correct direction. When placing it, take care to hang it on the bracket completely. Failure of placing could cause the remote control falling down.



Installation

## 04. Installation

- 5 When the batteries have reached the end of service life, remote control does not work and all LEDs will blink. Replace the batteries with new ones, AAA size X 2pcs.


\* Caution

Do not use old and new batteries together.  
This could cause damage or failure of the remote control.



- 6 If the unit does not work after replacing the batteries, unplug and wait for 3 seconds. Plug in again, and the unit will be ready for use.


\* After replacing the batteries, ID of the unit will be initialized as "01" (factory initialization ID), and its ID will be equalized ID of the remote control that reaches the unit first. This ID assigning function will be needed to prevent signal interruption if more than 2 units are used at one place. In case of using one unit only, user can use the unit accordingly without setting.  
\* If you want to change the ID, please refer to the page 22. for "Remote Control ID Setting"

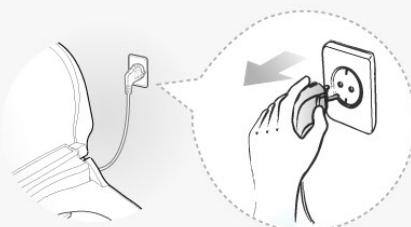


## 05. Trial Operation

### Order of Trial Operation

- 1 Open the water feed valve by turning it anti-clockwise.

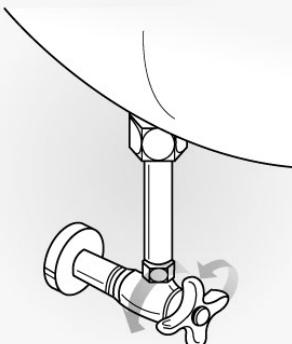

- 2 Be sure of no leakage around the hose connection.

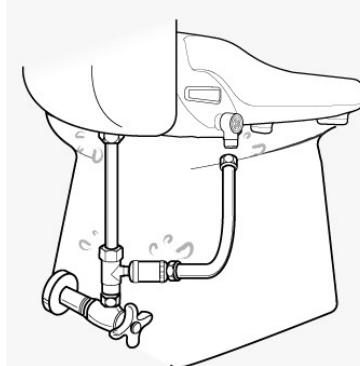


- 3 Be sure that logo light on the top turns on and nozzle comes and retracts when powered on.

► Don't plug the power cord with wet hands. Risk of electric shock.



- 4 When the unit is powered on, water tank will be filled immediately. Check if water comes out from drain hole for 1~2 seconds.

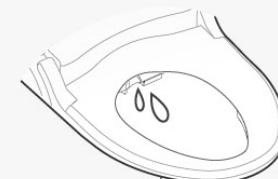


# 06 Disassembly of Product

## Order of Disassembly


- 1 Remove the power plug from the outlet.




- 2 Close the water feed valve by turning it clockwise, completely drain out the toilet water tank, release the nuts at bidet body of the bidet hose, and then remove them from main body.

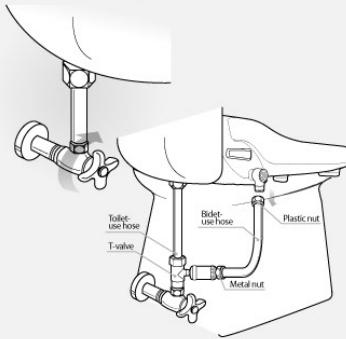


- 3 Press the release button on the side of bidet, completely drain the water out of the main body. While keep on pressing the button, pull the main body forward, and then remove it from the toilet.

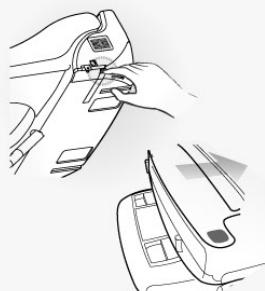


- 4 Release the nuts, and then remove the brackets from the toilet.

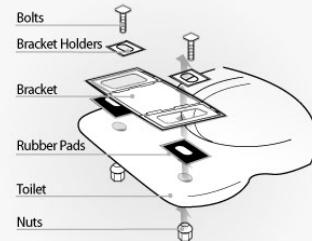


- 5 Remove bidet hose, toilet-use hose and T-valve.

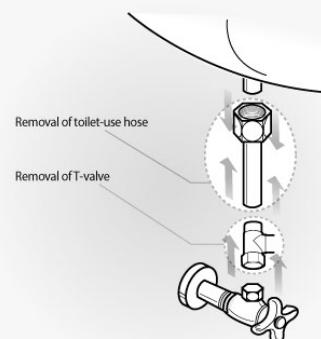

- 6 Connect the water feed pipe that was removed when the bidet was installed.

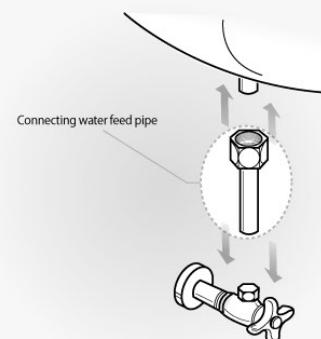

- 7 Open the water feed valve by turning it anti-clockwise. Be sure of no leakage around the water feed connection.

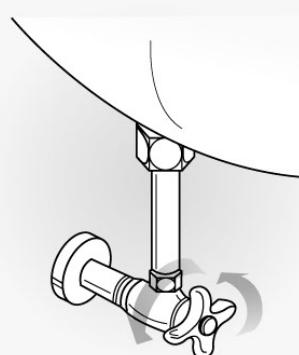

- 8 Attach to the toilet the seat and cover that were removed when the bidet was installed.




Installation

# 07. How to Use the Product

## Basic Operation Method


### 1 Sit on the toilet seat.

- Be sure to sit on the user sensor of seat. If the sensor is not occupied, functions will not work. Deodorizing function starts automatically.

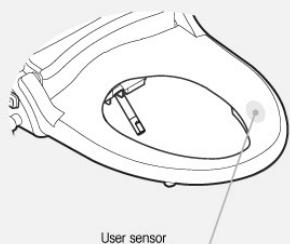

### 3 Press the DRY Button.

- Hot air indicator lamp will lights on. (5 levels available)
- Selected function may be used for three (3) minutes.
- Drying effect will be improved if you wipe the moisture lightly before operating the drying function.

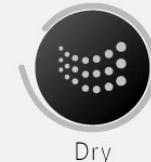

### 2 Press Posterior, Feminine, Power Wash Buttons.

- Selected function can be used as desired.
- After Posterior/Feminine/Power Wash, automatically dryer works. (Automatic dry)
- For sitz bath, press "Posterior" again. Sitz bath works for 5 minutes at set temperature.



### 4 Press the STOP Button.

- Selected functions stop.
- Press "STOP" on the side control panel for 3 seconds to turn off the unit.



### 5 MASSAGE Wash

- When Pressing the MASSAGE button, nozzle location will be changed back and forth to wash the wider range.
- When pressing the "Kids" button during the operation of MASSAGE, the moving distance can be adjusted within 5 steps.

Massage



### 6 PULSE Wash

- When the pressing PULSE button during the operation of Posterior/Feminine/Power Wash, water pressure will repeat HIGH/LOW level for smooth pulsating wash.

Pulse



### 7 Water Pressure Control

- Pressing HIGH/LOW button enables the control of water pressure.
- When any foreign material blocks the water pipe filter, it may cause the low water pressure. Regularly check it for its stable use.

HI

Power  
ctrl

LOW

FWD

Position  
ctrl

BWD



Consult your doctor before using Power Wash function in situations of anal disease/surgery.

Operation

# 07. How to Use the Product

## Basic Operation Method

### 9 Kids Function

- ▶ For child use, press the "Kids" button first (Kids lamp will light on), nozzle position, water pressure and seat temp. will be adjusted.
- ▶ Nozzle moves forward more than adult wash.
- ▶ Water pressure is weaker than adult wash.
- ▶ Seat temp. drops down by 4°C from set level.

Kids

### 10 Seat Temperature Control

- ▶ When pressing the SEAT TEMP.CONTROL button, the temperature of seat can be controlled within the range of room temperature, 34°C/38°C/42°C
- ▶ If the seat temperature reaches 34°C or more, the seat temperature indicator turns in RED. If not (under 33°C), it remains in BLUE.

Seat  
Temp



### 11 WATER TEMP CONTROL

- ▶ When pressing the WATERTEMP.CONTROL button, the temperature of water can be controlled within the range of room temperature, 34°C/36°C/38°C

Water  
Temp

### 12 ENERGY SAVING Function

- ▶ Automatic Energy Saving Function
    - # When pressing the button once, it enters into automatic energy saving mode.
    - # Seat temperature will be kept at 32°C.
    - # When sitting on the seat to use bidet, it turns to the pre-designated temperature. When getting out of the seat, it returns to the automatic energy saving mode.
  - ▶ Learn Energy Saving Function
    - # When pressing the button twice, it enters into the learn energy saving mode.
    - # Learn energy saving enables MICO to detect the time frame used by the users. It releases the energy saving function at the higher-frequency time frame to set the temperature of seat at the pre-designated level, while setting it at 32°C when the using frequency is lower, enabling the excellent energy saving effect.
    - # When using it at the lower frequency time frame, the preset temperature will increase during the time the user sits on the seat.
    - # When pressing the button three times, the energy saving mode will be released.
- \* This product adopts the rapid water-heating method, and therefore doesn't consume unnecessary power to operate the heater for the purpose of keep the water temperature. It means its power consumption is far less than the electronic bidet seats of other suppliers.

Operation

### 13 Deodorizing function

- ▶ When sitting on the seat, the deodorizing function starts automatically.
- ▶ Speed of deodorizing fan can be controlled. (refer to the User setting facilities, P.22)
- ▶ After the usage of bidet, the deodorizing function will operate for one (1) minute.

### 14 Nozzle Cleaning

- ▶ While not sitting on the seat, and pressing the Posterior button on the side control panel for 3 seconds, the nozzle will move forward at its maximum distance so that the user can clean it easily. (It will return after 2 minutes)
- ▶ When pressing STOP button, the nozzle will return and operate self-cleaning operation.



# 08. User Settings

## 8-1. User setting with the remote control

● : Seat Switch 'Off' Status ○ : Seat Switch 'On' Status ◑ : Regardless of On/Off

No	Function	Seat Status	Switch Operation	Description	Initial Status														
1	Selecting the speed of deodorizing fan	●		While pressing the "STOP", press "ENERGY SAVE" for longer than 3 sec.	<table border="1"> <tr> <td>Water Temp (LED)</td> <td>Speed of Deodorizing Fan</td> </tr> <tr> <td>● Seated</td> <td>Unseated</td> </tr> <tr> <td>OFF OFF</td> <td>ON OFF</td> </tr> <tr> <td>OFF ON</td> <td>ON ON</td> </tr> <tr> <td>ON ON</td> <td>ON ON</td> </tr> <tr> <td>High speed</td> <td>Low speed</td> </tr> <tr> <td>High speed</td> <td>High speed</td> </tr> </table> <p>High speed in occupied mode. High speed in unoccupied mode.</p>	Water Temp (LED)	Speed of Deodorizing Fan	● Seated	Unseated	OFF OFF	ON OFF	OFF ON	ON ON	ON ON	ON ON	High speed	Low speed	High speed	High speed
Water Temp (LED)	Speed of Deodorizing Fan																		
● Seated	Unseated																		
OFF OFF	ON OFF																		
OFF ON	ON ON																		
ON ON	ON ON																		
High speed	Low speed																		
High speed	High speed																		
2	Remote control ID setting	●		Press "MASSAGE" for longer than 5 sec.	<p>ID can be chosen from 1~5. Number of blinking LED means ID number.</p> <p>If main unit is powered off and on again, ID of main unit will be reset as 1. Before use, synchronize the IDs of main unit and remote control.</p> <p>Default ID is 1.</p>														
	Remote control ID change	●		Change the ID by pressing "ID" or "STOP", and press "STOP" to set the ID	<p>If batteries of remote control changed, set the ID again as it is shown above.</p> <p>If batteries changed or ID changed (not 1), plug out the main unit for longer than 3 sec and plug in again. Main unit ID will be synchronized with ID of remote control automatically.</p>														

## 8-2. Extra functions with side control panel

● : Seat Switch 'Off' Status ○ : Seat Switch 'On' Status ◑ : Regardless of On/Off

No	Function	Seat Status	Switch Operation	Description
1	Nozzle cleaning	●		<p>Press "Posterior" for longer than 3 sec.</p> <p>Nozzle will move forward for cleaning.</p>
2	Power off	●		<p>Press "STOP" for 3 sec.</p> <p>Nozzle will retract and clean itself.</p>
3	Initialization	●		<p>Press "STOP" for longer than 5 sec.</p> <p>All setting will be initialized.</p>


Operation



# 09.Maintenance & Cleaning

## Cleaning of Water pipe filter

- ① Close the water feed valve by turning it clockwise and then completely drain the water from the water tank
- ② Remove the screen filter by turning it counter clockwise.
- ③ After cleaning the water pipe filter, reassemble it by turning it clockwise.
- ④ Open the water feed valve by turning it counter clockwise.

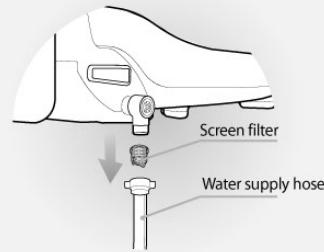

## Cleaning of Bidet Body

- ① Exterior surface of bidet is made of plastic material, which may be damaged by scrubber, chemicals, etc.
- ② Wipe the surface with a soft cloth wet and squeezed completely.  
Don't spray water directly onto the surface with the bath-use shower device.
- ③ Clean the body after removing the power plug from the outlet. Be sure no water splash to the power plug or outlet.
- ④ Don't touch the power outlet with wet hand. Risk of electric shock.




## Cleaning of Nozzle

- ① Press the Posterior button on the side control panel for 3 seconds, and then the nozzle will move forward and stop. (for 2 minutes)
- ② Clean the nozzle with an unused toothbrush, etc., and press the STOP button, then it will return to the original place for self cleaning.




## Drainage of Hot Water Tank

- ① Remove the power plug from the outlet.
- ② Close the water feed valve by turning it clockwise
- ③ Press the release button on the side of main body.

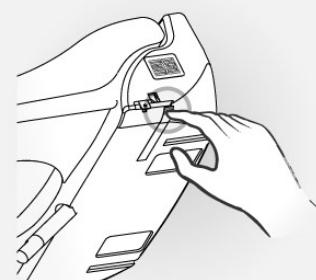

## Maintenance during winter season


- ① Insert the power plug into the outlet and be sure if the power is supplied.
- ② When it is not used for a long time, drain the water from the water tank

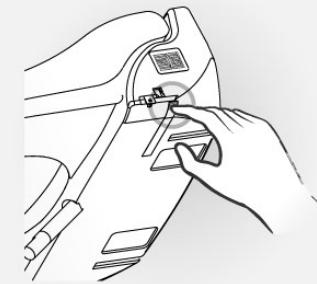

## Do not throw away

We are committed to protect the environment.  
Please help us by disposing of this product in a responsible way when it reaches the end of its service life, to prevent certain substances contained in electric and electronic products from harming public health or the environment. The symbol means that the products may not be thrown away with other household waste: at the end of its service life, it may be taken at no charge to you to the waste-collection centers provided for the purpose by the authorities in your country.

It may be taken to the distributor from whom you purchase a new product that is equivalent to or that performs the same functions as this product. This later option may not be available in some countries.

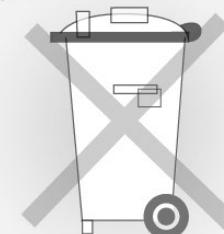

## 10. Before requesting repair

\* Please check the following points before requesting the repair of the product.

Signs to occur	Matters to be checked
Completely out of operation	<ul style="list-style-type: none"> <li>Check if the power plug is not connected.</li> <li>Check the power failure.</li> </ul>
Water does not spray out	<ul style="list-style-type: none"> <li>Check if the water supply is suspended.</li> <li>Check if water feed valve is locked</li> <li>Check if nozzle is blocked by foreign material</li> <li>Check if connection hose is bent</li> </ul>
Water pressure is low	<ul style="list-style-type: none"> <li>Check if water pipe filter is blocked by foreign material.</li> <li>Check if the water pressure is set at too low level</li> </ul>
Water is not warm enough	<ul style="list-style-type: none"> <li>Check if its temperature is set at 'Off' or 'Low'.</li> </ul>
Seat is not warm enough	<ul style="list-style-type: none"> <li>Check if its temperature is set at 'Off' or 'Low'</li> </ul>

### Self-Diagnosis Table

\* When any abnormal phenomenon occurs, please refer to the following table, and inform the exact status at the time of requesting A/S service.

No	Self-Diagnosis Phenomenon	Way of Indication
1	Air pump motor disconnected or not inserted	
2	Air pump motor short-circuited	
3	Deodorizing motor: Check the cycle of rotation at low speed	
4	Stoppage of motor due to the over-current of deodorization motor	Buzzer sounds. Abnormal condition is differently indicated by symptoms
5	Heat stops in case of low speed rotation of drying motor	
6	Heater and drying motor simultaneously stop in case of the over-current of drying motor.	



## 11. Product Specifications

Item		
	Rated Voltage	AC 220V~240V, 50Hz
	Max. Consumption Power	1670W
	Power Cord Length	1.8M
	Water Feed Method	Direct Connection Water Main
	Water Pressure	0.7~7.5 kgf/cm <sup>2</sup>
Wash	Feeding Volume	Posterior 0.7ℓ/min
		Feminine 0.7ℓ/min
		Power Wash 0.6ℓ/min
	Water Pressure Control	5-Step Control
	Temp. Control	Room Temp. ~ 38°C
	Heater Capa.	1600W
	Safety Device	Temp. Fuse, Thermo Switch
Heated Seat	Temp. Control	Room Temp. ~ 42°C
	Heater Capa.	55W
	Safety Device	Temp. Fuse
Dry	Temp. Control	Room Temp. ~ 50°C
	Heater Capa.	250W
	Safety Device	Temp. Fuse, Bi-metal
	Deodorization	
Product Dimension	Elongated	Catalytic Deodorization
	Round	406mm x 532mm x 145mm
	Small	406mm x 503mm x 145mm
Product Weight	Elongated	406mm x 470mm x 145mm
	Round	4.7kg [7.7kg]
	Small	4.6kg [7.6kg]
		4.5kg [7.5kg]

## 12. Comparison Chart

	Division	BW-103R
Wash/Dry Function	Posterior	●
	Feminine	●
	Power Wash	●
	Dry	●
	Deodorization	●
	Bubble Wash	●
	Continuous Warm Water Supply	●
	Automatic Energy Save	●
	Learning Energy Save	●
	Massage	●
	Pulse	●
	Remote control unit	●
	Warm Seat	●
	Soft Closing Lid & Seat	●
	Detachable Main Body	●
	Kids	●

## 13. Warranty Information

### - WARRANTY -

1. We hereby guarantee the product as follow in accordance with the regulation of consumer damage compensation.
2. In case of failure of the product, please inform the distributor where you purchased the product.
3. Product warranty will be effective for 5 years since the product has been discontinued.

Product Name	Warranty Period
Model Name	One (1) year since the date purchased
Date Purchased	
SER. No.	
Customer's Address	Name Tel.No
Distributor's Address	Name Tel.No

#### Regarding Product Warranty Regulation...

1. We will repair the product at free of charge in case it was failed under the normal operating condition in accordance with the user guide during the warranty period.
2. Although it is within the warranty period, we will charge the repair service fee etc. (repair + product + travel expense) if it falls under the following cases.

#### Voiding warranty

1. Defects occurred from the user's careless handling
2. Defects occurred from the usage with incorrect power voltage (E.g., 220V was used to the 110V product)
3. Defects occurred from the improper repair done by the person other than our service engineer.
4. Defects occurred from Force Majeure (fire, salt, flood, etc.)
5. Failure or damage due to the drop, etc. (user's mis-handling) during the operation after installed
6. Defect occurred from the interior modification at user's discretion
7. In case the life cycle of the part expired


Mail, email or fax the warranty form to:  
**YOUR LOCAL DEALER FIRST where you bought this appliance**

If your dealer is unable to assist you

## 12. Comparison Chart

	Division	BW-103R
Wash/Dry Function	Posterior	●
	Feminine	●
	Power Wash	●
	Dry	●
	Deodorization	●
	Bubble Wash	●
Convenient /Comfort Function	Continuous Warm Water Supply	●
	Automatic Energy Save	●
	Learning Energy Save	●
	Massage	●
	Pulse	●
	Remote control unit	●
	Warm Seat	●
	Soft Closing Lid & Seat	●
	Detachable Main Body	●
	Kids	●

### Dimension diagrams

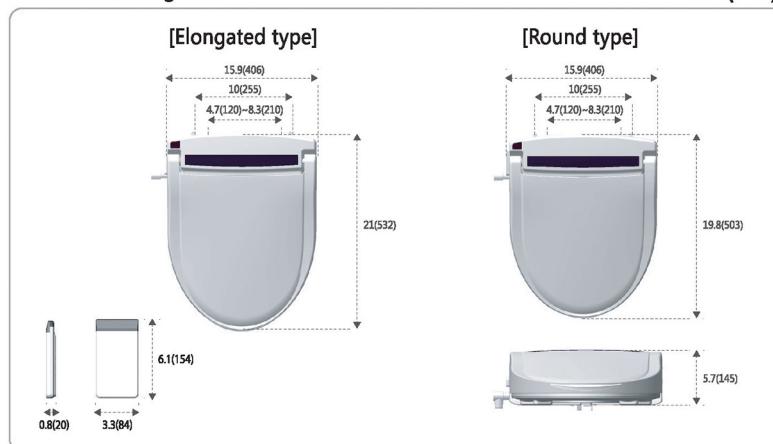

## 13. Warranty Information

### - WARRANTY -

1. We hereby guarantee the product as follow in accordance with the regulation of consumer damage compensation.
2. In case of failure of the product, please inform the distributor where you purchased the product.
3. Product warranty will be effective for 5 years since the product has been discontinued.

Product Name	Warranty Period
Model Name	One (1) year since the date purchased
Date Purchased	
SER. No.	
Customer's Address	Name
	Tel.No.
Distributor's Address	Name
	Tel.No.

#### Regarding Product Warranty Regulation...

1. We will repair the product at free of charge in case it was failed under the normal operating condition in accordance with the user guide during the warranty period.
2. Although it is within the warranty period, we will charge the repair service fee etc. (repair + product + travel expense) if it falls under the following cases.

#### Voiding warranty

1. Defects occurred from the user's careless handling
2. Defects occurred from the usage with incorrect power voltage (E.g., 220V was used to the 110V product)
3. Defects occurred from the improper repair done by the person other than our service engineer.
4. Defects occurred from Force Majeure (fire, salt, flood, etc.)
5. Failure or damage due to the drop, etc. (user's mis-handling) during the operation after installed
6. Defect occurred from the interior modification at user's discretion
7. In case the life cycle of the part expired

Mail, email or fax the warranty form to:  
**YOUR LOCAL DEALER FIRST where you bought this appliance**

If your dealer is unable to assist you

Memo

30

Memo

31

付録  
参考資料

Memo

Memo

Maintenance  
& Cleaning