Motor Wiring Mini-Guide

Updated 09/26/2006

Step 1.

Thread the leads of the cap through the terminals and bend them along the terminals as shown in Figure 1. Trim the leads flush with the bottom of the terminal.



Figure 1.

Step 2.

Push the motor wire connectors on the terminals as shown in Figure 2. Make sure you put the red to (+) and the yellow to (-). This will make wiring the speed controllers easier later on.

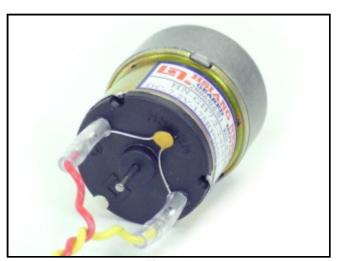


Figure 2.