WikipediA

Rectifier

A **rectifier** is an electrical device that <u>converts</u> <u>alternating</u> <u>current</u> (AC), which periodically reverses direction, to <u>direct</u> current (DC), which flows in only one direction.

The process is known as *rectification*, since it "straightens" the direction of current. Physically, rectifiers take a number of forms, including vacuum tube diodes, wet chemical cells, mercury-arc valves, stacks of copper and selenium oxide plates, semiconductor diodes, silicon-controlled rectifiers and other silicon-based semiconductor switches. Historically, even synchronous electromechanical switches and motors have been used. Early radio receivers, called <u>crystal radios</u>, used a "<u>cat's whisker</u>" of fine wire pressing on a crystal of <u>galena</u> (lead sulfide) to serve as a point-contact rectifier or "crystal detector".



A rectifier diode (silicon controlled rectifier) and associated mounting hardware. The heavy threaded stud attaches the device to a heatsink to dissipate heat.

Rectifiers have many uses, but are often found serving as components of DC <u>power supplies</u> and <u>high-voltage direct current</u> power transmission systems. Rectification may serve in roles other than to generate direct current for use as a source of power. As noted, <u>detectors</u> of <u>radio</u> signals serve as rectifiers. In gas heating systems flame rectification is used to detect presence of a flame.

Depending on the type of alternating current supply and the arrangement of the rectifier circuit, the output voltage may require additional smoothing to produce a uniform steady voltage. Many applications of rectifiers, such as power supplies for radio, television and computer equipment, require a *steady* constant DC voltage (as would be produced by a <u>battery</u>). In these applications the output of the rectifier is smoothed by an <u>electronic filter</u>, which may be a <u>capacitor</u>, <u>choke</u>, or set of capacitors, chokes and <u>resistors</u>, possibly followed by a <u>voltage regulator</u> to produce a steady voltage.

More complex circuitry that performs the opposite function, that is converting DC to AC, is called an inverter.

Contents

Rectifier devices

Rectifier circuits

Single-phase rectifiers

Half-wave rectification

Full-wave rectification

Three-phase rectifiers

Three-phase, half-wave circuit

Three-phase, full-wave circuit using center-tapped transformer

Three-phase bridge rectifier uncontrolled

Three-phase bridge rectifier controlled

Twelve-pulse bridge

Voltage-multiplying rectifiers

Quantification of rectifiers

Conversion ratio

Transformer utilization ratio

Rectifier voltage drop

Harmonic distortion

Rectifier output smoothing

Performance with low impedance source

Capacitor input filter

Choke input filter

Resistor as input filter

Higher order and cascade filters

Voltage regulators

Applications

Rectification technologies

Electromechanical

Synchronous rectifier

Vibrating rectifier

Motor-generator set

Electrolytic

Plasma type

Mercury-arc

Argon gas electron tube

Diode vacuum tube (valve)

Solid state

Crystal detector

Selenium and copper oxide rectifiers

Silicon and germanium diodes

High power: thyristors (SCRs) and newer silicon-based voltage sourced converters

Active rectifier

Current research

See also

References

Rectifier devices

Before the development of silicon semiconductor rectifiers, vacuum tube thermionic diodes and copper oxide- or selenium-based metal rectifier stacks were used.^[1] With the introduction of semiconductor electronics, vacuum tube rectifiers became obsolete, except for some enthusiasts of vacuum tube audio equipment. For power rectification from very low to very high current, semiconductor diodes of various types (junction diodes, Schottky diodes, etc.) are widely used.

Other devices that have control electrodes as well as acting as unidirectional current valves are used where more than simple rectification is required—e.g., where variable output voltage is needed. High-power rectifiers, such as those used in high-voltage direct current power transmission, employ silicon

semiconductor devices of various types. These are <u>thyristors</u> or other controlled switching solid-state switches, which effectively function as diodes to pass current in only one direction.


Rectifier circuits

Rectifier circuits may be <u>single-phase</u> or multi-phase. Most low power rectifiers for domestic equipment are single-phase, but three-phase rectification is very important for industrial applications and for the transmission of energy as DC (HVDC).

Single-phase rectifiers

Half-wave rectification

In half-wave rectification of a single-phase supply, either the positive or negative half of the AC wave is passed, while the other half is blocked. Mathematically, it is a <u>step function</u> (for positive pass, negative block): passing positive corresponds to the ramp function being the identity on positive inputs, blocking negative corresponds to being zero on negative inputs. Because only one half of the input waveform reaches the output, mean voltage is lower. Half-wave rectification requires a single <u>diode</u> in a <u>single-phase supply</u>, or three in a <u>three-phase supply</u>. Rectifiers yield a unidirectional but pulsating direct current; half-wave rectifiers produce far more <u>ripple</u> than full-wave rectifiers, and much more filtering is needed to eliminate harmonics of the AC frequency from the output.

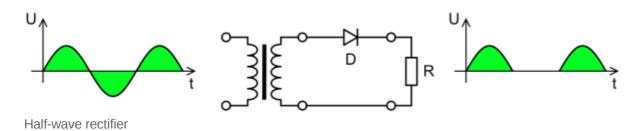

The no-load output DC voltage of an ideal half-wave rectifier for a sinusoidal input voltage is:^[2]

$$V_{
m rms} = rac{V_{
m peak}}{2}$$

$$V_{ ext{dc}} = rac{V_{ ext{peak}}}{\pi}$$

where:


 $V_{\rm dc}$, $V_{\rm av}$ – the DC or average output voltage,

 $V_{\rm peak}$, the peak value of the phase input voltages,


 $V_{\rm rms}$, the root mean square (RMS) value of output voltage.

Full-wave rectification

A full-wave rectifier converts the whole of the input waveform to one of constant polarity (positive or negative) at its output. Mathematically, this corresponds to the <u>absolute value</u> function. Full-wave rectification converts both polarities of the input waveform to pulsating DC (direct current), and yields a higher average output voltage. Two diodes and a center tapped <u>transformer</u>, or four diodes in a <u>bridge configuration</u> and any AC source (including a transformer without center tap), are needed. Single semiconductor diodes, double diodes with a common cathode or common anode, and four- or six-diode bridges are manufactured as single components.

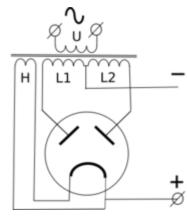


Full-wave rectifier, with vacuum tube having two anodes.

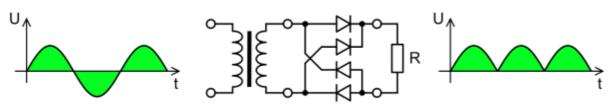

Graetz bridge rectifier: a full-wave rectifier using four diodes.

For single-phase AC, if the transformer is center-tapped, then two diodes back-to-back (cathode-to-cathode or anode-to-anode, depending upon output polarity required) can form a full-wave rectifier. Twice as many turns are required on the transformer secondary to obtain the same output voltage than for a bridge rectifier, but the power rating is unchanged.

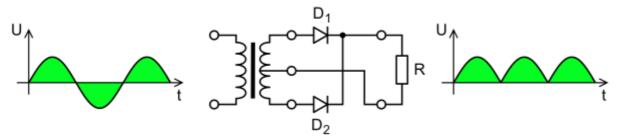

Full-wave rectifier using a center tap transformer and 2 diodes.

The average and RMS no-load output voltages of an ideal single-phase full-wave rectifier are:

$$egin{aligned} V_{
m dc} = V_{
m av} = rac{2 \cdot V_{
m peak}}{\pi} \ & V_{
m rms} = rac{V_{
m peak}}{\sqrt{2}} \end{aligned}$$

Very common double-diode rectifier <u>vacuum tubes</u> contained a single common <u>cathode</u> and two <u>anodes</u> inside a single envelope, achieving full-wave rectification with positive output. The 5U4 and the 80/5Y3 (4 pin)/(octal) were popular examples of this configuration.


Three-phase rectifiers

Single-phase rectifiers are commonly used for power supplies for domestic equipment. However, for most industrial and high-power applications, three-phase rectifier circuits are the norm. As with single-phase rectifiers, three-phase rectifiers can take the form of a half-wave circuit, a full-wave circuit using a center-tapped transformer, or a full-wave bridge circuit.


<u>Thyristors</u> are commonly used in place of diodes to create a circuit that can regulate the output voltage. Many devices that provide direct current actually *generate* three-phase AC. For example, an <u>automobile</u> <u>alternator</u> contains six diodes, which function as a full-wave rectifier for battery charging.

Three-phase, half-wave circuit

An uncontrolled three-phase, half-wave midpoint circuit requires three diodes, one connected to each phase. This is the simplest type of three-phase rectifier but suffers from relatively high <u>harmonic distortion</u> on both the AC and DC connections. This type of rectifier is said to have a pulse-number of three, since the output voltage on the DC side contains three distinct pulses per cycle of the grid frequency:

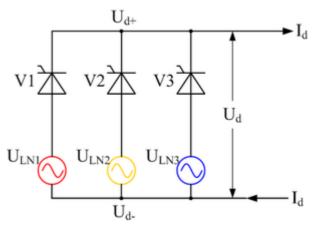

Controlled three-phase half-wave rectifier circuit using thyristors as the switching elements, ignoring supply inductance

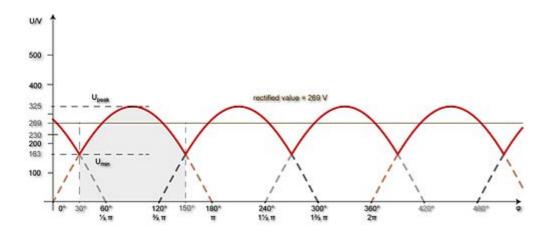

The peak values $V_{\rm peak}$ of this three-pulse DC voltage are calculated from the RMS value $V_{\rm LN}$ of the input phase voltage (line to neutral voltage, 120 V in North America, 230 V within Europe at mains operation): $V_{\rm peak} = \sqrt{2} \cdot V_{\rm LN}$. The average no-load output voltage $V_{\rm av}$ results from the <u>integral</u> under the graph of a positive half-wave with the period duration of $\frac{2}{3}\pi$ (from 30° to 150°):

$$V_{
m dc} = V_{
m av} = rac{1}{rac{2}{3}\pi} \int_{30^\circ}^{150^\circ} V_{
m peak} \cdot \sinarphi \cdot {
m d}arphi = rac{3\cdot V_{
m peak}}{2\pi} \cdot (-\cos 150^\circ + \cos 30^\circ) = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = rac{3\cdot V_{
m peak}}{2\pi} \cdot \left[-\cos 150^\circ + \cos 30^\circ
ight] = -2\pi \cdot \left[-\cos 150^\circ + \cos 30^\circ + \cos 30^\circ
ight] = -2\pi \cdot \left[-\cos 150^\circ + \cos 30^$$


$$\Rightarrow V_{\rm dc} = V_{\rm av} = \frac{3 \cdot \sqrt{3} \cdot \sqrt{2} \cdot V_{\rm LN}}{2\pi} \Rightarrow V_{\rm av} = \frac{3 \cdot \sqrt{6} \cdot V_{\rm LN}}{2\pi} \approx 1.17 \cdot V_{\rm LN}$$

Three-phase, full-wave circuit using center-tapped transformer

If the AC supply is fed via a transformer with a center tap, a rectifier circuit with improved harmonic performance can be obtained. This rectifier now requires six diodes, one connected to each end of each transformer secondary winding. This circuit has a pulse-number of six, and in effect, can be thought of as a six-phase, half-wave circuit.

Before <u>solid state</u> devices became available, the half-wave circuit, and the full-wave circuit using a center-tapped transformer, were very commonly used in industrial rectifiers using <u>mercury-arc valves</u>.^[4] This was because the three or six AC supply inputs could be fed to a corresponding number of anode electrodes on a single tank, sharing a common cathode.

With the advent of diodes and thyristors, these circuits have become less popular and the three-phase bridge circuit has become the most common circuit.

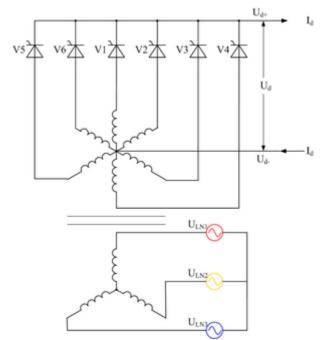

Controlled three-phase full-wave rectifier circuit using thyristors as the switching elements, with a center-tapped transformer, ignoring supply inductance

Three-phase bridge rectifier uncontrolled



Disassembled automobile alternator, showing the six diodes that comprise a full-wave three-phase bridge rectifier.


For an uncontrolled three-phase bridge rectifier, six diodes are used, and the circuit again has a pulse number of six. For this reason, it is also commonly referred to as a six-pulse bridge. The B6 circuit can be seen simplified as a series connection of two three-pulse center circuits.

For low-power applications, double diodes in series, with the anode of the first diode connected to the cathode of the second, are manufactured as a single component for this purpose. Some commercially available double diodes have all four terminals available so the user can configure them for single-phase split supply use, half a bridge, or three-phase rectifier.


For higher-power applications, a single discrete device is usually used for each of the six arms of the bridge. For the very highest powers, each arm of the bridge may consist of tens or hundreds of separate devices in parallel (where very high current is needed, for example in aluminium smelting) or

in series (where very high voltages are needed, for example in <u>high-voltage direct current</u> power transmission).

The pulsating DC voltage results from the differences of the instantaneous positive and negative phase voltages V_{LN} , phase-shifted by 30°:

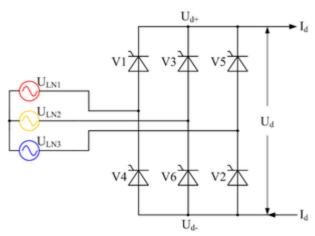

Controlled three-phase full-wave bridge rectifier circuit (B6C) using thyristors as the switching elements, ignoring supply inductance. The thyristors pulse in order V1–V6.

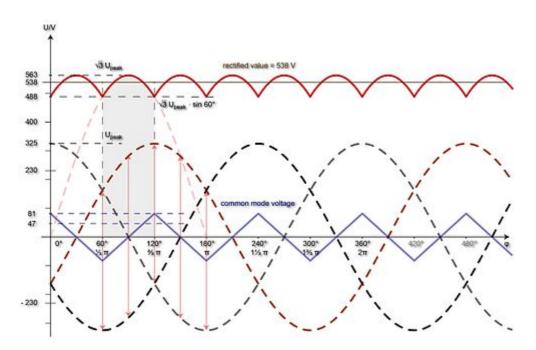

The ideal, no-load average output voltage $V_{\rm av}$ of the B6 circuit results from the integral under the graph of a DC voltage pulse with the period duration of $\frac{1}{3}\pi$ (from 60° to 120°) with the peak value $\hat{v}_{\rm DC}=\sqrt{3}\cdot V_{\rm peak}$:


$$V_{
m dc} = V_{
m av} = rac{1}{rac{1}{3}\pi} \int_{60^\circ}^{120^\circ} \sqrt{3} \cdot V_{
m peak} \cdot \sinarphi \cdot {
m d}arphi = rac{3\cdot\sqrt{3}\cdot V_{
m peak}}{\pi} \cdot (-\cos120^\circ + \cos60^\circ) = rac{3\cdot\sqrt{3}\cdot V_{
m peak}}{\pi}$$

$$\Rightarrow V_{\rm dc} = V_{\rm av} = \frac{3 \cdot \sqrt{3} \cdot \sqrt{2} \cdot V_{\rm LN}}{\pi} \Rightarrow V_{\rm av} = \frac{3 \cdot \sqrt{6} \cdot V_{\rm LN}}{\pi} \approx 2,34 \cdot V_{\rm LN}$$

If the three-phase bridge rectifier is operated symmetrically (as positive and negative supply voltage), the center point of the rectifier on the output side (or the so-called isolated reference potential) opposite the center point of the transformer (or the neutral conductor) has a potential difference in the form of a triangular common-mode voltage. For this reason, these two centers must never be connected to each other,

otherwise short-circuit currents would flow. The ground of the three-phase bridge rectifier in symmetrical operation is thus decoupled from the neutral conductor or the <u>earth</u> of the mains voltage. Powered by a transformer, earthing of the center point of the bridge is possible, provided that the secondary winding of the transformer is electrically isolated from the mains voltage and the star point of the secondary winding is not on earth. In this case, however, (negligible) leakage currents are flowing over the transformer windings.

The common-mode voltage is formed out of the respective average values of the differences between the positive and negative phase voltages, which form the pulsating DC voltage. The peak value of the delta voltage $\hat{v}_{\text{common-mode}}$ amounts $\frac{1}{4}$ of the peak value of the phase input voltage V_{peak} and is calculated with V_{peak} minus half of the DC voltage at 60° of the period:

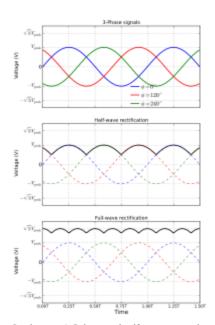

3-phase AC input, half-wave and full-wave rectified DC output waveforms

$$\hat{v}_{ ext{common-mode}} = V_{ ext{peak}} - rac{\sqrt{3} \cdot V_{ ext{peak}} \cdot \sin 60^{\circ}}{2} = V_{ ext{peak}} \cdot \left(1 - rac{\sqrt{3} \cdot \sin 60^{\circ}}{2}
ight) = V_{ ext{peak}} \cdot 0.25$$

The RMS value of the common-mode voltage is calculated from the form factor for triangular oscillations:

$$V_{
m common-mode} = rac{\hat{v}_{
m common-mode}}{\sqrt{3}}$$

If the circuit is operated asymmetrically (as a simple supply voltage with just one positive pole), both the positive and negative poles (or the isolated reference potential) are pulsating opposite the center (or the ground) of the input voltage analogously to the positive and negative waveforms of the phase voltages. However, the differences in the phase voltages result in the six-pulse DC voltage (over the duration of a period). The strict separation of the transformer center from the negative pole (otherwise short-circuit currents will flow) or a possible grounding of the negative pole when powered by an isolating transformer apply correspondingly to the symmetrical operation.

Three-phase bridge rectifier controlled

The controlled three-phase bridge rectifier uses thyristors in place of diodes. The output voltage is reduced by the factor $cos(\alpha)$:

$$V_{ ext{dc}} = V_{ ext{av}} = rac{3 \cdot \sqrt{3} \cdot V_{ ext{peak}}}{\pi} \cdot \cos lpha$$

Or, expressed in terms of the line to line input voltage: [5]

$$V_{ ext{dc}} = V_{ ext{av}} = rac{3 \cdot V_{ ext{LLpeak}}}{\pi} \cdot \cos lpha$$

Where:

 $V_{\rm LLpeak}$, the peak value of the line to line input voltages,

 $V_{\rm peak}$, the peak value of the phase (line to neutral) input voltages,

 α , firing angle of the thyristor (0 if diodes are used to perform rectification)

The above equations are only valid when no current is drawn from the AC supply or in the theoretical case when the AC supply connections have no inductance. In practice, the supply inductance causes a reduction of DC output voltage with increasing load, typically in the range 10–20% at full load.

The effect of supply inductance is to slow down the transfer process (called commutation) from one phase to the next. As result of this is that at each transition between a pair of devices, there is a period of overlap during which three (rather than two) devices in the bridge are conducting simultaneously. The overlap angle is usually referred to by the symbol μ (or μ), and may be 20 30° at full load.

With supply inductance taken into account, the output voltage of the rectifier is reduced to:


$$V_{ ext{dc}} = V_{ ext{av}} = rac{3 \cdot V_{ ext{LLpeak}}}{\pi} \cdot \cos(lpha + \mu)$$

The overlap angle μ is directly related to the DC current, and the above equation may be re-expressed as:


$$V_{
m dc} = V_{
m av} = rac{3 \cdot V_{
m LLpeak}}{\pi} \cdot \cos(lpha) - 6 f L_{
m c} I_{
m d}$$

Where:


 L_{c} , the commutating inductance per phase I_{d} , the direct current

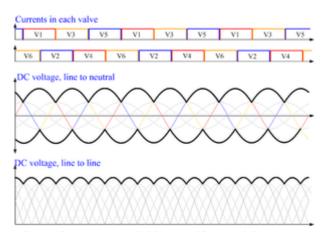


Three-phase Graetz bridge rectifier at alpha=0° without overlap

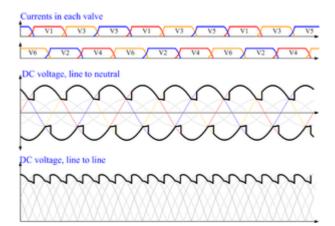

Three-phase Graetz bridge rectifier at alpha=0° with overlap angle of 20°

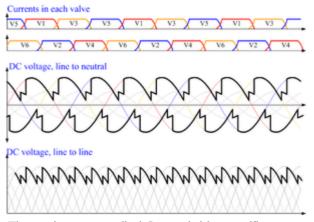


Three-phase controlled Graetz bridge rectifier at alpha=20° with overlap angle of 20°

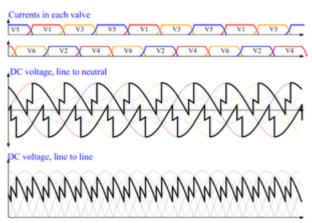

Three-phase controlled Graetz bridge rectifier at alpha=40° with overlap angle of 20°

Twelve-pulse bridge

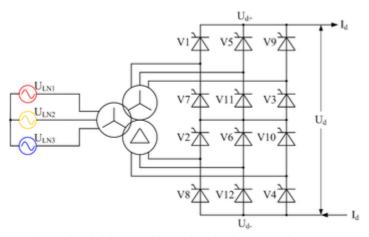

Twelve pulse bridge rectifier using thyristors as the switching elements. One six-pulse bridge consists of the even-numbered thyristors, the other is the odd-numbered set.

Although better than single-phase rectifiers or three-phase half-wave rectifiers, six-pulse rectifier circuits still produce considerable harmonic distortion on both the AC and DC connections. For very high-power rectifiers the twelve-pulse bridge connection is usually used. A twelve-pulse bridge consists of two six-pulse bridge circuits connected in series, with their AC connections fed from a supply transformer that produces a 30° phase shift between the two bridges. This cancels many of the characteristic harmonics the six-pulse bridges produce.


The 30 degree phase shift is usually achieved by using a transformer with two sets of secondary windings, one in star (wye) connection and one in delta connection.

Voltage-multiplying rectifiers

The simple half-wave rectifier can be built in two electrical configurations with the diodes pointing in opposite directions, one version connects the negative terminal of the output direct to the AC supply and the other connects the positive terminal of the output direct to the AC supply. By combining both of these with separate output smoothing it is possible to get an output voltage of nearly double the peak AC input voltage. This also provides a tap in the middle, which allows use of such a circuit as a split rail power supply.


A variant of this is to use two capacitors in series for the output smoothing on a bridge rectifier then place a switch between the midpoint of those capacitors and one of the AC input terminals. With the switch open, this circuit acts like a normal bridge rectifier. With the switch closed, it acts like a voltage doubling rectifier. In other words, this makes it easy to derive a voltage of roughly 320 V (±15%, approx.) DC from any 120 V or 230 V mains supply in the world, this can then be fed into a relatively simple switched-mode power supply. However, for a given desired ripple, the value of both capacitors must be twice the value of the single one required for a normal bridge rectifier; when the switch is closed each one must filter the output of

a half-wave rectifier, and when the switch is open the two capacitors are connected in series with an equivalent value of half one of them.

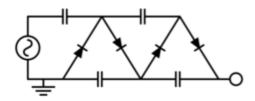

Cockcroft Walton voltage multiplier

Cascaded diode and capacitor stages can be added to make a voltage multiplier (Cockroft-Walton circuit). These circuits are capable of producing a DC output voltage potential up to about ten times the peak AC

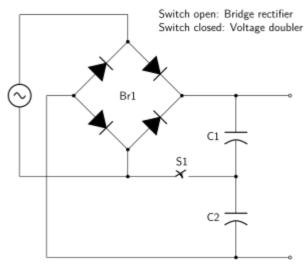

Switchable full bridge/voltage doubler.

input voltage, in practice limited by current capacity and voltage regulation issues. Diode voltage multipliers, frequently used as a trailing boost stage or primary high voltage (HV) source, are used in HV laser power supplies, powering devices such as <u>cathode ray tubes</u> (CRT) (like those used in CRT based television, radar and sonar displays), photon amplifying devices found in image intensifying and photo multiplier tubes (PMT), and magnetron based radio frequency (RF) devices used in radar transmitters and microwave ovens. Before the introduction of semiconductor electronics, <u>transformerless vacuum tube receivers</u> powered directly from AC power sometimes used voltage doublers to generate roughly 300 VDC from a 100–120 V power line.

Quantification of rectifiers

Several ratios are used to quantify the function and performance of rectifiers or their output, including transformer utilization factor (TUF), conversion ratio (η), ripple factor, form factor, and peak factor. The two primary measures are DC voltage (or offset) and peak-peak ripple voltage, which are constituent components of the output voltage.

Conversion ratio

Conversion ratio (also called "rectification ratio", and confusingly, "efficiency") η is defined as the ratio of DC output power to the input power from the AC supply. Even with ideal rectifiers, the ratio is less than 100% because some of the output power is AC power rather than DC which manifests as ripple superimposed on the DC waveform. The ratio can be improved with the use of smoothing circuits which reduce the ripple and hence reduce the AC content of the output. Conversion ratio is reduced by losses in transformer windings and power dissipation in the rectifier element itself. This ratio is of little practical significance because a rectifier is almost always followed by a filter to increase DC voltage and reduce ripple. In some three-phase and multi-phase applications the conversion ratio is high enough that smoothing circuitry is unnecessary. [6] In other circuits, like filament heater circuits in vacuum tube electronics where the load is almost entirely resistive, smoothing circuitry may be omitted because resistors dissipate both AC and DC power, so no power is lost.

For a half-wave rectifier the ratio is very modest.

 $P_{
m AC}=rac{V_{
m peak}}{2}\cdotrac{I_{
m peak}}{2}$ (the divisors are 2 rather than $\sqrt{2}$ because no power is delivered on the negative half-cycle)

$$P_{ ext{DC}} = rac{V_{ ext{peak}}}{\pi} \cdot rac{I_{ ext{peak}}}{\pi}$$

Thus maximum conversion ratio for a half-wave rectifier is,

$$\eta = rac{P_{
m DC}}{P_{
m AC}} pprox 40.5\%$$

Similarly, for a full-wave rectifier,

$$P_{ ext{AC}} = rac{V_{ ext{peak}}}{\sqrt{2}} \cdot rac{I_{ ext{peak}}}{\sqrt{2}}$$

$$P_{ ext{DC}} = rac{2 \cdot V_{ ext{peak}}}{\pi} \cdot rac{2 \cdot I_{ ext{peak}}}{\pi}$$

$$\eta = rac{P_{
m DC}}{P_{
m AC}} pprox 81.0\%$$

Three-phase rectifiers, especially three-phase full-wave rectifiers, have much greater conversion ratios because the ripple is intrinsically smaller.

For a three-phase half-wave rectifier,

$$P_{ ext{AC}} = 3 \cdot rac{V_{ ext{peak}}}{2} \cdot rac{I_{ ext{peak}}}{2}$$

$$P_{ ext{DC}} = rac{3 \cdot \sqrt{3} \cdot V_{ ext{peak}}}{2\pi} \cdot rac{3 \cdot \sqrt{3} \cdot I_{ ext{peak}}}{2\pi}$$

For a three-phase full-wave rectifier,

$$P_{ ext{AC}} = 3 \cdot rac{V_{ ext{peak}}}{\sqrt{2}} \cdot rac{I_{ ext{peak}}}{\sqrt{2}}$$

$$P_{ ext{DC}} = rac{3 \cdot \sqrt{3} \cdot V_{ ext{peak}}}{\pi} \cdot rac{3 \cdot \sqrt{3} \cdot I_{ ext{peak}}}{\pi}$$

Transformer utilization ratio

The transformer utilization factor (TUF) of a rectifier circuit is defined as the ratio of the DC power available at the input resistor to the AC rating of the output coil of a transformer. [7][8]

$$T.\,U.\,F = rac{P_{odc}}{ ext{VA rating of transformer}}$$

The VA rating of the transformer can be defined as: $VA = V_{\rm rms} \dot{I}_{\rm rms}$ (For secondary coil.)

Rectifier voltage drop

A real rectifier characteristically drops part of the input voltage (a <u>voltage drop</u>, for silicon devices, of typically 0.7 volts plus an equivalent resistance, in general non-linear)—and at high frequencies, distorts waveforms in other ways. Unlike an ideal rectifier, it dissipates some power.

An aspect of most rectification is a loss from the peak input voltage to the peak output voltage, caused by the built-in voltage drop across the diodes (around 0.7 V for ordinary silicon p—n junction diodes and 0.3 V for Schottky diodes). Half-wave rectification and full-wave rectification using a center-tapped secondary produces a peak voltage loss of one diode drop. Bridge rectification has a loss of two diode drops. This reduces output voltage, and limits the available output voltage if a very low alternating voltage must be rectified. As the diodes do not conduct below this voltage, the circuit only passes current through for a portion of each half-cycle, causing short segments of zero voltage (where instantaneous input voltage is below one or two diode drops) to appear between each "hump".


Peak loss is very important for low voltage rectifiers (for example, 12 V or less) but is insignificant in high-voltage applications such as HVDC power transmission systems.

Harmonic distortion

Non-linear loads like rectifiers produce current harmonics of the source frequency on the AC side and voltage harmonics of the source frequency on the DC side, due to switching behavior.

Rectifier output smoothing

While half-wave and full-wave rectification deliver unidirectional current, neither produces a constant voltage. There is a large AC ripple voltage component at the source frequency for a half-wave rectifier, and twice the source frequency for a full-wave rectifier. Ripple voltage is usually specified peak-to-peak. Producing steady DC from a rectified AC supply requires a smoothing circuit or filter. In its simplest form this can be just a capacitor (also called a filter, reservoir, or smoothing capacitor), choke, resistor, Zener diode and resistor, or voltage regulator placed at the output of the rectifier. In practice, most smoothing filters utilize multiple components to efficiently reduce ripple voltage to a level tolerable by the circuit.

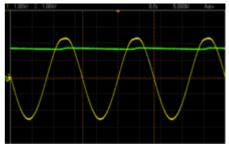


The AC input (yellow) and DC output (green) of a half-wave rectifier with a smoothing capacitor. Note the ripple in the DC signal.


The filter capacitor releases its stored energy during the part of the

AC cycle when the AC source does not supply any power, that is, when the AC source changes its direction of flow of current.

Performance with low impedance source

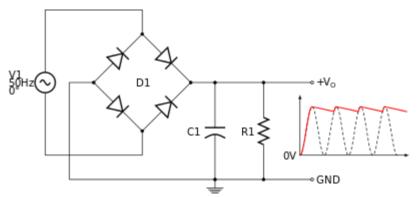

Full-wave diode-bridge rectifier with parallel RC shunt filter

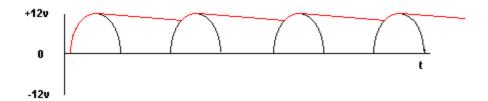

The above diagram shows reservoir performance from a near zero <u>impedance</u> source, such as a mains supply. As the rectifier <u>voltage</u> increases, it charges the capacitor and also supplies <u>current</u> to the load. At the end of the quarter cycle, the capacitor is charged to its peak value Vp of the rectifier voltage. Following this, the rectifier voltage starts to decrease to its minimum value Vmin as it enters the next quarter cycle. This initiates the discharge of the capacitor through the load.

The size of the capacitor C is determined by the amount of ripple r that can be tolerated, where r=(Vp-Vmin)/Vp.^[9]

These circuits are very frequently fed from <u>transformers</u>, and have significant <u>resistance</u>. Transformer resistance modifies the reservoir capacitor waveform, changes the peak voltage, and introduces regulation issues.

Capacitor input filter

For a given load, sizing of a smoothing capacitor is a <u>tradeoff</u> between reducing ripple voltage and increasing ripple current. The peak current is set by the rate of rise of the supply voltage on the rising edge of the incoming sine-wave, reduced by the resistance of the transformer windings. High ripple currents increase I²R losses (in the form of heat) in the capacitor, rectifier and transformer windings, and may exceed the ampacity of the components or VA rating of the transformer. Vacuum tube rectifiers specify the maximum capacitance of the input capacitor, and SS diode rectifiers also have current limitations. Capacitors for this application need low <u>ESR</u>, or ripple current may overheat them. To limit ripple voltage to a specified value the required capacitor size is proportional to the load current and inversely proportional to the supply frequency and the number of output peaks of the rectifier per input cycle. Full-wave rectified output requires a smaller capacitor because it is double the frequency of half-wave rectified output. To reduce ripple to a satisfactory limit with just a single capacitor would often require a capacitor that's infeasibly large.

Choke input filter

It is also possible to put the rectified waveform into a <u>choke-input filter</u>. The advantage of this circuit is that the current waveform is smoother: current is drawn over the entire cycle, instead of being drawn in pulses at the peaks of AC voltage each half-cycle as in a capacitor input filter. The disadvantage is that the voltage output is much lower – the average of an AC half-cycle rather than the peak; this is about 90% of the RMS voltage versus $\sqrt{2}$ times the RMS voltage (unloaded) for a capacitor input filter. Offsetting this is superior voltage regulation and higher available current, which reduce peak voltage and ripple current demands on power supply components. Inductors require <u>cores</u> of iron or other magnetic materials, and add weight and size. Their use in power supplies for electronic equipment has therefore dwindled in favour of semiconductor circuits such as voltage regulators. [10]

Resistor as input filter

In cases where ripple voltage is insignificant, like battery chargers, the input filter may be a single series resistor to adjust the output voltage to that required by the circuit. A resistor reduces both output voltage and ripple voltage proportionately. A disadvantage of a resistor input filter is that it consumes power in the form of waste heat that is not available to the load, so it is employed only in low current circuits.

Higher order and cascade filters

To further reduce ripple, the initial filter element may be followed by additional alternating series and shunt filter components, or by a voltage regulator. Series filter components may be resistors or chokes; shunt elements may be resistors or capacitors. The filter may raise DC voltage as well as reduce ripple. Filters are often constructed from pairs of series/shunt components called RC (series resistor, shunt capacitor) or LC (series choke, shunt capacitor) sections. Two common filter geometries are known as Pi (capacitor, choke, capacitor) and T (choke, capacitor, choke) filters. Sometimes the series elements are resistors - because resistors are smaller and cheaper - when a lower DC output is desirable or permissible. Another kind of special filter geometry is a series resonant choke or tuned choke filter. Unlike the other filter geometries which are low-pass filters, a resonant choke filter is a band-stop filter: it is a parallel combination of choke and capacitor which resonates at the frequency of the ripple voltage, presenting a very high impedance to the ripple. It may be followed by a shunt capacitor to complete the filter.

Voltage regulators

A more usual alternative to additional filter components, if the DC load requires very low ripple voltage, is to follow the input filter with a voltage regulator. A voltage regulator operates on a different principle than a filter, which is essentially a voltage divider that shunts voltage at the ripple frequency away from the load. Rather, a regulator increases or decreases current supplied to the load in order to maintain a constant output voltage.


A simple passive shunt voltage regulator may consist of a series resistor to drop source voltage to the required level and a Zener diode shunt with reverse voltage equal to the set voltage. When input voltage rises, the diode dumps current to maintain the set output voltage. This kind of regulator is usually employed only in low voltage, low current circuits because Zener diodes have both voltage and current limitations. It is also very inefficient, because it dumps excess current, which is not available to the load.

A more efficient alternative to a shunt voltage regulator is an <u>active voltage regulator</u> circuit. An active regulator employs reactive components to store and discharge energy, so that most or all current supplied by the rectifier is passed to the load. It may also use negative and positive feedback in conjunction with at least one voltage amplifying component like a transistor to maintain output voltage when source voltage drops. The input filter must prevent the troughs of the ripple dropping below the minimum voltage required by the regulator to produce the required output voltage. The regulator serves both to significantly reduce the ripple and to deal with variations in supply and load characteristics.

Applications

The primary application of rectifiers is to derive DC power from an AC supply (AC to DC converter). Rectifiers are used inside the power supplies of virtually all electronic equipment. AC/DC power supplies may be broadly divided into linear <u>power supplies</u> and <u>switched-mode power supplies</u>. In such power supplies, the rectifier will be in series following the transformer, and be followed by a smoothing filter and possibly a voltage regulator.

Converting DC power from one voltage to another is much more complicated. One method of DC-to-DC conversion first converts power to AC (using a device called an <u>inverter</u>), then uses a transformer to change the voltage, and finally rectifies power back to DC. A frequency of typically several tens of kilohertz is used, as this requires much smaller inductance than at lower frequencies and obviates the use of heavy, bulky, and expensive iron-cored units. Another method of converting DC voltages uses a <u>charge pump</u>, using rapid switching to change the connections of capacitors; this technique is generally limited to supplies up to a couple of watts, owing to the size of capacitors required.

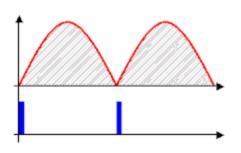

Output voltage of a full-wave rectifier with controlled thyristors

Rectifiers are also used for <u>detection</u> of <u>amplitude modulated</u> radio signals. The signal may be amplified before detection. If not, a very low voltage drop diode or a diode biased with a fixed voltage must be used. When using a rectifier for demodulation the capacitor and load resistance must be carefully matched: too low a capacitance makes the high frequency carrier pass to the output, and too high makes the capacitor just charge and stay charged.

Rectifiers supply polarised voltage for <u>welding</u>. In such circuits control of the output current is required; this is sometimes achieved by replacing some of the diodes in a <u>bridge rectifier</u> with <u>thyristors</u>, effectively diodes whose voltage output can be regulated by

switching on and off with phase fired controllers.

Thyristors are used in various classes of <u>railway rolling stock</u> systems so that fine control of the traction motors can be achieved. <u>Gate turn-off thyristors</u> are used to produce alternating current from a DC supply, for example on the Eurostar Trains to power the three-phase traction motors.^[11]

Rectification technologies

Electromechanical

Before about 1905 when tube type rectifiers were developed, power conversion devices were purely electromechanical in design. Mechanical rectification systems used some form of rotation or resonant vibration (e.g. <u>vibrators</u>) driven by electromagnets, which operated a switch or commutator to reverse the current.


These mechanical rectifiers were noisy and had high maintenance requirements. The moving parts had friction, which required lubrication and replacement due to wear. Opening mechanical contacts under load resulted in electrical arcs and sparks that heated and eroded the contacts. They also were not able to handle AC frequencies above several thousand cycles per second.

Synchronous rectifier

To convert alternating into direct current in <u>electric locomotives</u>, a synchronous rectifier may be used. It consists of a synchronous motor driving a set of heavy-duty electrical contacts. The motor spins in time with the AC frequency and periodically reverses the connections to the load at an instant when the sinusoidal current goes through a zero-crossing. The contacts do not have to *switch* a large current, but they must be able to *carry* a large current to supply the locomotive's DC <u>traction motors</u>.

Vibrating rectifier

These consisted of a resonant <u>reed</u>, vibrated by an alternating magnetic field created by an AC <u>electromagnet</u>, with contacts that reversed the direction of the current on the negative half cycles. They were used in low power devices, such as <u>battery chargers</u>, to rectify the low voltage produced by a step-down transformer. Another use was in battery power supplies for portable vacuum tube radios, to provide the high DC voltage for the tubes. These operated as a mechanical version of modern solid state switching <u>inverters</u>, with a transformer to step the battery voltage up, and a set of vibrator contacts on the transformer core, operated by its magnetic field, to repeatedly break the DC battery current to create a pulsing AC to power the transformer. Then a second set of <u>rectifier contacts</u> on the <u>vibrator</u> rectified the high AC voltage from the transformer secondary to DC.

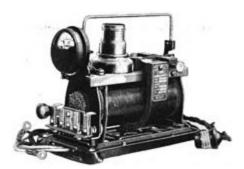

A vibrator battery charger from 1922. It produced 6A DC at 6V to charge automobile batteries.

Motor-generator set

A *motor-generator set*, or the similar *rotary converter*, is not strictly a rectifier as it does not actually *rectify* current, but rather *generates* DC from an AC source. In an "M-G set", the shaft of an AC motor is mechanically coupled to that of a DC generator. The DC generator produces multiphase alternating currents in its <u>armature</u> windings, which a <u>commutator</u> on the armature shaft converts into a direct current output; or a <u>homopolar generator</u> produces a direct current without the need for a commutator. M-G sets are useful for producing DC for railway traction motors, industrial motors and



A small motor-generator set

other high-current applications, and were common in many high-power D.C. uses (for example, carbon-arc lamp projectors for outdoor theaters) before high-power semiconductors became widely available.

Electrolytic

The <u>electrolytic</u> rectifier^[12] was a device from the early twentieth century that is no longer used. A homemade version is illustrated in the 1913 book *The Boy Mechanic* ^[13] but it would be suitable for use only at very low voltages because of the low <u>breakdown voltage</u> and the risk of <u>electric shock</u>. A more complex device of this kind was patented by G. W. Carpenter in 1928 (US Patent 1671970).^[14]

When two different metals are suspended in an electrolyte solution, direct current flowing one way through the solution sees less resistance than in the other direction. Electrolytic rectifiers most commonly used an aluminum anode and a lead or steel cathode, suspended in a solution of tri-ammonium ortho-phosphate.

The rectification action is due to a thin coating of aluminum hydroxide on the aluminum electrode, formed by first applying a strong current to the cell to build up the coating. The rectification process is temperature-sensitive, and for best efficiency should not operate above 86 °F (30 °C). There is also a <u>breakdown voltage</u> where the coating is penetrated and the cell is short-circuited. Electrochemical methods are often more fragile than mechanical methods, and can be sensitive to usage variations, which can drastically change or completely disrupt the rectification processes.

Similar electrolytic devices were used as lightning arresters around the same era by suspending many aluminium cones in a tank of tri-ammonium ortho-phosphate solution. Unlike the rectifier above, only aluminium electrodes were used, and used on A.C., there was no polarization and thus no rectifier action, but the chemistry was similar.^[15]

The modern <u>electrolytic capacitor</u>, an essential component of most rectifier circuit configurations was also developed from the electrolytic rectifier.

Plasma type


The development of <u>vacuum tube</u> technology in the early 20th century resulted in the invention of various tube-type rectifiers, which largely replaced the noisy, inefficient mechanical rectifiers.

Mercury-arc

A rectifier used in high-voltage direct current (HVDC) power transmission systems and industrial processing between about 1909 to 1975 is a mercury-arc rectifier or mercury-arc valve. The device is enclosed in a bulbous glass vessel or large metal tub. One electrode, the cathode, is submerged in a pool of liquid mercury at the bottom of the vessel and one or more high purity graphite electrodes, called anodes, are suspended above the pool. There may be several auxiliary electrodes to aid in starting and maintaining the arc. When an electric arc is established between the cathode pool and suspended anodes, a stream of electrons flows from the cathode to the anodes through the ionized mercury, but not the other way (in principle, this is a higher-power counterpart to flame rectification, which uses the same one-way current transmission properties of the plasma naturally present in a flame).



Early 3-phase industrial mercury vapor rectifier tube

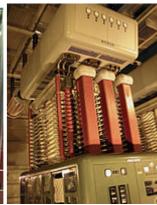

150 kV mercury-arc valve at Manitoba Hydro power station, Radisson, Canada converted AC hydropower to DC for transmission to distant cities.

These devices can be used at power levels of hundreds of kilowatts, and may be built to handle one to six phases of AC current. Mercury-arc rectifiers have been replaced by silicon semiconductor rectifiers and high-power thyristor circuits in the mid 1970s. The most powerful mercury-arc rectifiers ever built were installed in the Manitoba Hydro Nelson River Bipole HVDC project, with a combined rating of more than 1 GW and 450 kV. [16][17]

Argon gas electron tube

The General Electric Tungar rectifier was a mercury vapor (ex.:5B24) or argon (ex.:328) gas-filled electron tube device with a tungsten filament cathode and a carbon button anode. It operated similarly to the thermionic vacuum tube diode, but the gas in the tube ionized during forward conduction, giving it a much lower forward voltage drop so it could rectify lower voltages. It was used for battery chargers and similar applications from the 1920s until lower-cost metal rectifiers, and later semiconductor diodes, supplanted it. These were made up to a few hundred volts and a few amperes rating, and in some sizes strongly resembled an incandescent lamp with an additional electrode.

The 0Z4 was a gas-filled rectifier tube commonly used in <u>vacuum tube</u> car radios in the 1940s and 1950s. It was a conventional full-wave rectifier tube with two anodes and one cathode, but was unique in that it had no filament (thus the "0" in its type number). The electrodes were shaped such that the



Tungar bulbs from 1917, 2 ampere (*left*) and 6 ampere

reverse breakdown voltage was much higher than the forward breakdown voltage. Once the breakdown voltage was exceeded, the 0Z4 switched to a low-resistance state with a forward voltage drop of about 24 V.

Diode vacuum tube (valve)

The thermionic vacuum tube diode, originally called the Fleming valve, was invented by John Ambrose Fleming in 1904 as a detector for radio waves in radio receivers, and evolved into a general rectifier. It consisted of an evacuated glass bulb with a filament heated by a separate current, and a metal plate anode. The filament emitted electrons by thermionic emission (the Edison effect), discovered by Thomas Edison in 1884, and a positive voltage on the plate caused a current of electrons through the tube from filament to plate. Since only the filament produced electrons, the tube would



Vacuum tube diodes

only conduct current in one direction, allowing the tube to rectify an alternating current.

Thermionic diode rectifiers were widely used in power supplies in vacuum tube consumer electronic products, such as phonographs, radios, and televisions, for example the <u>All American Five</u> radio receiver, to provide the high DC plate voltage needed by other vacuum tubes. "Full-wave" versions with two separate plates were popular because they could be used with a center-tapped transformer to make a full-wave rectifier. Vacuum tube rectifiers were made for very high voltages, such as the high voltage power supply for the <u>cathode ray tube</u> of <u>television</u> receivers, and the kenotron used for power supply in <u>X-ray</u> equipment. However, compared to modern semiconductor diodes, vacuum tube rectifiers have high internal resistance due to <u>space charge</u> and therefore high voltage drops, causing high power dissipation and low efficiency. They are rarely able to handle currents exceeding 250 mA owing to the limits of plate power dissipation, and cannot be used for low voltage applications, such as battery chargers. Another limitation of the vacuum tube rectifier is that the heater power supply often requires special arrangements to insulate it from the high voltages of the rectifier circuit.

Solid state

Crystal detector

The crystal detector was the earliest type of semiconductor diode. Invented by Jagadish Chandra Bose and developed by G. W. Pickard starting in 1902, it was a significant improvement over earlier detectors such as the coherer. The crystal detector was widely used prior to vacuum tubes becoming available. One popular type of crystal detector, often called a *cat's whisker detector*, consists of a crystal of some <u>semiconducting mineral</u>, usually <u>galena</u> (lead sulfide), with a light springy wire touching its surface. Its fragility and limited current capability made it unsuitable for power supply applications. In the 1930s, researchers <u>miniaturized and improved</u> the crystal detector for use at microwave frequencies.



Galena cat's whisker detector

Selenium and copper oxide rectifiers

Once common until replaced by more compact and less costly silicon solid-state rectifiers in the 1970s, these units used stacks of oxide-coated metal plates and took advantage of the <u>semiconductor</u> properties of <u>selenium</u> or copper oxide. While <u>selenium</u> rectifiers were lighter in weight and used less power than

comparable vacuum tube rectifiers, they had the disadvantage of finite life expectancy, increasing resistance with age, and were only suitable to use at low frequencies. Both selenium and copper oxide rectifiers have somewhat better tolerance of momentary voltage transients than silicon rectifiers.

Typically these rectifiers were made up of stacks of metal plates or washers, held together by a central bolt, with the number of stacks determined by voltage; each cell was rated for about 20 V. An automotive battery charger rectifier might have only one cell: the high-voltage power supply for a vacuum tube might have dozens of stacked plates. Current density in an air-cooled selenium stack was about 600 mA per square inch of active area (about 90 mA per square centimeter).



Selenium rectifier

Silicon and germanium diodes

<u>Silicon</u> diodes are the most widely used rectifiers for lower voltages and powers, and have largely replaced other rectifiers. Due to their substantially lower forward voltage (0.3V versus 0.7V for silicon diodes) germanium diodes have an inherent advantage over silicon diodes in low voltage circuits.



A variety of silicon diodes of different current ratings. At left is a bridge rectifier. On the 3 center diodes, a painted band identifies the cathode terminal

High power: thyristors (SCRs) and newer silicon-based voltage sourced converters

In high-power applications, from 1975 to 2000, most mercury valve arc-rectifiers were replaced by stacks of very high power <u>thyristors</u>, silicon devices with two extra layers of semiconductor, in comparison to a simple diode.

In medium-power transmission applications, even more complex and sophisticated <u>voltage</u> sourced <u>converter</u> (VSC) silicon semiconductor rectifier systems, such as <u>insulated gate bipolar transistors</u> (IGBT) and <u>gate turn-off thyristors</u> (GTO), have made smaller high voltage DC power transmission systems economical. All of these devices function as rectifiers.

As of 2009 it was expected that these high-power silicon "self-commutating switches", in particular IGBTs and a variant thyristor (related to the GTO) called the <u>integrated gate-commutated thyristor</u> (IGCT), would be scaled-up in power rating to the point that they would eventually replace simple thyristor-based AC rectification systems for the highest power-transmission DC applications.^[19]

Active rectifier

Active rectification is a technique for improving the efficiency of rectification by replacing <u>diodes</u> with actively controlled switches such as <u>transistors</u>, usually <u>power MOSFETs</u> or <u>power BJTs</u>.^[20] Whereas normal semiconductor diodes have a roughly fixed voltage drop of around 0.5-1 volts, active rectifiers

behave as resistances, and can have arbitrarily low voltage drop.

Historically, vibrator driven switches or motor-driven <u>commutators</u> have also been used for <u>mechanical rectifiers</u> and synchronous rectification. [21]

Active rectification has many applications. It is frequently used for arrays of photovoltaic panels to avoid reverse current flow that can cause overheating with partial shading while giving minimum power loss.

Current research

A major area of research is to develop higher frequency rectifiers, that can rectify into terahertz and light frequencies. These devices are used in optical heterodyne detection, which has myriad applications in optical fiber communication and atomic clocks. Another prospective application for such devices is to directly rectify light waves picked up by tiny antennas, called nantennas, to produce DC electric power. [22] It is thought that arrays of antennas could be a more efficient means of producing solar power than solar cells.


A related area of research is to develop smaller rectifiers, because a smaller device has a higher cutoff frequency. Research projects are attempting to develop a <u>unimolecular rectifier</u>, a single <u>organic molecule</u> that would function as a rectifier.

See also


- AC adapter
- Karl Ferdinand Braun (point-contact rectifier, 1874)
- Precision rectifier
- Rectiformer
- Vienna rectifier

References

- 1. Morris, Peter Robin (1990). <u>A History of the World</u> Semiconductor Industry (https://books.google.com/books?id=rslXJmYPjGIC&pg=PA18). p. 18. ISBN 978-0-86341-227-1.
- 2. Lander, Cyril W. (1993). "2. Rectifying Circuits". *Power electronics* (3rd ed.). London: McGraw-Hill. <u>ISBN</u> <u>978-</u>0-07-707714-3.
- 3. Williams, B. W. (1992). "Chapter 11". *Power electronics: devices, drivers and applications* (2nd ed.). Basingstoke: Macmillan. <u>ISBN</u> <u>978-0-333-57351-8</u>.

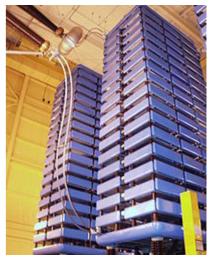

Two of three high-power thyristor valve stacks used for long distance transmission of power from Manitoba Hydro dams. Compare with mercury-arc system from the same dam-site, above.

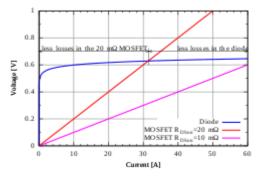

Voltage drop across a diode and a MOSFET. The low on-resistance property of a MOSFET reduces ohmic losses compared to the diode rectifier (below 32 A in this case), which exhibits a significant voltage drop even at very low current levels. Paralleling two MOSFETs (pink curve) reduces the losses further, whereas paralleling several diodes won't significantly reduce the forward-voltage drop.

- 4. Hendrik Rissik (1941). Mercury-arc current convertors [sic]: an introduction to the theory and practice of vapour-arc discharge devices and to the study of rectification phenomena (https://books.google.com/books?id=S4MhAAAAMAAJ). Sir I. Pitman & sons, ltd. Retrieved 8 January 2013.
- Kimbark, Edward Wilson (1971). Direct current transmission (4. printing. ed.). New York: Wiley-Interscience. p. 508. ISBN 978-0-471-47580-4.
- 6. Wendy Middleton, Mac E. Van Valkenburg (eds), Reference Data for Engineers: Radio, Electronics, Computer, and Communications, p. 14. 13, Newnes, 2002 ISBN 0-7506-7291-9.
- 7. Rashid, Muhammad (13 January 2011). <u>POWER</u> <u>ELECTRONICS HANDBOOK</u> (https://books.google.com/books?id=eS1z95mzi28C&pg=PA153). Elsevier. pp. 153–. <u>ISBN</u> 9780123820372. Retrieved 29 November 2014.
- 8. A.P.Godse, U.A.Bakshi (1 January 2008). *Elements Of Electronics Engineering* (https://books.google.com/books?id=1uP2oVwXEZAC&pg=SA8-PA16). Technical Publications. pp. 8–. <u>ISBN</u> 9788184312928. Retrieved 29 November 2014.
- 9. Cartwright, Kenneth; Kaminsky, Edit (2017). "New equations for capacitance vs ripple in power supplies" (http://www.lajpe.org/mar17/1301_Kenneth_2017.pdf) (PDF). Latin American Journal of Physics Education. 11 (1): 1301–01 1301–11.
- 10. H. P. Westman et al., (ed), *Reference Data for Radio Engineers Fifth Edition*, 1968, Howard W. Sams pp. 12-14, 12-15, 12-16
- 11. Mansell, A.D.; Shen, J. (1 January 1994). "Pulse converters in traction applications". *Power Engineering Journal*. **8** (4): 183. doi:10.1049/pe:19940407 (https://doi.org/10.1049%2Fpe%3A19940407).
- 12. Hawkins, Nehemiah (1914). "54. Rectifiers" (https://archive.org/details/hawkinselectric02hawkgoog). Hawkins Electrical Guide: Principles of electricity, magnetism, induction, experiments, dynamo. New York: T. Audel. Retrieved 8 January 2013.
- 13. "How To Make An Electrolytic Rectifier" (http://chestofbooks.com/crafts/popular-mechanics/The-Boy-Mechanic-700-Things-for-Boys-to-Do/How-To-Make-An-Electrolytic-Rectifier.html). Chestofbooks.com. Retrieved 15 March 2012.
- 14. US patent 1671970 (https://worldwide.espacenet.com/ textdoc?DB=EPODOC&IDX=US1671970), Glenn W. Carpenter, "Liquid Rectifier", issued 1928-06-05
- 15. American Technical Society (1920). *Cyclopedia of applied electricity* (https://books.google.com/books?id =PcN-AAAAMAAJ). **2**. American technical society. p. 487. Retrieved 8 January 2013.

- 16. Pictures of a mercury-arc rectifier in operation can be seen here: Belsize Park deep shelter rectifier 1 (http://www.subbrit.org.uk/sb-sites/sites/b/belsize_park_deep_shelter/index14.shtml), Belsize Park deep shelter rectifier 2 (http://www.subbrit.org.uk/sb-sites/sites/b/belsize_park_deep_shelter/index13.shtml)
- 17. Sood, Vijay K (31 May 2004). HVDC and FACTS Controllers: Applications Of Static Converters In Power Systems (https://www.amazon.com/gp/reader/1 402078900/ref=sib fs top?ie=UTF8&p=S00T&checkS um=kluBlcbl0cpOJz1UiVfSKdlgFhPcDOXO98WG3Sa bLpA%3D#reader-link). Springer-Verlag. p. 1. ISBN 978-1-4020-7890-3. "The first 25 years of HVDC transmission were sustained by converters having mercury arc valves till the mid-1970s. The next 25 vears till the vear 2000 were sustained by linecommutated converters using thyristor valves. It is predicted that the next 25 years will be dominated by force-commutated converters [4]. Initially, this new force-commutated era has commenced with Capacitor Commutated Converters (CCC) eventually to be replaced by self-commutated converters due to the economic availability of high-power switching devices with their superior characteristics."
- 18. H. P. Westman et al., (ed), <u>Reference Data for Radio Engineers</u>, <u>Fifth Edition (http://lccn.loc.gov/43014665)</u>, 1968, Howard W. Sams and Co., no ISBN, Library of Congress Card No. 43-14665 chapter 13
- 19. Arrillaga, Jos; Liu, Yonghe H; Watson, Neville R; Murray, Nicholas J (12 January 2010). Self-Commutating Converters for High Power Applications. John Wiley & Sons. ISBN 978-0-470-68212-8.
- 20. Ali Emadi (2009). Integrated power electronic converters and digital control (https://books.google.com/books?id=phX659AzaxUC&pg=PA145). CRC Press. pp. 145–146. ISBN 978-1-4398-0069-0.
- 21. Maurice Agnus Oudin (1907). <u>Standard polyphase</u> apparatus and systems (https://archive.org/details/standardpolypha00oudigoog) (5th ed.). Van Nostrand. p. 236 (https://archive.org/details/standardpolypha00oudigoog/page/n248). "synchronous rectifier commutator."
- 22. Idaho National Laboratory (2007). "Harvesting the sun's energy with antennas" (https://inlportal.inl.gov/portal/server.pt?open=514&objlD=1269&mode=2&featurestory=DA 10104). Retrieved 3 October 2008.

Retrieved from "https://en.wikipedia.org/w/index.php?title=Rectifier&oldid=959388098"

Text is available under the Creative Commons Attribution-ShareAlike License; additional terms may apply. By using this site, you agree to the <u>Terms of Use and Privacy Policy</u>. Wikipedia® is a registered trademark of the <u>Wikimedia Foundation</u>, Inc., a non-profit organization.