


ZF G8P75HZ TCM PINOUT

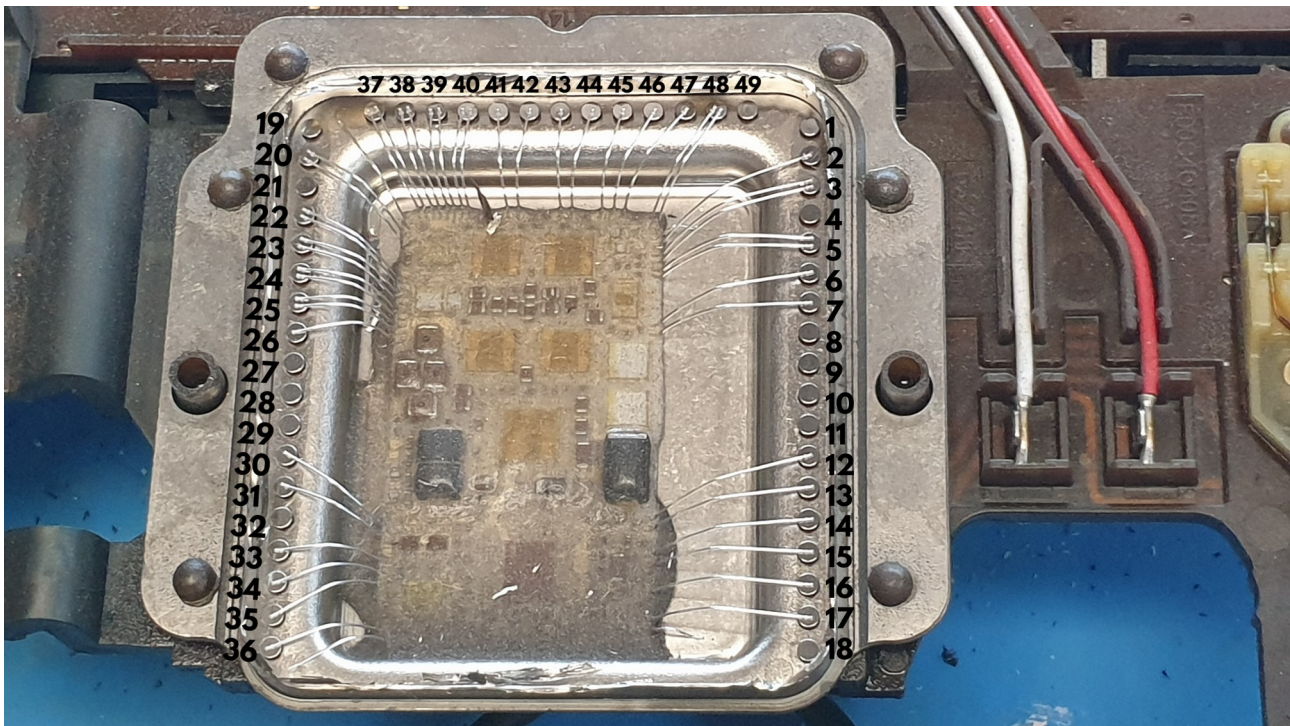

Pin	Function
1	
2	Linbus For aux 12v oil pump
3	
4	
5	Park Hold Solenoid
6	Thermistor
7	Thermistor
8	
9	
10	
11	

12	Park Lock Sense Ground
13	Park Pos 1
14	Park Pos 2
15	Speed sensor red wire (+5v)?
16	Input speed sensor
17	Output speed sensor
18	
19	Ext Conn Pin 11
20	Ext Conn Pin 15
21	Ext Conn Pin 16
22	Ext Conn Pin 13
23	Ext Conn Pin 13 (OEM T30 +12V)
24	Ext Conn Pin 14 (OEM T31 GND)
25	Ext Conn Pin 14
26	Ext Conn Pin 9 (OEM T15 Wakeup)
27	Ext Conn Pin 7
28	Ext Conn Pin 12
29	Ext Conn Pin 2
30	Ext Conn Pin 6 (OEM PT CAN 1 LOW)
31	Ext Conn Pin 5 (OEM PT CAN 1 HIGH)
32	Ext Conn Pin 1
33	Ext Conn Pin 4 (OEM PT CAN 2 HIGH)

34	Ext Conn Pin 3 (OEM PT CAN 2 LOW)
35	Ext Conn Pin 8
36	Ext Conn Pin 10
37	+12v Supply to solenoids
38	+12v Supply to solenoids
39	+12v Supply to solenoids
40	+12v Supply to solenoids
41	A Clutch Solenoid
42	D Clutch Solenoid
43	B Clutch Solenoid
44	E Clutch Solenoid
45	C Clutch Solenoid
46	TCC Solenoid
47	Line Pressure Solenoid
48	Park Release Solenoid
49	