
shade I matic

Blackout Instructions

4" Skyline Pocket Installation - Inside Mount

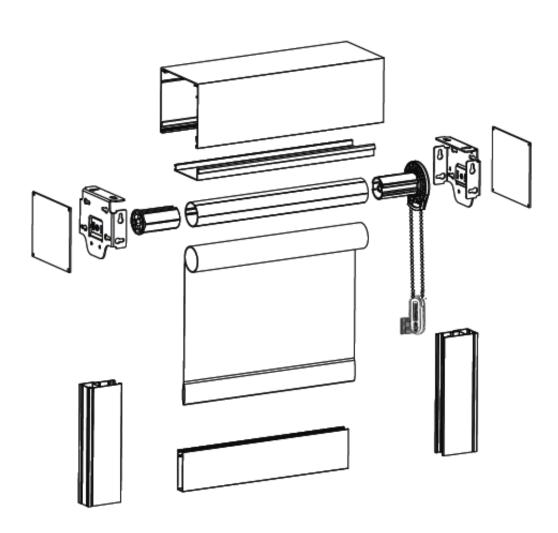

| Components Needed | page 3 |
|---------------------------------------|---------|
| Tools Needed | |
| System Diagram | page 5 |
| Instructions | |
| Step 1: Install Brackets & End Plates | Page 6 |
| Step 2: Mount Pocket | Page 6 |
| Step 3: Mount Back Side Channels | Page 7 |
| Step 4: Install Shade | Page 7 |
| Step 5:Install Front Side Channel | Page 8 |
| Step 6: Install Bottom Channel | Page 9 |
| Step 7: Install Bottom Closure | Page 9 |
| Step 8: Install Tension Device | |
| Installed Shade | Page 10 |
| Child Safety | |
| Warranty | Page 12 |

Blackout Instructions

4" Skyline Pocket Inside Mount Installation

| Quantity | Description | Image |
|----------|---|-------|
| 1 | 4" Roller shade assembled to tube with clutch and idler inserted. | |
| 2 | 4" Skyline Fascia Brackets | |
| 2 | End Plates | |
| 1 | 4" Pocket | |
| 1 | Bottom Closure | |
| 2 | Front & Back Side Channels | |
| 1 | Bottom Channel | |


Blackout Instructions

4" Skyline Pocket Installation Instructions

Tools Needed

| Screwdriver/Power Drill |
|-------------------------|
| 1/16" Metal Drill Bit |
| Screws |
| Hammer/Mallet |
| Measuring Tape |
| Level |
| Ladder |
| Center Punch |
| Eye Protection |
| Gloves |

System Diagram

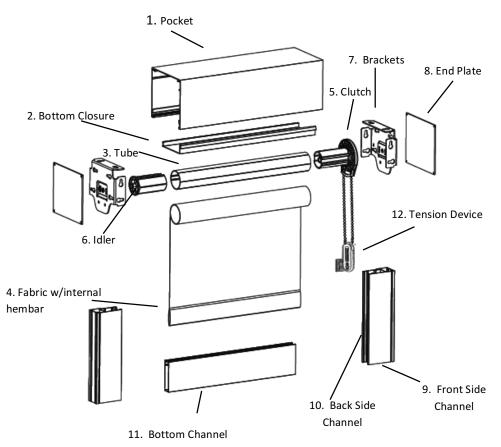

| 1 | 4" Pocket |
|----|-----------------------------|
| 2 | Bottom Closure |
| 3 | Tube |
| 4 | Fabric with internal Hembar |
| 5 | Clutch |
| 6 | Idler |
| 7 | 4" Skyline Fascia Brackets |
| 8 | 4" End Plates |
| 9 | Front Side Channel |
| 10 | Back Side Channel |
| 11 | Bottom Channel |
| 12 | Tension Device |


Blackout Instructions

4" Skyline Pocket Installation Inside Mount

Step 1: Install Brackets & End Plates into Pocket (if the system did not come assembled to installation site. Can be done prior to shipping)

- 1a. Insert Bracket into pocket
- 1b. Attach end plate onto the pocket with appropriate screws



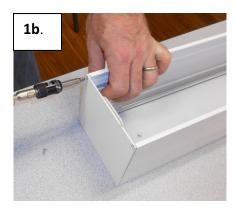

Step 2: Mount Pocket


2a. Mark and pre-drill mounting screw holes, then using appropriate screws, install pocket into top or side of window frame.



Step 3: Mount Back Side Channels (follow steps for right and left back side channels)

- 3a. Mark mounting screw hole locations with a center punch.
- 3b. Pre-drill holes in the side of the side channel
- 3c. Align the back channel flush with the back of the pocket and mount with the correct mounting screws



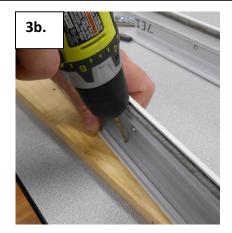



Step 4: Install Shade

- 4a. Insert Idler first by pushing in the spring loaded pin end into the hole in the center of the bracket.
- 4b. Insert Clutch side by engaging the hooks on the core of the clutch into the holes in the bracket.






Step 5: Install Front Side Channel

5a. Snap front side channel by engaging lip of the channel into the groove on the back side channel. Snap front side channel into place



Engage lip into groove

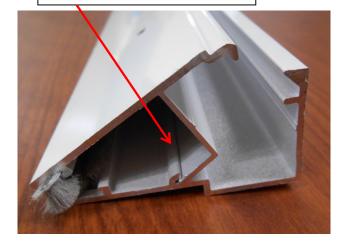

Snap into place



Step 6: Install Bottom Channel

- 6a. Place left side of bottom channel between the front and back side channels
- 6b. Slide the right side down in between the front and back side channels until the bottom closure is sitting on the window sill
- 6c. Mount bottom channel to window sill using correct mounting screws.



For easier installation, slide light blocking brush up and out of the way while installing the bottom channel.






Step 7: Install Bottom Closure (outside mount shown, instruction is the same for inside mount)
7a. Insert bottom closure into pocket on an angle (as shown).

7b. Once it is aligned in shade, allow front of bottom closure to drop in place







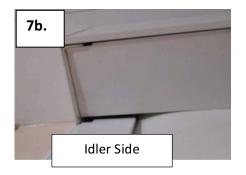



Step 8: Install Tension Device



Installed Shade



SAFETY INFORMATION



Young children can STRANGLE in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and STRANGLE.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords. Children can climb furniture to get to cords.

FOR RESIDENTS IN CANDA:



To get more information, call 1-866-662-0666 or visit www.canada.ca/en/health-canada/services/home-safety/blind-cord-safety.html.





WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Blinds

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.

C8-SOM-041