CHILD SAFETY

To avoid entanglement and strangulation. keep cords out of the reach of young children. Move cribs and furniture away from blind cords. To further reduce hazards.this shade was built with a cord connector which was designed to break apart when force is applied from the top.

No safety system is fail-safe. KEEP CORDS OUT OF REACH OF SMALL CHILDREN!


If your cord stop should happen to break apart, simply follow the instructions below to resassemble.

Cord

HONEYCOMB & PLEATED

Standard Shades **Top Down Bottom Up Day Night**

CORD STOP RE-ASSEMBLY

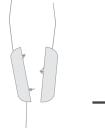

When the connector is open, each side has a cord coming in at the top, one side has a cord coming in from the bottom.




the side without the




Swing the top ends together and press in the middle to fully

PROTECT YOUR CHILDREN

Be aware that it is possible for children to strangle in window covering cords. To reduce the occurrence of accident, all cords must be kept out of the reach of children, including infants. Cord cleats are an effective way to implement this essential precaution.

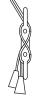

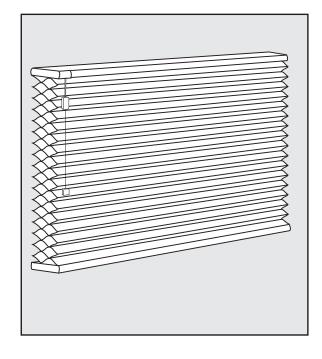

INSTALLATION INSTRUCTIONS

Shallow Mount



BASICS

A few simple tools are required:

Measuring tape

Power drill, drill bits


Hex head and/or Phillips driver bit

Pencil

Additional fasteners other than those sent with your shade may be required depending on the mounting surface. Wallboard and plaster require the use of anchors such as expansion or toggle bolts. Brick, tile or stone need special plugs and drill bits. Remember to always pre-drill holes in wood to avoid splitting.

Hex Head Screw

Extension Bracket (Optional)

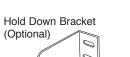



Our Honeycomb shades are constructed to be hung as either an inside mount or an outside mount. The installation bracket can be mounted inside the window opening, for an inside mount, or on the molding or wall above the window for an outside mount. The extension bracket and the hold down bracket are optional items requested at the time of ordering the shade. The extension bracket provides projection of the installation bracket in order to clear obstructions. The hold down bracket keeps the shade from swaying and is often used for installation on door windows.

BRACKET INSTALLATION


brackets for proper installation. End brackets should be located with centerlines 2 1/2" in from each end. Depending on the width of the shade, additional brackets may be necessary—evenly spaced between the two end brackets.

Shades are shipped with the required number of

Use this number For shade widths of: of brackets: Up to 40" 2 3 40" to 72" 72" to 84" 84" and up


Using the installation bracket as a template, measure andmark the center lines. When mounting brackets, make sure they are in line and level.

> On shades 84" to 96" wide it is recommended to use a second bracket located next to the end bracket at the Cord Lock.

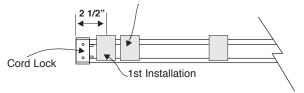


INSIDE MOUNT

The brackets are mounted flat against the top sill surface. Place the bugle head screw through the hole closest to the front of the bracket. To fully recess the shade requires a flat surface with a minimum depth of 1-3/4". Shallow mounting requires 1/2" minimum.

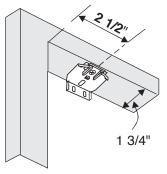

OUTSIDE MOUNT

The brackets are mounted with two bugle head screws through the back end of the bracket flat against the window molding or the wall above the window. The bracket requires a minimum surface 3/4" high.

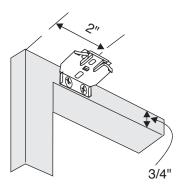


SIDE MOUNT BRACKET

- 1. Line up the bracket top with the desired height of the top of the headrail. 2. Mark holes for screws.Brackets must be level. Remove brackets and drill holes.
- 3. Insert bugle headscrews for kevhole slots
- only. Approximately 1/8" of the screw should be left protruding.
- 4. Pull the cord lock assembly partially out of the headrail and slide the bracket on as shown. Push the cord lock as assembly and bracket back all the way into the rail.
- 5. Remove the endcap from the opposite end of the headrail. Slide the remaining side mount bracket on the headrail. Replace the end cap before sliding the bracket all the way into the headrail.

- 6. Hook one bracket onto the screw in the window frame, using the keyhole slot. Bring the other end bracket over the screw at the other side of the frame. Slide down, flexing bracket inward until the screw engages in the keyhole slot.
- 7. Make sure both brackets are slipped down all the wayin the keyhole slot so that the screw is in the top portionof the keyhole slot. Install a screw in the bottom hole of each bracket. Tighten all screws.

OPTIONAL EXTENSION BRACKETS

Optional extension brackets are used to project the backof the shade up to 2 3/8" from the mounting surface. Attach the installation bracket to the extension bracket with the nut and bolt provided.

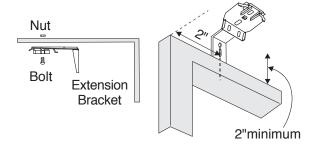


HANGING THE SHADE

Unwind the cord from the shade but keep the rubberband around the shade stack.

- 1. Hold the shade up near the brackets and insert the front clip of the bracket into the front groove of the rail.
- 2. Make sure the shade is centered in the window opening.
- 3. Push the rail back and up until the back clips of the bracket are inserted in the back groove of the rail. To remove shade, reverse procedure.



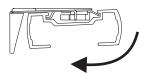


OPTIONAL HOLD DOWN BRACKET

Optional hold down brackets are mounted with the supplied screws. With the shade at its proper drop, place the pin of each hold down into the hole in each end cap and mark the screwholes.

Make sure the pins are level and aligned. Raise the shade, then screw the holddown bracket into the mounting surface.

TWO-ON-ONE HEADER SPLICER


For shades ordered as Two-on-One Headrail using the splicer piece, insert splicer in headrail of both shades as shown. Lock into place using 3/8" Tek Screws provided.

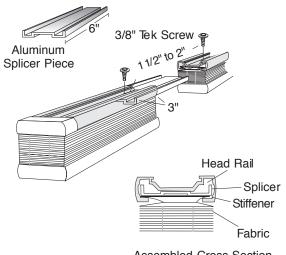

Assembled Cross Section

CORDLOCK OPERATION

To lower or release shade, pull the cord inward toward the center of the shade.To raise or lock shade, pull the cord straight down and outward toward the edge of the shade.

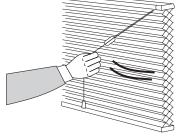

CLEANING & CARE

The shade fabric is easy to care for. Regular dusting with a feather duster or vacuum cleaner brush is recommended. Most stains can be blotted with a damp sponge and mild detergent. For problem stains, the shade can be removed from the Installation brackets and soaked in warm water. When damp, raise shade tightly to re-crisp pleats. Before using anything stronger than mild detergent and lukewarm water, test an unobtrusive corner of the shade. If you have any questions, call your dealer for advice.