
Polysatin™ Shutters

Measure for Specialty Shapes

- Measure the overall Width (A) and Centre Height (B)
- From centre point B, measure out every 9" and make a mark.
- At each mark, measure vertically to the edge of the opening.
- Please Note each vertical dimension on the order form or supply sketch and include all dimensions.
- Measure the dimension legs when necessary and include on the order form.

Remember: Always check to make sure there is enough louver clearance for inside and outside mount. For inside mount, order the smallest size, and for outside mount order to the largest size. If the radius is not consistent than a template is required.

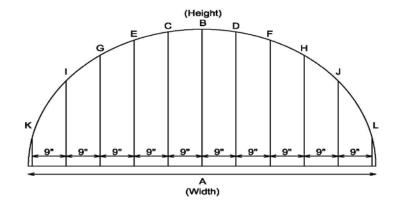

Four Steps To An Accurate Template

- Tape craft/butcher paper or heavy wrapping paper over the window opening, allowing plenty of overlap. Do not use paper that has ever been folded; a template can have no folds or creases.
- Draw an exact outline of the window opening. Do this by carefully tracing over the inside edge of the window frame.
- 3. Mark the shade dimensions on the template. Check that the template dimensions match your measurements of the actual window opening.
- 4. Identify the template and its orientation. Write the customer's name on the template, and mark the ROOM SIDE, TOP and FRONT OF TEMPLATE. Roll up the template and place it in a mailing tube to include with the order. Do not fold the template.

