
4" R-Series Fascia Installation — Inside Mount

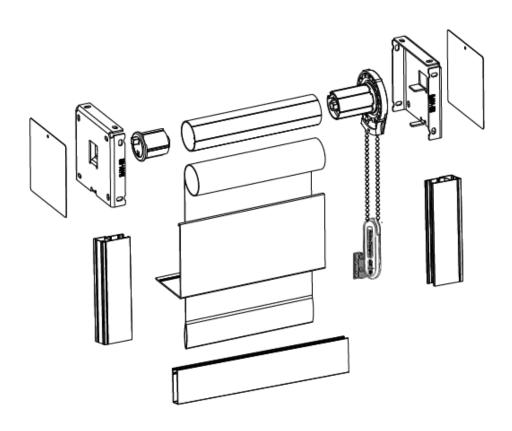

Components Needed	page 3
Tools Needed	page 4
System Diagram	page 5
Instructions	
Step 1: Install Brackets.	Page 6
Step 2: Mount Back Side Channels	Page 6
Step 3: Install Shade	Page 7
Step 4: Install Front Side Channels	Page 8
Step 5: Install Bottom Channel	Page 9
Step 6: Attach Fascia	Page 10
Step 7: Install Tension Device	Page 11
Completed Shade	Page 11


4" R-Series Fascia Installation Instructions

Quantity	Description	Image
1	Roller shade assembled to tube with clutch and idler inserted.	
2	4" R-Series Fascia Brackets	
2	End Plates	
1	4" Fascia	
2	Front & Back Side Channels	
1	Bottom Channel	

4" R-Series Fascia Installation Instructions

Tools Needed

Screwdriver/Power Drill
1/16" Metal Drill Bit
Screws
Hammer/Mallet
Measuring Tape
Level
Ladder
Chisel
Center Punch
Eye Protection
Gloves

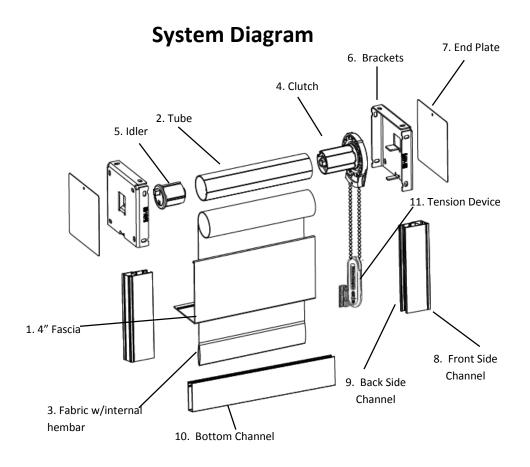

1	4" Fascia
2	Tube
3	Fabric with internal Hembar
4	Clutch
5	Idler
6	4" R-Series Fascia Brackets
7	4" Fascia End Plates
8	Front Side Channel
9	Back Side Channel
10	Bottom Channel
11	Tension Device

4" R-Series Fascia Installation Inside Mount

Step 1: Install Brackets
1a. Mount brackets in desired
location using appropriate mounting
screws



Step 2: Mount Back Side Channels (follow steps for right and left back side channels)

- 2a. Decide where to drill holes. Align Back channel under corner of Fascia Bracket so that the side of the back channel is flush with the bracket.
- 2b. Mark mounting screw hole locations with a center punch
- 2c. Pre-drill holes in the side of channels using 1/16" metal drill bit
- 2d. Re-align the back channel and mount with the correct mounting screws











Step 3: Install Shade

4a. Insert Clutch side first by placing the hole in the middle of the core of the clutch into the tab on the middle of the bracket.

4b. Insert Idler by pulling shade up and around the flag on the middle of the idler end bracket (keeping the flag open), then insert the tab on the idler in the bracket (be sure to close flag using lever)

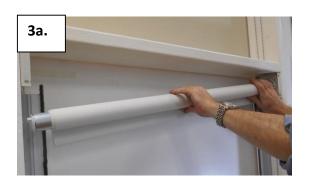



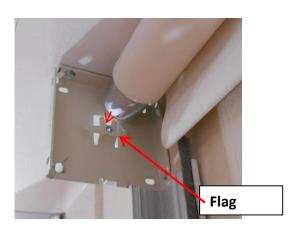




Step 4: Install Front Side Channel

5a. Snap front side channel by engaging lip of front side channel into the groove on the back side channel. Snap other side of front channel into place



Engage lip into groove

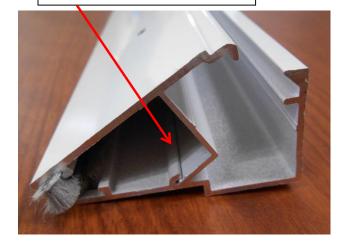

Snap into place



Step 5: Install Bottom Channel

- 5a. Place left side of bottom channel between the front and back side channels
- 5b. Slide the right side down in between the front and back side channels until the bottom closure is sitting on the window sill
- 5c. Mount bottom channel to window sill using correct mounting screws.







Step 6: Attach Fascia

6a. Engage the groove on the top of the fascia with the corner of the bracket (as shown).
6b. Once it is engaged, lower fascia and push until you feel a click and the groove in the bottom of the fascia clips into the bottom of the bracket.

Must leave about 1/8" clearance when installing the brackets to allow fascia groove to attach to the bracket







Step 8: Install Tension Device



Installed Shade

