
shade I matic

Blackout Instructions

4" Skyline Pocket Installation – Outside Mount

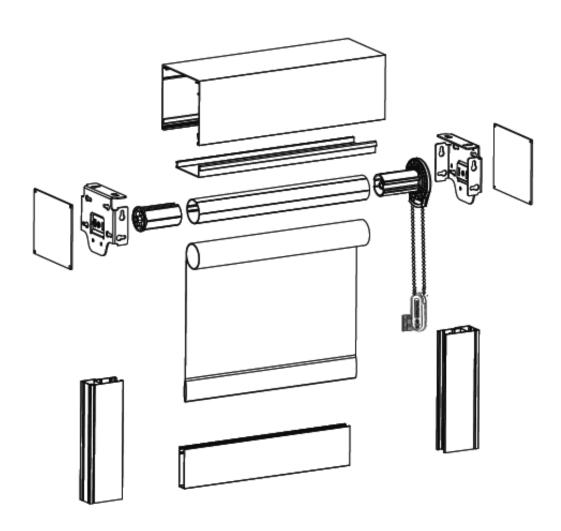

Components Needed	page.
Tools Needed	page -
System Diagram	page .
Instructions	
Step 1: Install Pocket	Page
Step 2: Install Brackets	
Step 3: Install End Plates	
Step 4: Mount Side Channels	
Step 5: Install Shade	Page
Step 6: Install Front Side Channel	Page
Step 7: Install Bottom Channel	Page
Step 8: Install Bottom Closure	Page 1
Step 9: Install Tension Device	Page 1
Child Safety	Page 1
Warranty	Page 1:

Blackout Instructions

4" Skyline Pocket Installation Instructions

Quantity	Description	Image
1	4" Roller shade assembled to tube with clutch and idler inserted.	
2	4" Skyline Fascia Brackets	
2	End Plates	
1	4″ Pocket	
1	Bottom Closure	
2	Front & Back Side Channels	
1	Bottom Channel	


Blackout Instructions

4" Skyline Pocket Installation Instructions

Tools Needed

Screwdriver/Power Drill
1/16" Metal Drill Bit
Screws
Hammer/Mallet
Measuring Tape
Level
Ladder
Chisel
Center Punch
Eye Protection
Gloves

System Diagram

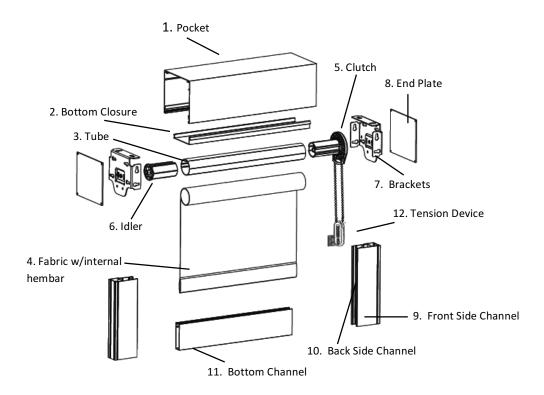

1	4" Pocket
2	Bottom Closure
3	Tube
4	Fabric with internal Hembar
5	Clutch
6	Idler
7	4" Skyline Fascia Brackets
8	4" End Plates
9	Front Side Channel
10	Back Side Channel
11	Bottom Channel
12	Tension Device

Blackout Instructions

4" Skyline Pocket Installation Outside Mount

Step 1: Install Pocket (Ceiling Mount Only)

- 1a. Mark mounting screw hole locations with a center punch
- 1b. Pre-drill mounting screw holes
- 1c. Mount pocket to wall or ceiling using the appropriate mounting screws







Step 2: Install Brackets

- 2a. Insert Bracket into pocket (may need mallet to gently tap bracket into place) until flush with end of pocket
- 2b. Secure bracket to pocket with supplied mounting screws OR:
- 2c. Secure bracket to pocket by staking pocket channel to bracket with a chisel.







Step 3: Install End Plates
3a. Insert End Plate screws into
manufacturers pre-drilled holes in end
plate and secure to pocket.



Step 4: Mount Back Side Channels (follow steps for right and left back side channels)

- 4a. Decide where to drill holes. Align Back channel under corner of pocket so that the side of the back channel is flush with the end plate and perpendicular to the pocket.
- 4b. Mark mounting screw hole locations with a center punch
- 4c. Pre-drill holes in the back of the side channel using 1/16" metal drill bit
- 4d. Re-align the back channel and mount with the correct mounting screws










Step 5: Install Shade

5a. Insert Clutch side first by engaging the hooks on the clutch into the rectangular holes in the bracket.

5b. Insert Idler by pushing in the spring loaded pin and sliding the idler up the bracket until the pin end engages into the hole in the center of the bracket





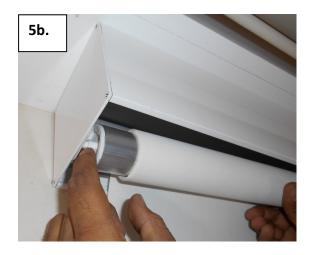



Step 6: Install Front Side Channel

6a. Snap front side channel by engaging lip of front side channel into the groove on the back side channel the snapping closed into place







Step 7: Install Bottom Channel


7a. Place left side of bottom channel between the front and back side channels

7b. Slide the right side down in between the front and back side channels until the bottom closure is at the bottom of the side channels

7c. While holding the bottom closure in place, drill a a screw hole using a 1/16" metal drill bit 3/8" from the bottom left hand corner of the side and bottom channel and install mounting screw through both channels.





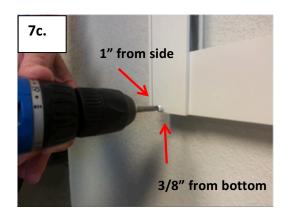




Step 8: Install Bottom Closure

- 8a. Insert bottom closure into pocket on an angle (as shown).
- 8b. Once it is aligned in shade, allow front of bottom closure to drop in place







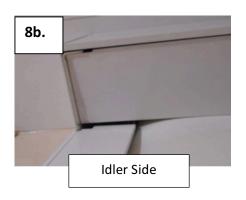



Step 9: Install Tension Device



SAFETY INFORMATION



Young children can STRANGLE in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and STRANGLE.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords. Children can climb furniture to get to cords.

FOR RESIDENTS IN CANDA:



To get more information, call 1-866-662-0666 or visit www.canada.ca/en/health-canada/services/home-safety/blind-cord-safety.html.





WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Blinds

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.