

## **Corner Window Measuring Guide**

## **Butt and Bi-Pass Shades**

When two shades butt against each other at a corner, one shade is the "butt" shade and the other is the "bi-pass" shade. Measure each shade separately using the procedures just described, and then subtract headrail depth from the butt shade to obtain the proper ordering width. With outside mounts, remember to allow for overlap on the sides and at the bottom. Refer to each product section for headrail depths.

Corner Shades (Measure Each Window Separately)

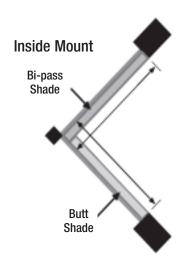

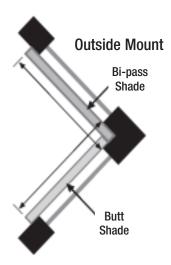

## When not using Butt and Bi-Pass Shades

Some products, such as Vertical cannot use butt and bi-pass. They are measured to simply meet in the corner.

- 1. Measure the width of both openings to the common corner.
- 2. Deduct the necessary depth of the blind deduct 3" for Vertical from the width of each measurement so that they will meet in the corner but not overlap.

**Note:** If spacer blocks or extension brackets will be used for extra on outside mounts, add the amount of extra clearance to the deduction.

3. Order the width less the deduction for each window.

