

Panel Track Brackets







(B)
Inside / Ceiling Mount
Used on 4 and 5
channel track
Bracket Clip
(Part #181-CA-00600)




(C)
Outside / Wall Mount
Used on all tracks
Installation Bracket
(Part #30-CA-06600)

Valance Brackets



Outside Mount 4" x 4" L-bracket for 3-1/4" dust cap (Part #BRKT-L4



Inside Mount Hex Head Screw 1-1/2" #8 (Part #02-70-9021)


How To Measure

Note: Projection of window handles / cranks could interfere with panel track panels . . . refer to "mounting depth requirements" on page PT-5.

Inside Mount (IB) Installation - Window

To find width: Measure the opening across the top where the headrail is to be installed from inside of jamb on left to inside of jamb on right. Round the measurement down to the nearest 1/8". Refer to mounting depth requirements.

To find height: Measure from the inside top of the opening on the left, at the centre, and on the right to the sill; round the measurement down to the nearest 1/8" and note the smallest dimension. Do not make any allowances: the factory will make all adjustments so the headrail will fit the opening properly and the panels will clear the sill by 1/2".




Inside Mount

Outside Mount (OB) Installation – Patio Door / Room Divider

To find width: Measure the width of the area to be covered at the place where the headrail will be installed to the nearest 1/8". Blind should overlap opening at least 4" on each side.

To find height: Measure the height of the area to be covered and round down to the nearest 1/8". Blind should extend at least 3" above opening or window moulding. For ceiling-to-floor installations, deduct 1/2" for proper clearance. Specifying OM measurement means the factory makes no allowances.

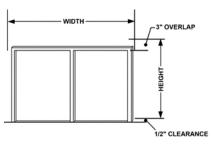

Caution: Panel Tracks installed on windows near wall or baseboard heaters must clear the heaters by 12" above.

Outside Mount (OB) Installation - Window

To find width: Measure the width of the area to be covered at the place where the headrail will be installed to the nearest 1/8". Blind should overlap opening at least 4" on each side to ensure privacy.

To calculate stack dimensions, refer to page 5. To find height: Measure the height of the area to be covered and round down to the nearest 1/8". Blind should extend at least 3" above and 3" below opening or window moulding.

