



Pin 1 = VCC
Pin 2 = Yan
Pin 3 = BTN
Pin 4 = GND
Pin 5 = Xan

Top facing contacts
Pin 1 Conn
=



Pin 5 Joycon

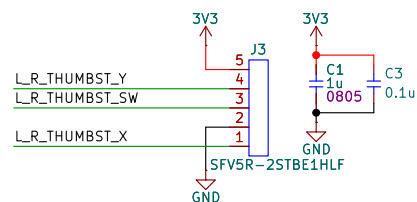

Speaker connector orientation




CMS-241535-078L65

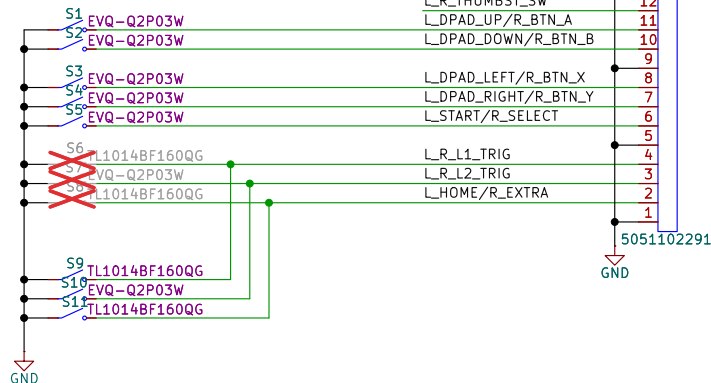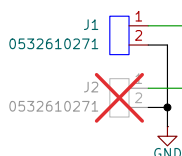

Pin #	Left Controller	Right Controller
1	3V3	3V3
2	3V3	3V3
3	3V3	3V3
4	LSPKOUT	RSPKOUT
5	LSPKOUT	RSPKOUT
6	GND	GND
7	NO CONNECT	NO CONNECT
8	L_THUMBST_X	R_THUMBST_X
9	L_THUMBST_Y	R_THUMBST_Y
10	GND	GND
11	L_THUMBST_SW	R_THUMBST_SW
12	L DPAD_UP	R_BTN_A
13	L DPAD_DOWN	R_BTN_B
14	GND	GND
15	L DPAD_LEFT	R_BTN_X
16	L DPAD_RIGHT	R_BTN_Y
17	L_START	R_SELECT
18	GND	GND
19	L L1_TRIG	R L1_TRIG
20	L L2_TRIG	R L2_TRIG
21	L_HOME	R_EXTRA
22	GND	GND

Pin 1 Carrier = Pin 22 Controller
Pinout from Carrier perspective

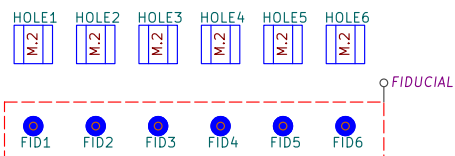

Designed by: Jean-Francois Bilodeau

P.Eng #6022173

203-1690 rue des quatre-saisons

Sherbrooke, Quebec, J1E0N2

Kicad Rev 10.0

Project: ConJoy [Console Joystick]

Sheet Title: ConJoy_KiCad.kicad_sch

Date: 2026-08-04

Drawn by: Jean-Francois Bilodeau

Approved by: Not applicable

BOM: ConJoy.1.00-0A_BOM

Logo

Sheet Size: A4

Sheet: 1 of 1

Status: In Review

Current Revision: 1.00-0A