SC1005 Digital Logic

Lab 1 equipment guide

Version A © 2024

Students are required to view this before doing lab 1

Safety guidelines

 For your own safety, <u>DO NOT</u> use opentoe footwear in the lab



 If you are unsure about using any electrical equipment, please check with the lab supervisors or technicians

Lab 1


- In Lab 1, you will be using wires to connect up logic integrated circuits (IC) on a breadboard (or prototype board).
- You will use switches to set the logic inputs to 0 or 1, and observer the logic outputs on the LEDs.

Helpful videos on YouTube

<u>Digital Electronics: Logic Gates - Integrated Circuits</u>
Part 1

Introduction to Breadboard (Protoboards), Part 1 of 2

Equipment setup

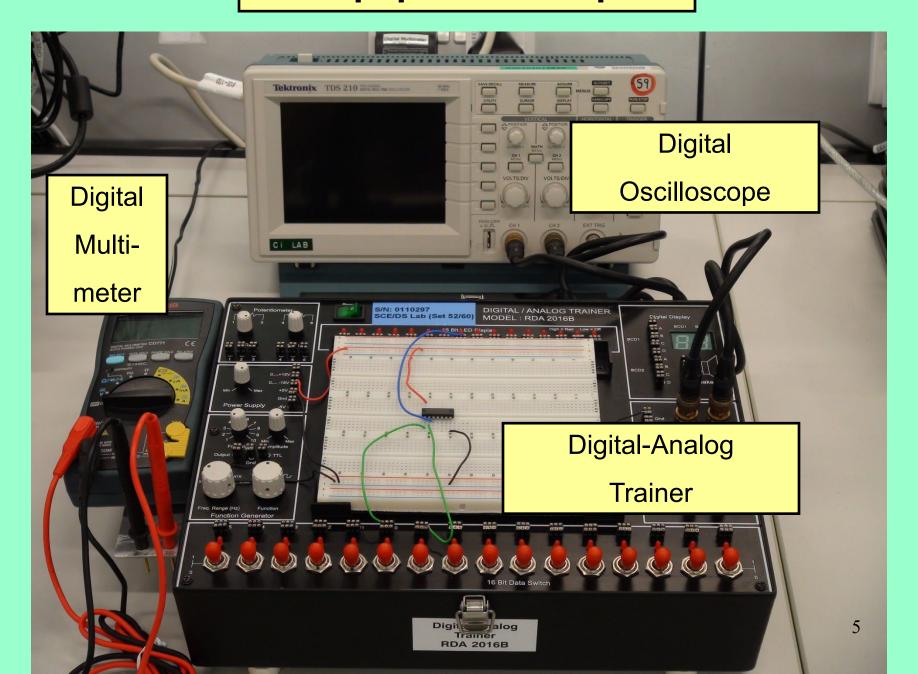

Digital multimeter

- The digital multimeter can be used to measure current, voltage and resistance
- You will mainly use it to measure <u>DC</u> voltage
- The reading is instantaneous and its usefulness is limited if the voltage level of a signal changes rapidly over time



Digital oscilloscope

- The oscilloscope is used to display the changes in voltage level of a signal over time
- A dual-trace oscilloscope can display two signals at the same time, one on each channel.
- Both the voltage scale and time scale can be adjusted to obtain a display that fits well on the screen – you should try it out during the experiment.

Tools:


wire stripper, wire cutter, IC puller



Always use the correct tool!

Wire cutter and wire stripper


- The wire cutter is used to cut a suitable length of wire
- The wire stripper is used to strip away a section of the rubber insulation on a wire
- Choose the correct hole size that suits the wire diameter – too large, the rubber will not be stripped; too small, the wire will break
- Strip away about 1cm of the insulation to expose the metal wire

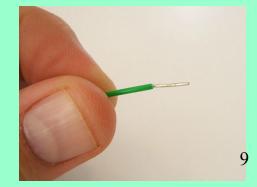

Pin numbers on an IC device

- Place device with printed part number (e.g. DM74LS138N) facing upright
- Look for small notch on the short edge of the device
- Pin number begins from 1 (bottom-left) and increment in anti-clockwise direction
- See next page


Reading pin numbers on an IC

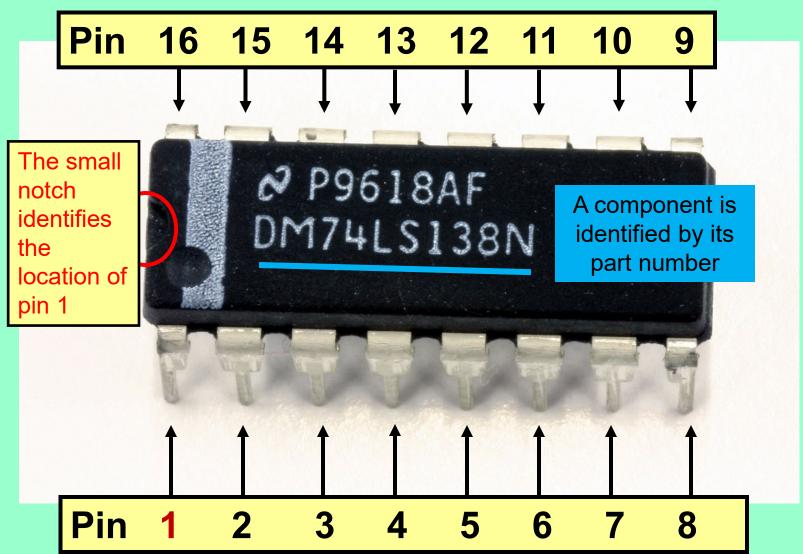

Reading Pin numbers and functions on an IC device from data sheet. E.g. 7432

If we use pins 1 and 2 as **inputs**, then **output** is at pin 3.

Vcc and GND must be connected to power supply and ground respectively.

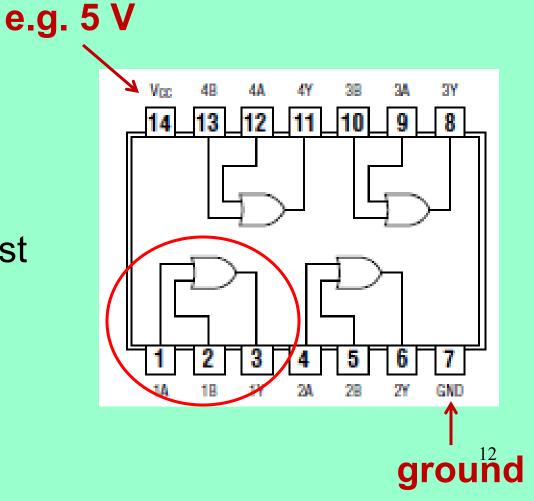

Circuit connection diagram


- One pair of Vcc-GND for each IC (not each gate on the same IC)
- Toggle switch provides logic inputs 0 & 1
- DMM (digital multimeter) measures voltage of logic output.
- LED (light emitting diode) lights up if logic output is 1
- Diagram is useful for making connections and troubleshooting when circuit does not work
- See next page

14 toggle output to switch A and LED toggle switch B **GND (0 V)**

Vcc (e.g. 5V)


Circuit connection diagram complete with pin numbers & labels

Digital-Analog Trainer

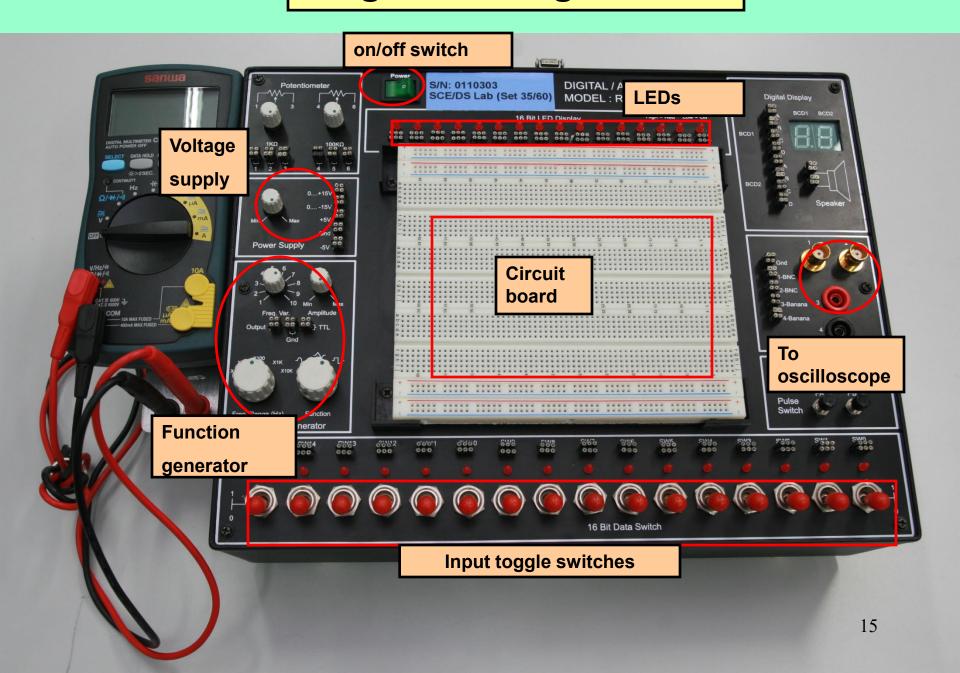


Digital-Analog Trainer

- Voltage supply provides electrical power to the ICs
- Toggle switches provide logic inputs 0 & 1 to the circuit
- LED (light emitting diode) lights up if the logic output is 1
- Function generator provides time-varying logic input to the circuit
- Oscilloscope displays the time-varying logic output

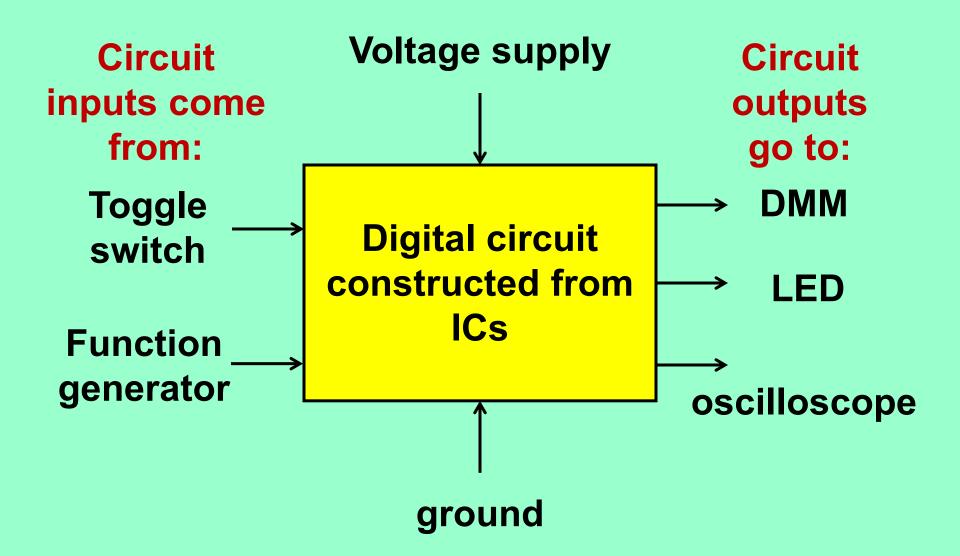

Digital-Analog Trainer – Power Supply

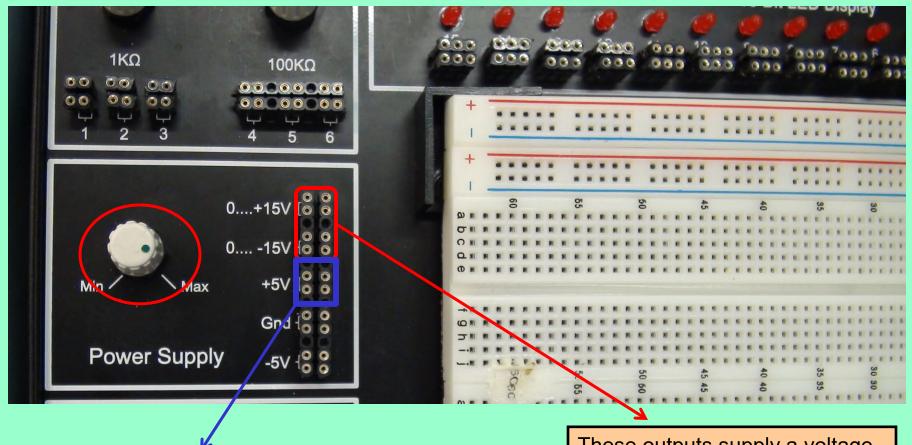

These outputs supply a voltage that is fixed at 5 volts. You will use these in the experiment.

These outputs supply a voltage that can be adjusted between 0 to 15 volts using the knob. You will not use these in the experiment.

Digital-Analog Trainer – Function Generator

This knob adjusts the frequency of the waveform, e.g. 700 Hz, 800Hz, etc.

> e.g. 2 X10=20Hz 8 X100=800Hz 5 X1K=5KHz

Min **Amplitude** Freq. Var. Output OOOOO} TTL X100 X1K X10 **X10K Function** Freq. Range (Hz) **Function Generator**

These gives a square wave (adjustable frequency) within the TTL voltage range.
You will use this in the experiment.


This knob multiplies the frequency by 10, 100 or 1000 times, etc.


Digital-Analog Trainer – Function Generator



This knob selects the type of waveform: sine, triangular or square.


Bread board (or circuit board)

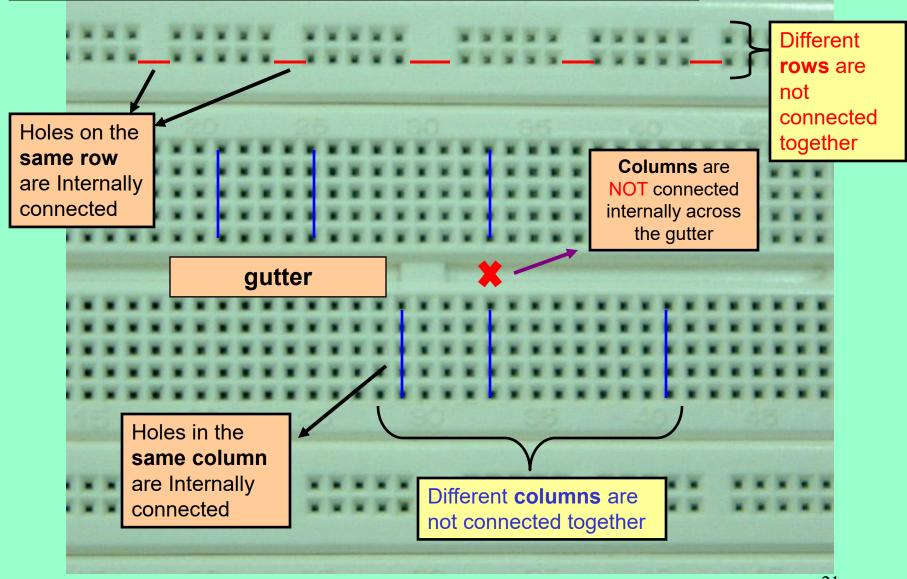

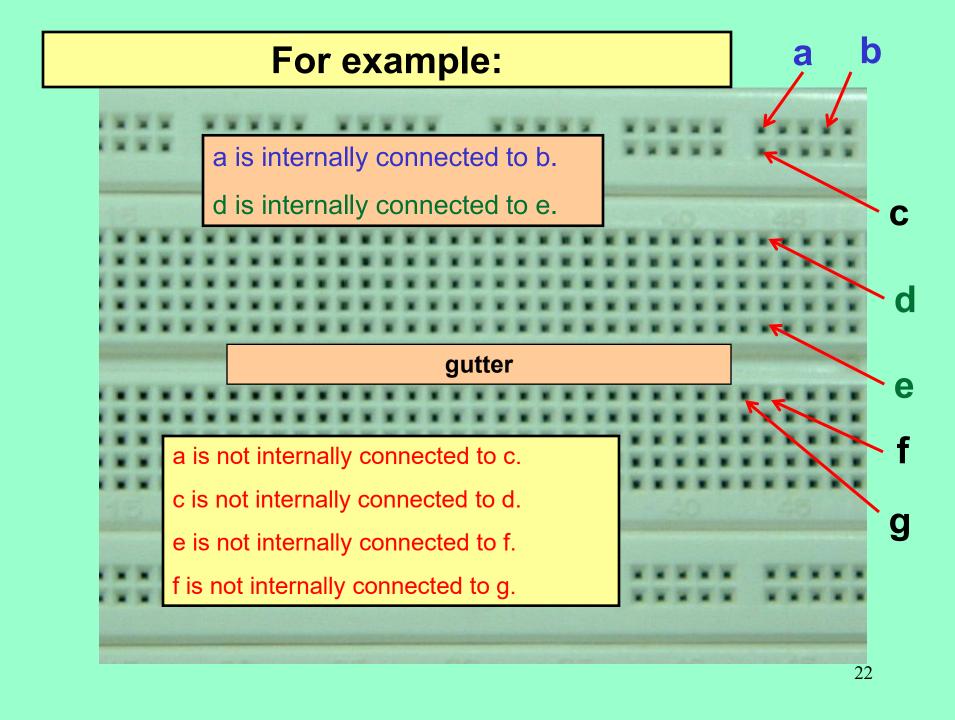



Rows and columns on a bread board

- Holes on the same row are internally connected to each other
- One row may be used for Vcc, the other row may be used for GND.
- Holes on the same column are internally connected to each other (but not across the gutter)
- Neighbouring columns (or rows) are not connected

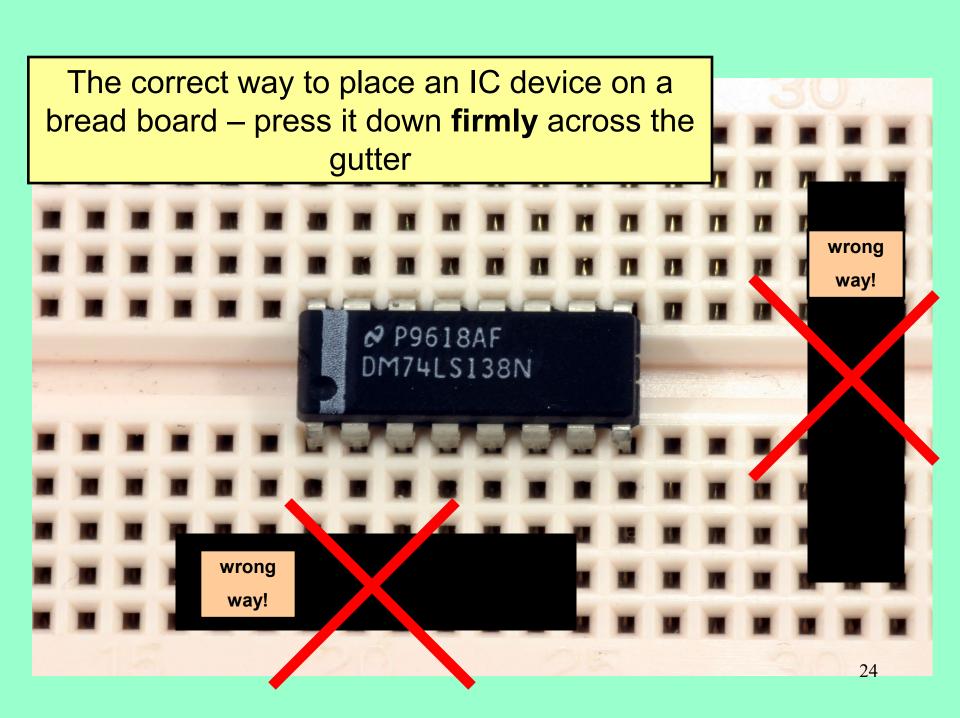


Use wires to connect the left and right rows

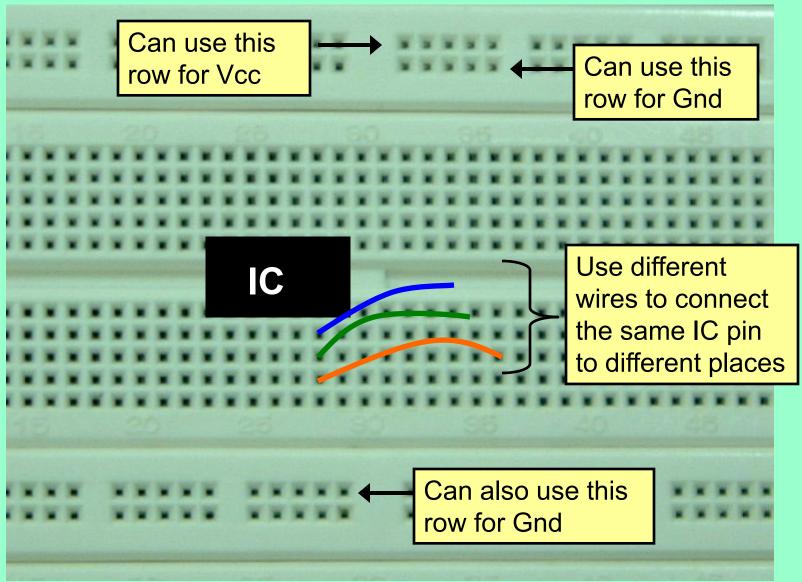

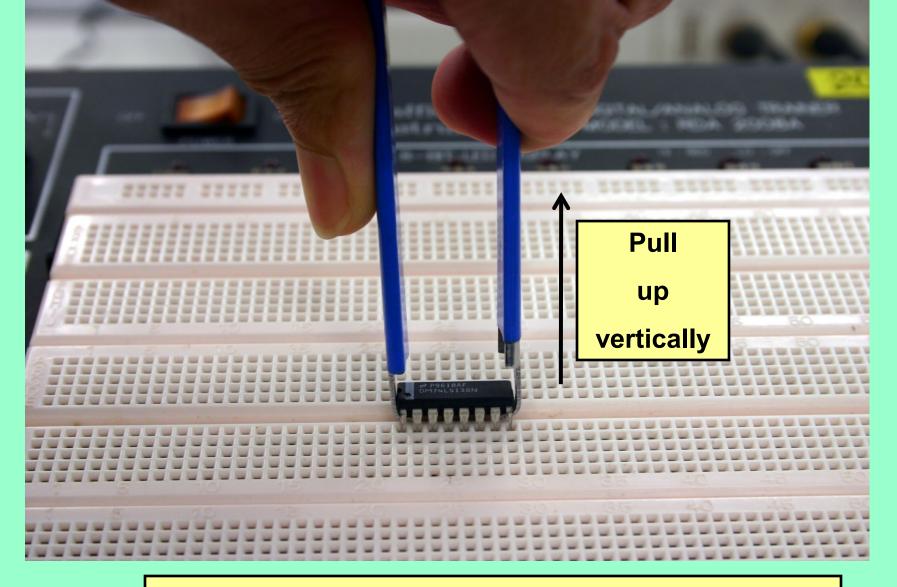


The correct way to remove an IC device from the bread board

Otherwise, you'll get this

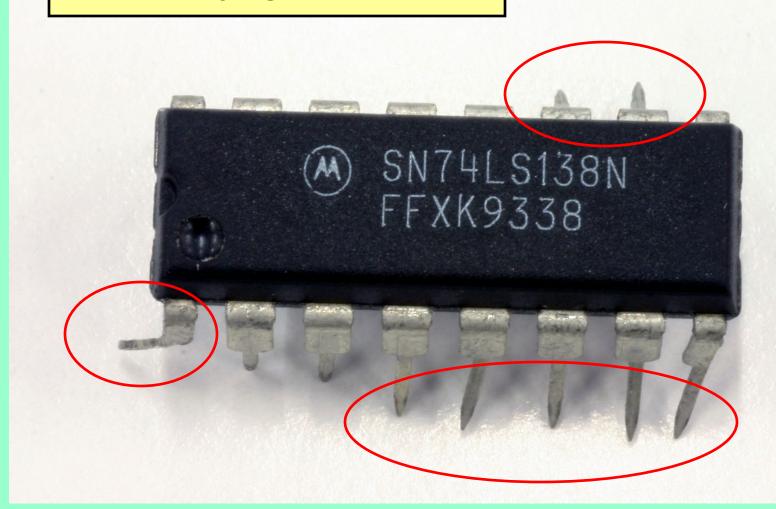


Set DMM (digital multimedter) to measure voltage

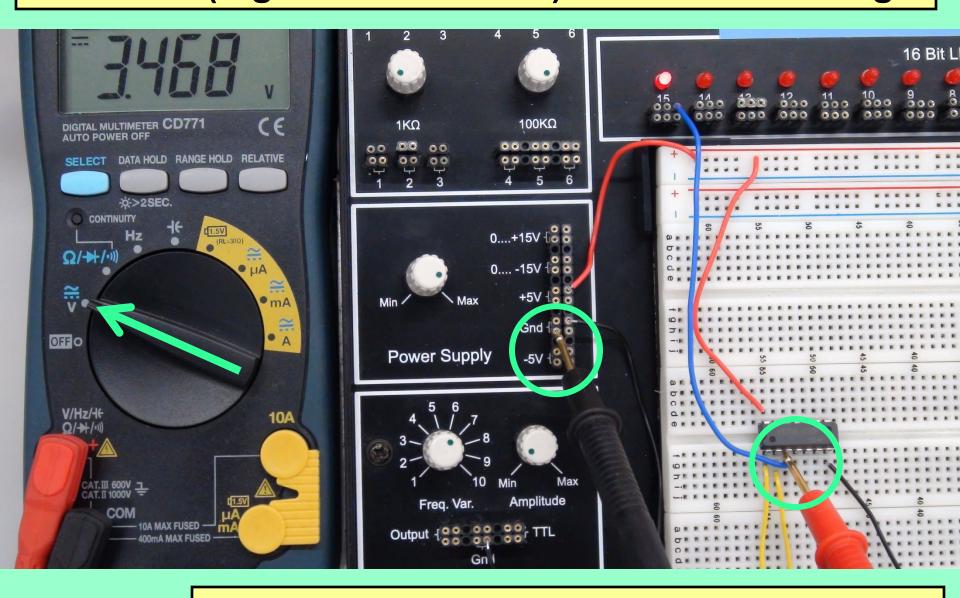

Use the metal probes to measure voltage

A close-up view of the DMM probes

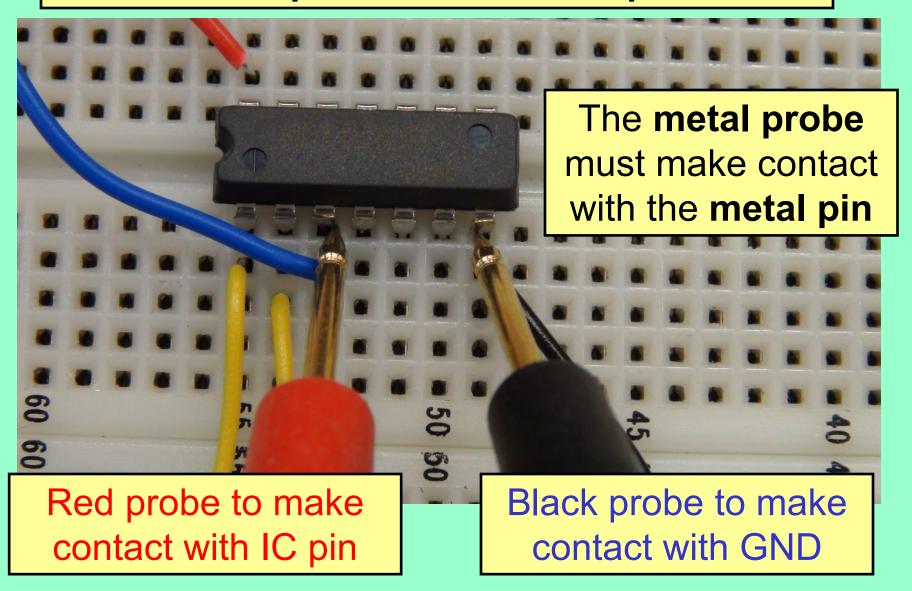


Can the pins on an IC be connected together?

pins	Vcc	Gnd	input	output
Vcc	Yes	No	Yes	No
Gnd		Yes	Yes	No
input			Yes	Yes
output				No

A logic output should be determined by its input(s), not by externally connecting it to something else.

Periodic square wave and frequency

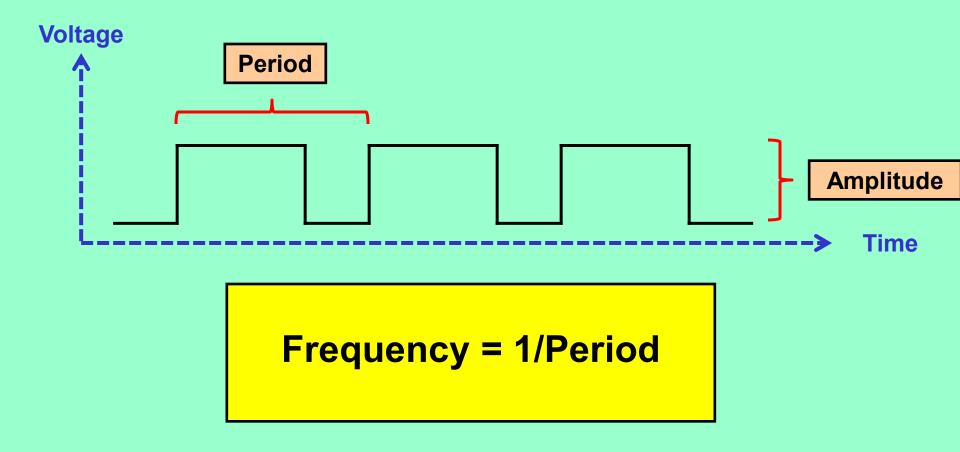

e.g. if period = 1s, then frequency = 1Hz if period = 0.5 ms, then frequency = 2kHz

Digital oscilloscope

Refer to oscilloscope guide