
ESP32 Pinout Reference: Which GPIO pins should you use?


The ESP32 chip comes with 48 pins with multiple functions. Not all pins are exposed in all ESP32 development boards, and there are some pins that cannot be used.

There are many questions on how to use the ESP32 GPIOs. What pins should you use? What pins should you avoid using in your projects? This post aims to be a simple and easy to follow reference guide for the ESP32 GPIOs.

The figure below illustrates the ESP-WROOM-32 pinout. You can use it as a reference if you're using an **ESP32 bare chip** to build a custom board:

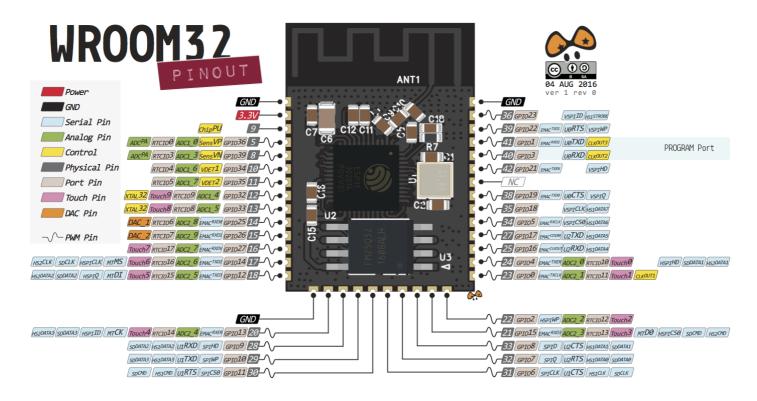

Note: not all GPIOs are accessible in all development boards, but each specific GPIO works in the same way regardless of the development board you're using. If you're just getting started with the ESP32, we recommend reading our guide: <u>Getting Started with the ESP32 Development Board</u>.

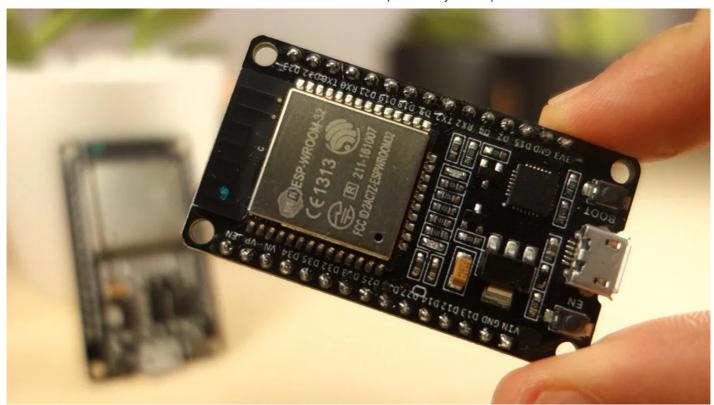

ESP32 Peripherals

The ESP32 peripherals include:


- 18 Analog-to-Digital Converter (ADC) channels
- 3 SPI interfaces
- 3 UART interfaces
- 2 I2C interfaces
- 16 PWM output channels
- 2 Digital-to-Analog Converters (DAC)
- 2 I2S interfaces
- 10 Capacitive sensing GPIOs

The ADC (analog to digital converter) and DAC (digital to analog converter) features are assigned to specific static pins. However, you can decide which pins are UART, I2C, SPI, PWM, etc – you just need to assign them in the code. This is possible due to the ESP32 chip's multiplexing feature.

Although you can define the pins properties on the software, there are pins assigned by default as shown in the following figure (this is an example for the ESP32 DEVKIT V1 DOIT board with 36 pins – the pin location can change depending on the manufacturer).

ESP32 DEVKIT V1 – DOIT

version with 36 GPIOs

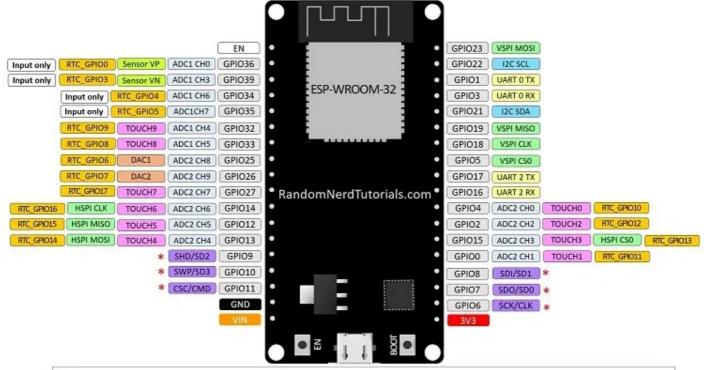

^{*} Pins SCK/CLK, SDO/SD0, SDI/SD1, SHD/SD2, SWP/SD3 and SCS/CMD, namely, GPIO6 to GPIO11 are connected to the integrated SPI flash integrated on ESP-WROOM-32 and are not recommended for other uses.

Additionally, there are pins with specific features that make them suitable or not for a specific project. The following table shows what pins are best to use as inputs, outputs and which ones you need to be cautious.

The pins highlighted in green are OK to use. The ones highlighted in yellow are OK to use, but you need to pay attention because they may have unexpected behavior mainly at boot. The pins highlighted in red are not recommended to use as inputs or outputs.

GPIO	Input	Output	Notes		
0	pulled up	OK	outputs PWM signal at boot		
1	TX pin	OK	debug output at boot		
2	OK	OK	connected to on-board LED		
3	OK	RX pin	HIGH at boot		
4	OK	OK			
5	OK	OK	outputs PWM signal at boot		
6	X	X	connected to the integrated SPI flash		
7	X	X	connected to the integrated SPI flash		

25/11/2020		ESP32 Pinout F	ESP32 Pinout Reference: Which GPIO pins should you use? Random Nerd Tutorials		
8	X	X	connected to the integrated SPI flash		
9	X	X	connected to the integrated SPI flash		
10	X	X	connected to the integrated SPI flash		
11	X	X	connected to the integrated SPI flash		
12	OK	OK	boot fail if pulled high		
13	OK	OK			
14	OK	OK	outputs PWM signal at boot		
15	OK	OK	outputs PWM signal at boot		
16	OK	OK			
17	OK	OK			
18	OK	OK			
19	OK	OK			
21	OK	OK			
22	OK	OK			
23	OK	OK			
25	OK	OK			
26	OK	OK			
27	OK	OK			
32	OK	OK			
33	OK	OK			
34	OK		input only		
35	OK		input only		
36	OK		input only		
39	OK		input only		

Continue reading for a more detail and in-depth analysis of the ESP32 GPIOs and its functions.

Input only pins

GPIOs 34 to 39 are GPIs – input only pins. These pins don't have internal pull-ups or pull-down resistors. They can't be used as outputs, so use these pins only as inputs:

- GPIO 34
- GPIO 35
- GPIO 36
- GPIO 39

SPI flash integrated on the ESP-WROOM-32

GPIO 6 to GPIO 11 are exposed in some ESP32 development boards. However, these pins are connected to the integrated SPI flash on the ESP-WROOM-32 chip and are not recommended for other uses. So, don't use these pins in your projects:

- GPIO 6 (SCK/CLK)
- GPIO 7 (SDO/SD0)
- GPIO 8 (SDI/SD1)
- GPIO 9 (SHD/SD2)
- GPIO 10 (SWP/SD3)
- GPIO 11 (CSC/CMD)

Capacitive touch GPIOs

The ESP32 has 10 internal capacitive touch sensors. These can sense variations in anything that holds an electrical charge, like the human skin. So they can detect variations induced when touching the GPIOs with a finger. These pins can be easily integrated into capacitive pads, and replace mechanical buttons. The capacitive touch pins can also be used to wake up the ESP32 from deep sleep.

Those internal touch sensors are connected to these GPIOs:

- T0 (GPIO 4)
- T1 (GPIO 0)
- T2 (GPIO 2)
- T3 (GPIO 15)
- T4 (GPIO 13)
- T5 (GPIO 12)
- T6 (GPIO 14)T7 (GPIO 27)
- T8 (GPIO 33)
- T9 (GPIO 32)

Learn how to use the touch pins with Arduino IDE: ESP32 Touch Pins with Arduino IDE

Analog to Digital Converter (ADC)

The ESP32 has 18 x 12 bits ADC input channels (while the ESP8266 only has 1x 10 bits ADC). These are the GPIOs that can be used as ADC and respective channels:

- ADC1 CH0 (GPIO 36)
- ADC1 CH1 (GPIO 37)
- ADC1 CH2 (GPIO 38)
- ADC1 CH3 (GPIO 39)
- ADC1 CH4 (GPIO 32)
- ADC1 CH5 (GPIO 33)
- ADC1 CH6 (GPIO 34)
- ADC1 CH7 (GPIO 35)
- ADC2 CH0 (GPIO 4)
- ADC2 CH1 (GPIO 0)
- ADC2 CH2 (GPIO 2)
- ADC2 CH3 (GPIO 15)
- ADC2 CH4 (GPIO 13)
- * ADOZ_OH (OHO 10)
- ADC2_CH5 (GPIO 12)
- ADC2_CH6 (GPIO 14)
- ADC2_CH7 (GPIO 27)
- ADC2_CH8 (GPIO 25)
- ADC2 CH9 (GPIO 26)


Learn how to use the ESP32 ADC pins:

- ESP32 ADC Pins with Arduino IDE
- ESP32 ADC Pins with MicroPython

Note: ADC2 pins cannot be used when Wi-Fi is used. So, if you're using Wi-Fi and you're having trouble getting the value from an ADC2 GPIO, you may consider using an ADC1 GPIO instead, that should solve your problem.

The ADC input channels have a 12 bit resolution. This means that you can get analog readings ranging from 0 to 4095, in which 0 corresponds to 0V and 4095 to 3.3V. You also have the ability to set the resolution of your channels on the code, as well as the ADC range.

The ESP32 ADC pins don't have a linear behavior. You'll probably won't be able to distinguish between 0 and 0.1V, or between 3.2 and 3.3V. You need to keep that in mind when using the ADC pins. You'll get a behavior similar to the one shown in the following figure.

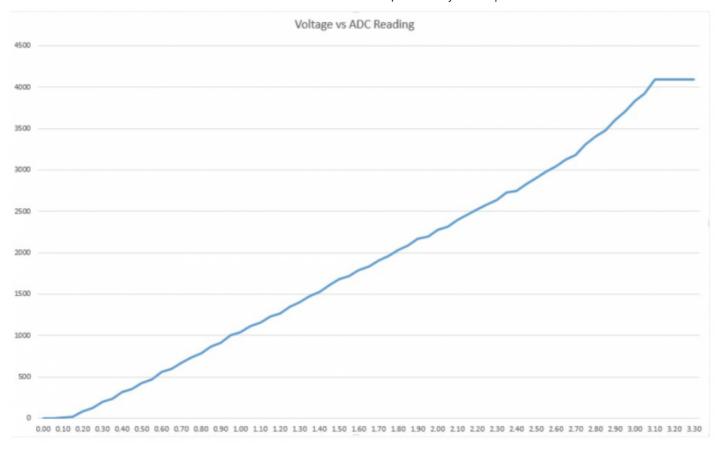

View source

Digital to Analog Converter (DAC)

There are 2 x 8 bits DAC channels on the ESP32 to convert digital signals into analog voltage signal outputs. These are the DAC channels:

- DAC1 (GPIO25)
- DAC2 (GPIO26)

RTC GPIOs

There is RTC GPIO support on the ESP32. The GPIOs routed to the RTC low-power subsystem can be used when the ESP32 is in deep sleep. These RTC GPIOs can be used to wake up the ESP32 from deep sleep when the Ultra Low Power (ULP) coprocessor is running. The following GPIOs can be used as an external wake up source.

- RTC_GPIO0 (GPIO36)
- RTC GPIO3 (GPIO39)
- RTC GPIO4 (GPIO34)
- RTC_GPIO5 (GPIO35)
- RTC GPIO6 (GPIO25)
- RTC GPIO7 (GPIO26)
- RTC GPIO8 (GPIO33)
- RTC_GPIO9 (GPIO32)

- RTC GPIO10 (GPIO4)
- RTC GPIO11 (GPIO0)
- RTC GPIO12 (GPIO2)
- RTC_GPIO13 (GPIO15)
- RTC_GPIO14 (GPIO13)
- RTC_GPIO15 (GPIO12)
- RTC GPIO16 (GPIO14)
- RTC_GPIO17 (GPIO27)

Learn how to use the RTC GPIOs to wake up the ESP32 from deep sleep:ESP32 Deep Sleep with Arduino IDE and Wake Up Sources

PWM

The ESP32 LED PWM controller has 16 independent channels that can be configured to generate PWM signals with different properties. All pins that can act as outputs can be used as PWM pins (GPIOs 34 to 39 can't generate PWM).

To set a PWM signal, you need to define these parameters in the code:

- Signal's frequency;
- Duty cycle;
- PWM channel;
- GPIO where you want to output the signal.

Learn how to use ESP32 PWM with Arduino IDE: ESP32 PWM with Arduino IDE

I2C

The ESP32 has two I2C channels and any pin can be set as SDA or SCL. When using the ESP32 with the Arduino IDE, the default I2C pins are:

- GPIO 21 (SDA)
- GPIO 22 (SCL)

If you want to use other pins, when using the wire library, you just need to call:

```
Wire.begin(SDA, SCL);
```

Learn more about I2C communication protocol with the ESP32 using Arduino IDE: ESP32 I2C Communication (Set Pins, Multiple Bus Interfaces and Peripherals)

SPI

By default, the pin mapping for SPI is:

SPI	MOSI	MISO	CLK	cs
VSPI	GPIO 23	GPIO 19	GPIO 18	GPIO 5
HSPI	GPIO 13	GPIO 12	GPIO 14	GPIO 15

Interrupts

All GPIOs can be configured as interrupts.

Learn how to use interrupts with the ESP32:

- ESP32 interrupts with Arduino IDE
- ESP32 interrupts with MicroPython

Strapping Pins

The ESP32 chip has the following strapping pins:

- GPIO 0
- GPIO 2
- GPIO 4
- GPIO 5 (must be HIGH during boot)
- GPIO 12 (must be LOW during boot)
- GPIO 15 (must be HIGH during boot)

These are used to put the ESP32 into bootloader or flashing mode. On most development boards with built-in USB/Serial, you don't need to worry about the state of these pins. The board puts the pins in the right state for flashing or boot mode. More information on the ESP32 Boot Mode Selection can be found here.

However, if you have peripherals connected to those pins, you may have trouble trying to upload new code, flashing the ESP32 with new firmware or resetting the board. If you have some peripherals connected to the strapping pins and you are getting trouble uploading code or flashing the ESP32, it may be because those peripherals are preventing the ESP32 to enter the right mode. Read the Boot Mode Selection documentation to guide you in the right direction. After resetting, flashing, or booting, those pins work as expected.

Pins HIGH at Boot

Some GPIOs change its state to HIGH or output PWM signals at boot or reset. This means that if you have outputs connected to these GPIOs you may get unexpected results when the ESP32 resets or boots.

GPIO 1

- GPIO 3
- GPIO 5
- GPIO 6 to GPIO 11 (connected to the ESP32 integrated SPI flash memory not recommended to use).
- GPIO 14
- GPIO 15

Enable (EN)

Enable (EN) is the 3.3V regulator's enable pin. It's pulled up, so connect to ground to disable the 3.3V regulator. This means that you can use this pin connected to a pushbutton to restart your ESP32, for example.

GPIO current drawn

The absolute maximum current drawn per GPIO is 40mA according to the "Recommended Operating Conditions" section in the ESP32 datasheet.

ESP32 Built-In Hall Effect Sensor

The ESP32 also features a built-in hall effect sensor that detects changes in the magnetic field in its surroundings.

Wrapping Up

We hope you've found this reference guide for the ESP32 GPIOs useful. If you have more tips about the ESP32 GPIOs, please share by writing a comment down below.

If you're just getting started with the ESP32, we have some great content to get started:

- Learn ESP32 with Arduino IDE
- Getting Started with the ESP32 Development Board
- 20+ ESP32 Projects and Tutorials
- ESP32 Web Server Tutorial
- ESP32 vs ESP8266 Pros and Cons

Thanks for reading.