

Figure 4-25 Selecting at least one adapter type

- 2. Click the ellipses (...) box.
- 3. The tool displays a list of available and compatible card types for the CHPID as shown in Figure 4-26. Select an adapter type and click **OK**.
- 4. In the Adapter Type Summary tab, observe that the Used and Available totals change.

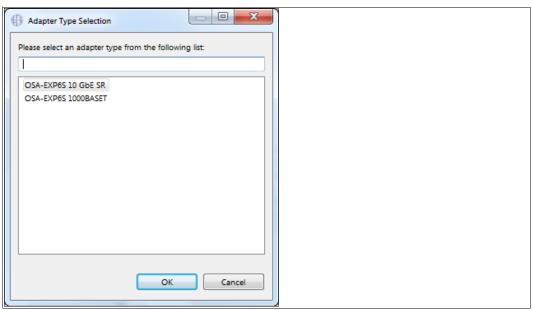


Figure 4-26 Adapter Type Selection

4.7.4 Reset "Required hardware for type IOCP_type not available"

The CHPID Mapping Tool found no hardware for the specified IOCP type, as in this example: Required hardware for type CS5 not available.

You must change IOCP file or obtain more hardware.