
13. Fold left stabilizer panels, then right stabilizer panels over slider.

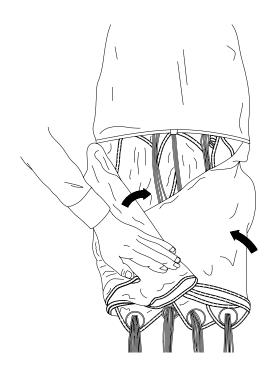

14. Place hand on canopy approximately 10-inches from suspension lines. Grasp canopy at suspension lines in preparation for making the first fold.

